

Guía de funcionamiento de la pantalla H2D

Esta guía tiene como objetivo presentar los botones de pantalla y las funciones operativas de la impresora H2D.


H2D

La siguiente sección cubre la parte de impresión 3D de la impresora 3D H2D.


Si tiene una impresora H2DL, puede obtener más información sobre el **módulo láser H2D** haciendo [clic aquí](#) o sobre el **módulo de corte H2D** haciendo [clic aquí](#).

Página principal

En el lado izquierdo de la página de inicio hay una barra de menú en pantalla que incluye **Página de inicio** , **Controles** , **Filamentos** , **Configuraciones** y **HMS** ; en el lado derecho están **Archivos de impresión**, **Temperatura de la boquilla**, **Filamento**, **Configuraciones de red** y **HMS**.

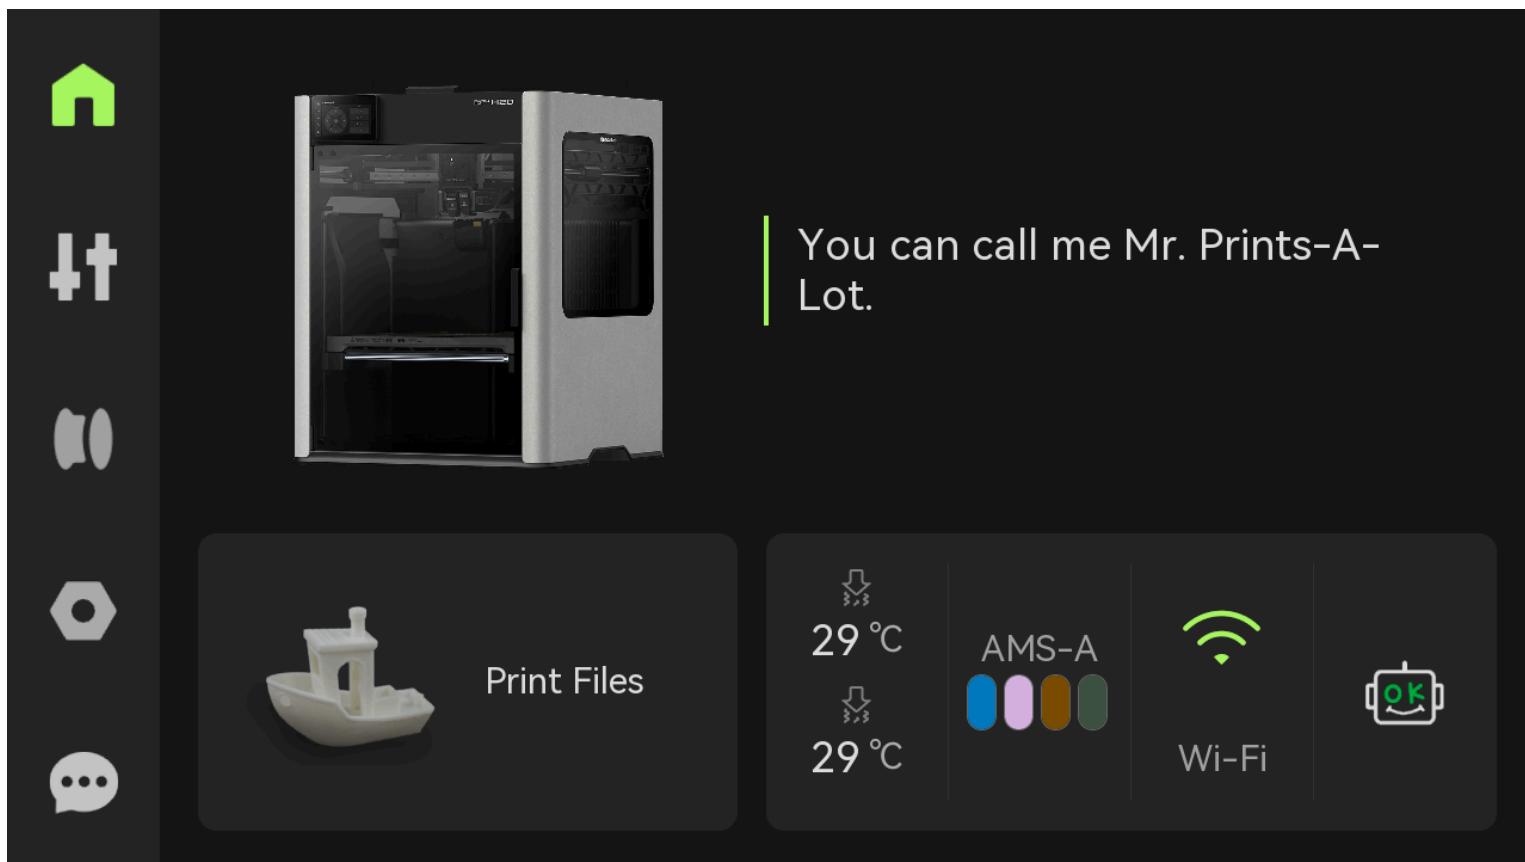

Controles

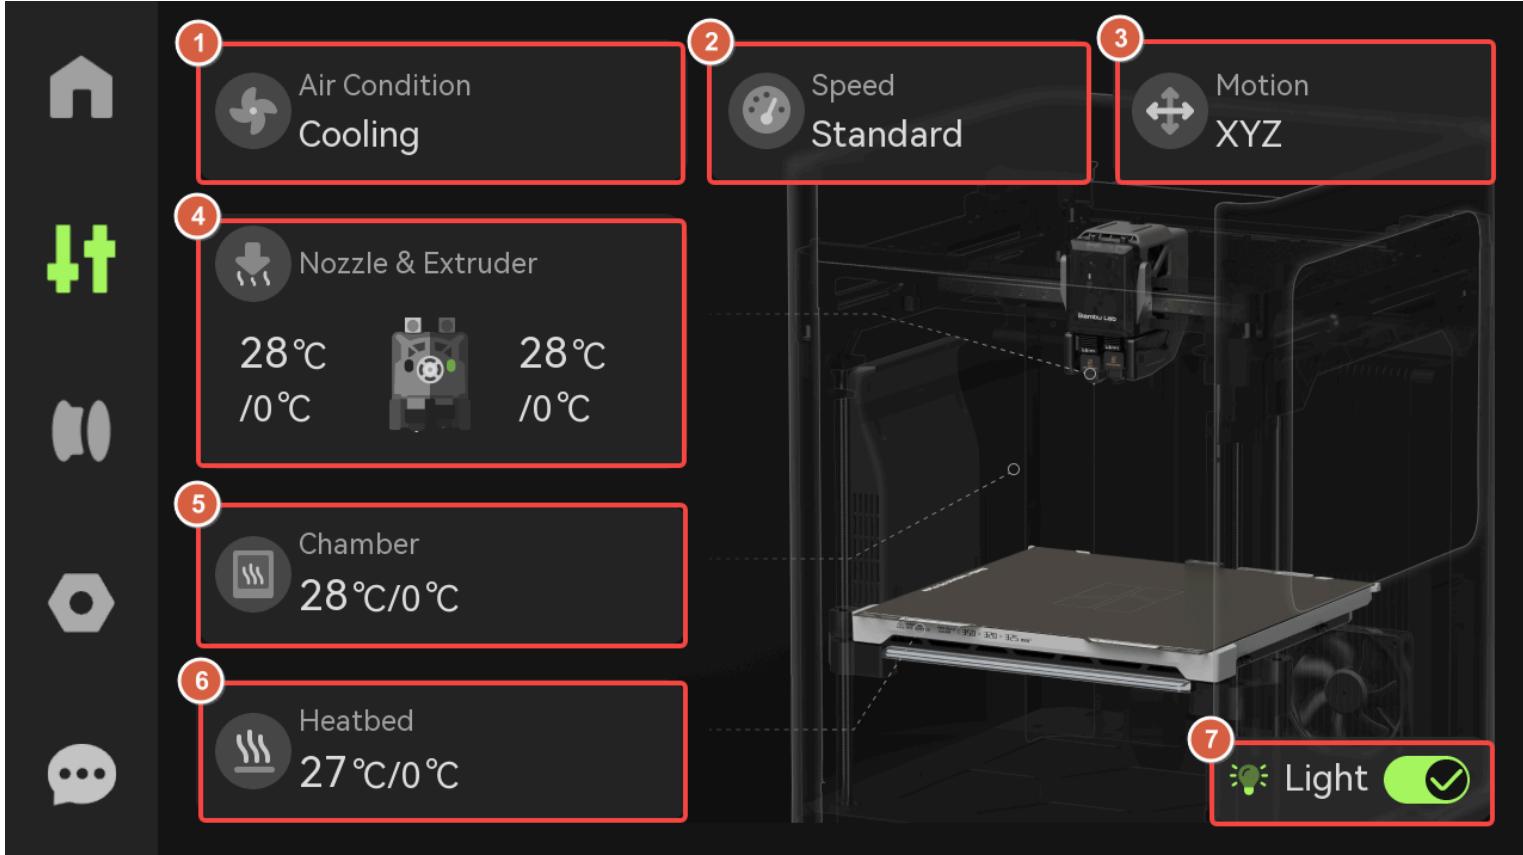

1. Aire acondicionado

Dependiendo de los filamentos podrás elegir el sistema de aire acondicionado adecuado.

- **Modo de enfriamiento** : el modo de enfriamiento es adecuado para imprimir filamentos con **baja resistencia al calor** , como PLA/TPU; el ventilador de circulación de calor de la cámara permanece apagado en este modo.



- **Modo de calentamiento:** Este modo es adecuado para imprimir filamentos ABS/ASA/PC/PA y otros con **alta resistencia al calor** . Al calentarse la cámara, el sistema cambia automáticamente al modo de calentamiento. En este modo, el ventilador de circulación de calor de la cámara se activa automáticamente y el ventilador de refrigeración de la pieza auxiliar permanece apagado.

< Air Condition: Modes and Fans



Cooling


Heating

Part >

0%

Aux >

OFF

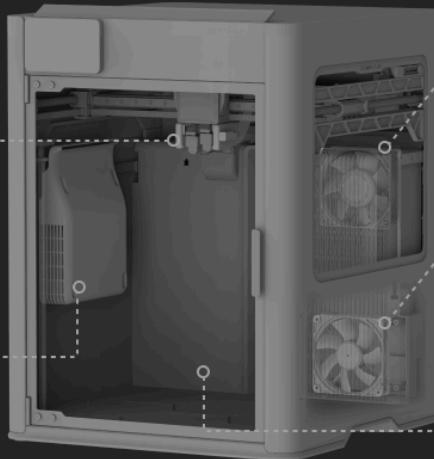

Exhaust >

OFF

Heat >

Auto

Chamber >

28°C/0°C

- ▶ **Ventilador de refrigeración de piezas:** Se instala en el cabezal de la herramienta y se utiliza para garantizar una refrigeración adecuada de las capas impresas durante el proceso de impresión. Ayuda a enfriar rápidamente el material durante la extrusión, permitiendo que cada capa se solidifique y mantenga su forma antes de depositar la siguiente.

< Part Cooling Fan

Cool


0%

0%

0%

Located on the Toolhead, for part cooling.


- ▶ **Ventilador de enfriamiento de piezas auxiliares:** se instala en el lado izquierdo de la cámara y proporciona una mejor condición de enfriamiento para la impresión a alta velocidad.

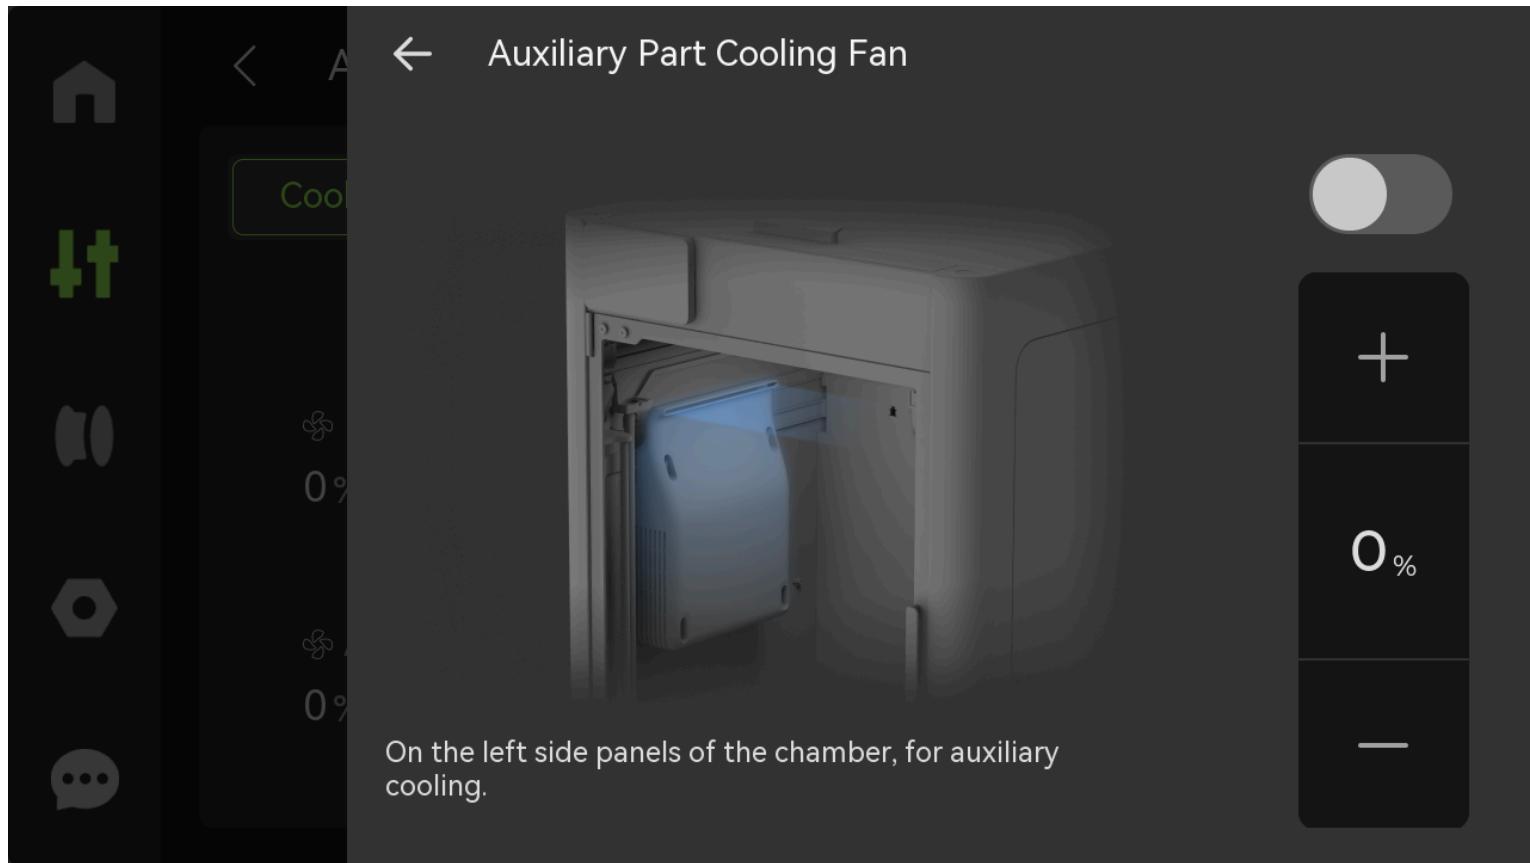


- ▶ **Ventilador de extracción de la cámara:** Cuando la cámara se enfria, el aire acondicionado cambia al modo de refrigeración. La velocidad del ventilador de extracción de la cámara aumenta a medida que la temperatura de la cámara aumenta durante la impresión. Cuando la temperatura de la cámara baja, el ventilador de extracción de la cámara reduce su velocidad al 30 %.



- ▶ **Chamber Heat Circulation Fan:** During chamber heating, the printer will switch to heating mode. After setting the chamber temperature, the chamber heater (composed of PTC and the chamber heat circulation fan) will begin to operate, with the PTC heating at full power and the fan running at full speed. Once the chamber temperature reaches the target value, the fan speed remains constant while the PTC power decreases to maintain a stable temperature.

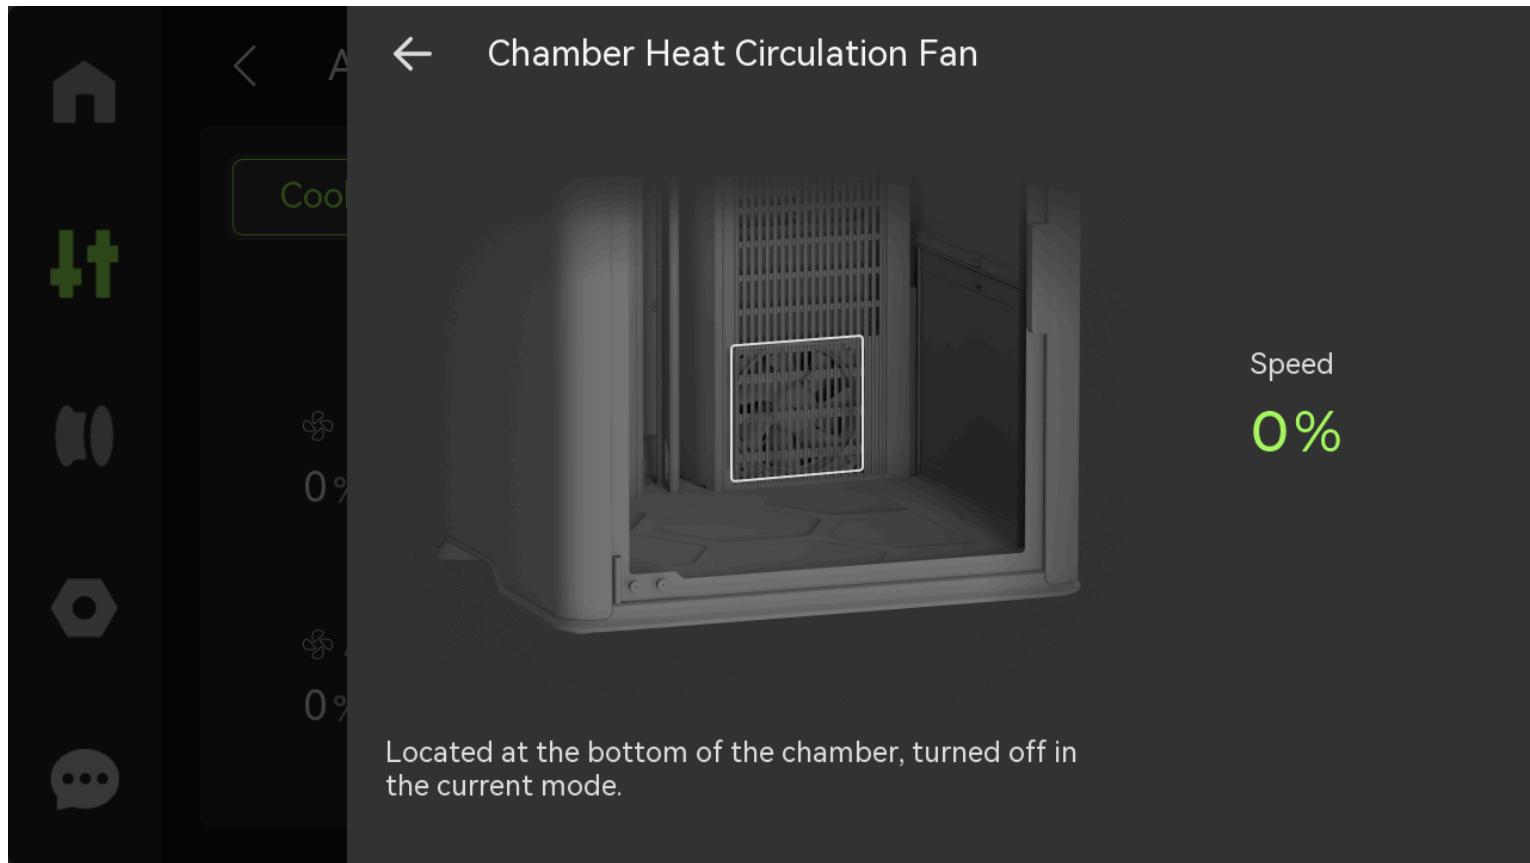

- ▶ **Chamber Temperature:** Set the appropriate chamber temperature according to the different filaments. Low chamber temperature is suitable for printing filaments such as PLA and PETG; high chamber temperature is suitable for printing warp-prone filaments such as ABS.

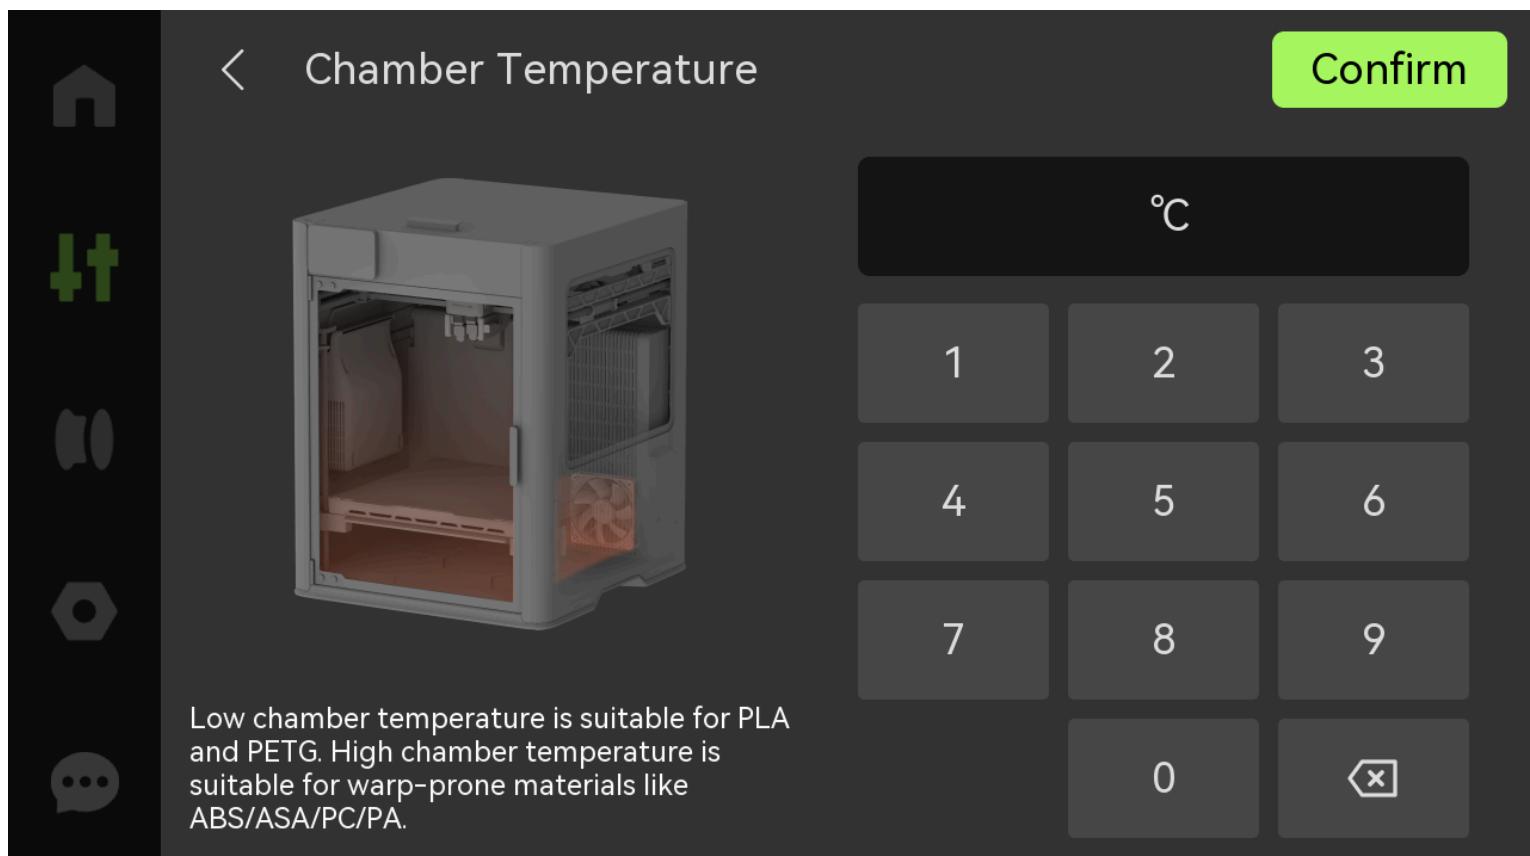

2. Speed

Set the printing speed mode.

- ▶ **Ludicrous:** 166% of normal print speed and acceleration
- ▶ **Sport:** 124% of normal print speed and acceleration

- ▶ **Standard:** normal print speed and acceleration
- ▶ **Silent:** 50% of normal print speed and acceleration

Speed

Ludicrous (166%)

Sport (124%)

Standard (100%)

Silent (50%)

It is recommended to use Standard Mode. Sport Mode and Ludicrous Mode can increase the print speed but may affect quality.

3. Motion

- ▶ **Toolhead:** Click +1 or +10 to control the toolhead movement in the X-axis and Y-axis.
- ▶ **Heatbed:** Click the 1 or 10 move button to raise or lower the heatbed.

Motion: XYZ

Tool Head

Heatbed

10


1

1


10

4. Nozzle & Extruder


Nozzle & Extruder

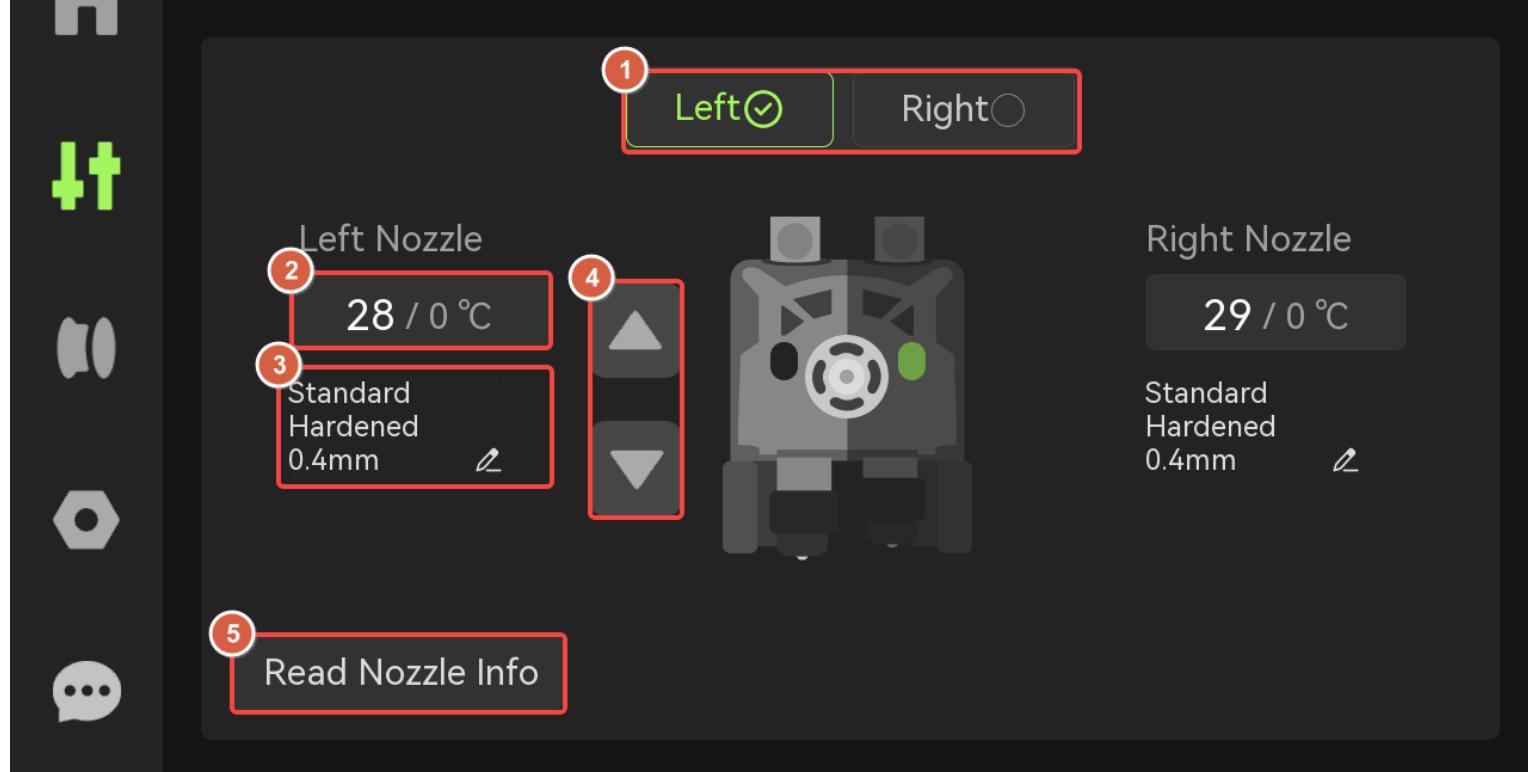


1. **Left/Right:** Click the left/right nozzle to switch the extruder and switch the left and right hotend up and down.

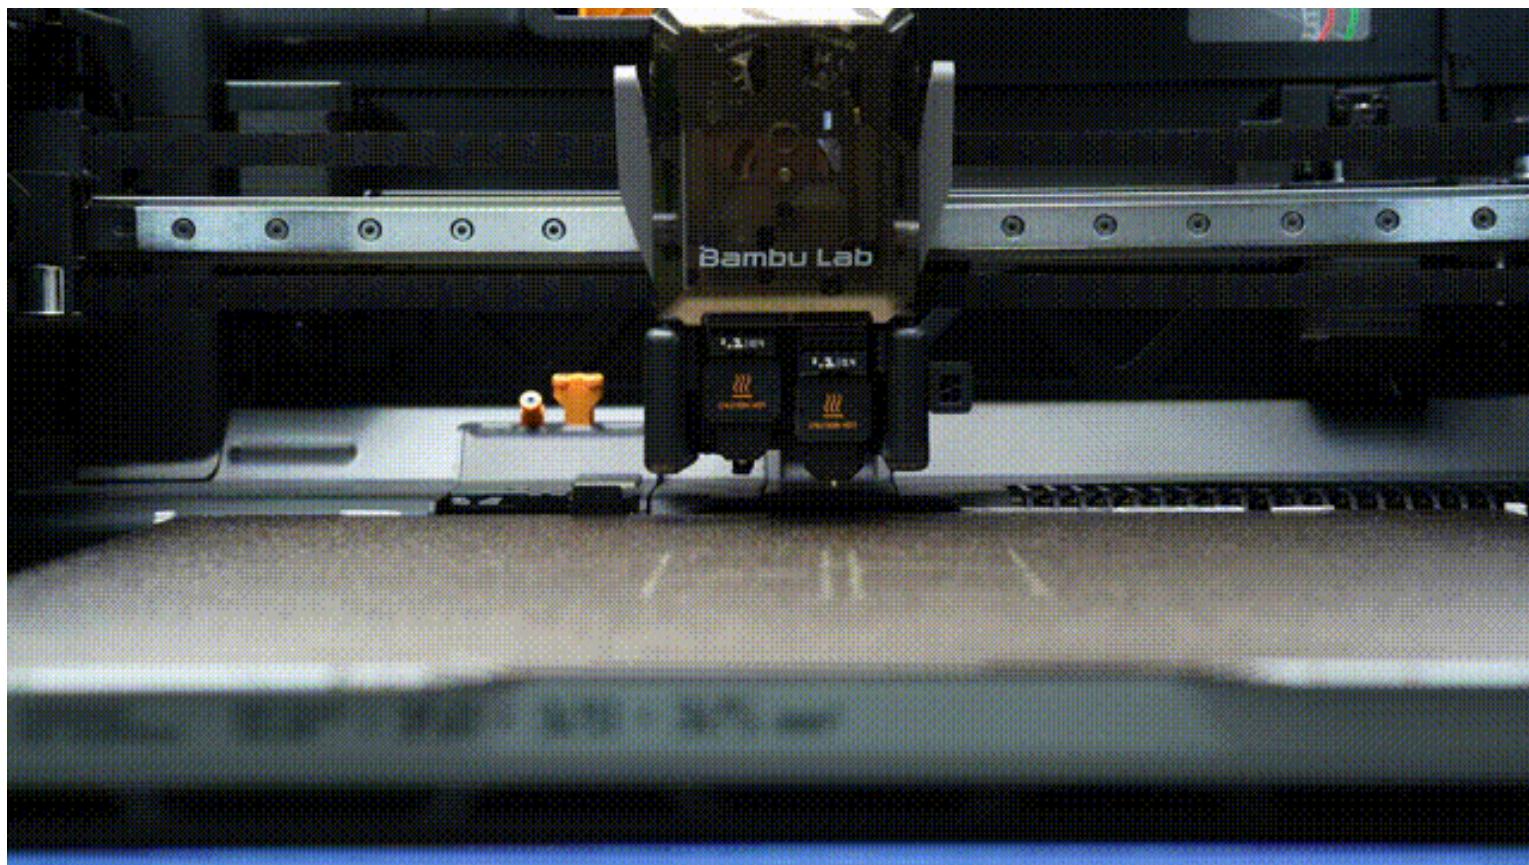

2. **Nozzle temperature:** Enter a value to set the left nozzle temperature.

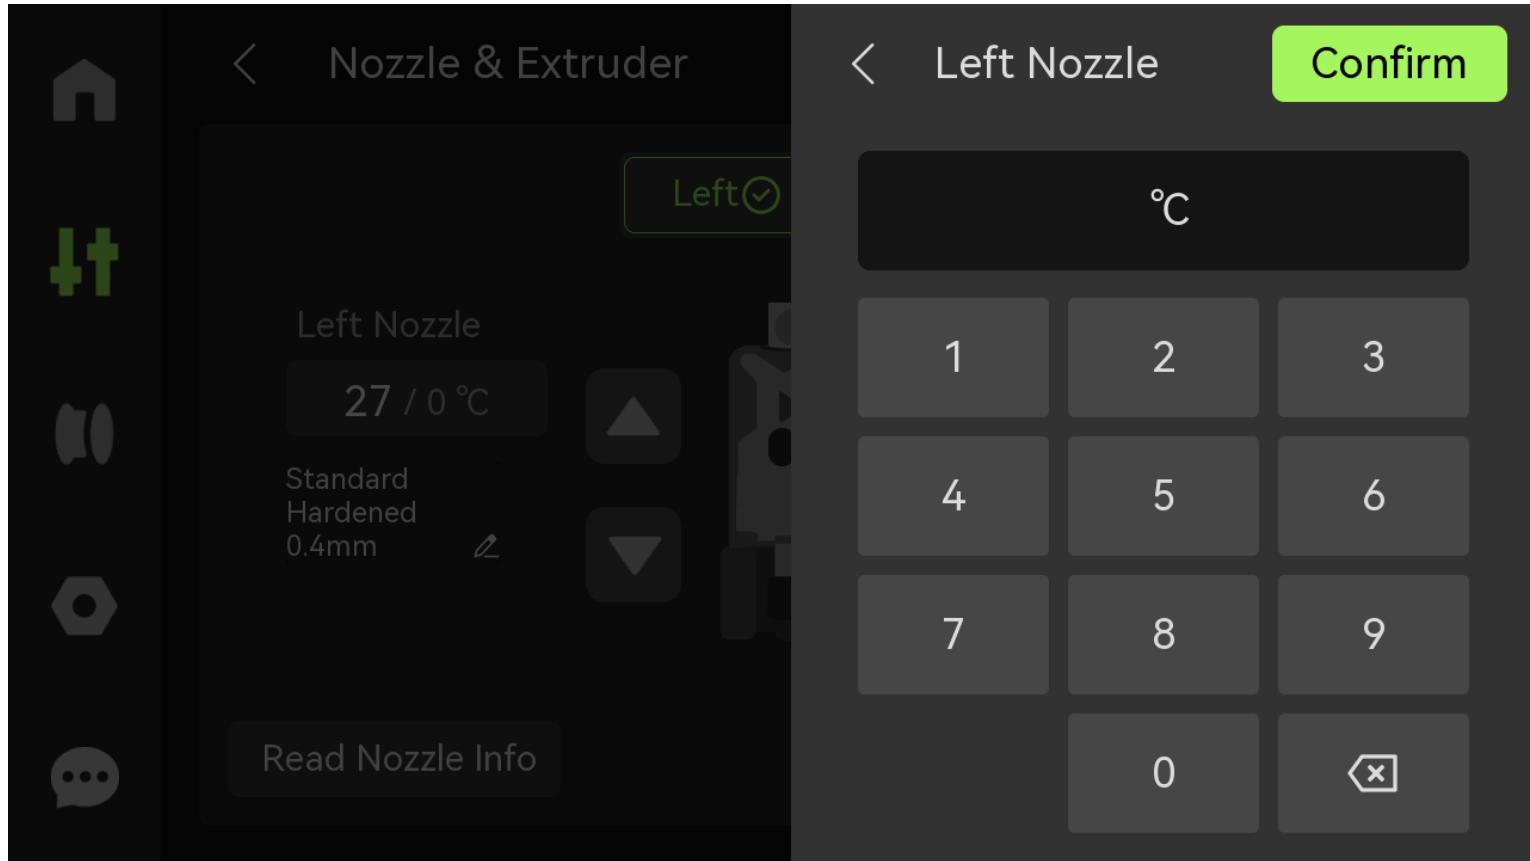


3. **Nozzle type:** Set the type, material, and diameter of the nozzle.

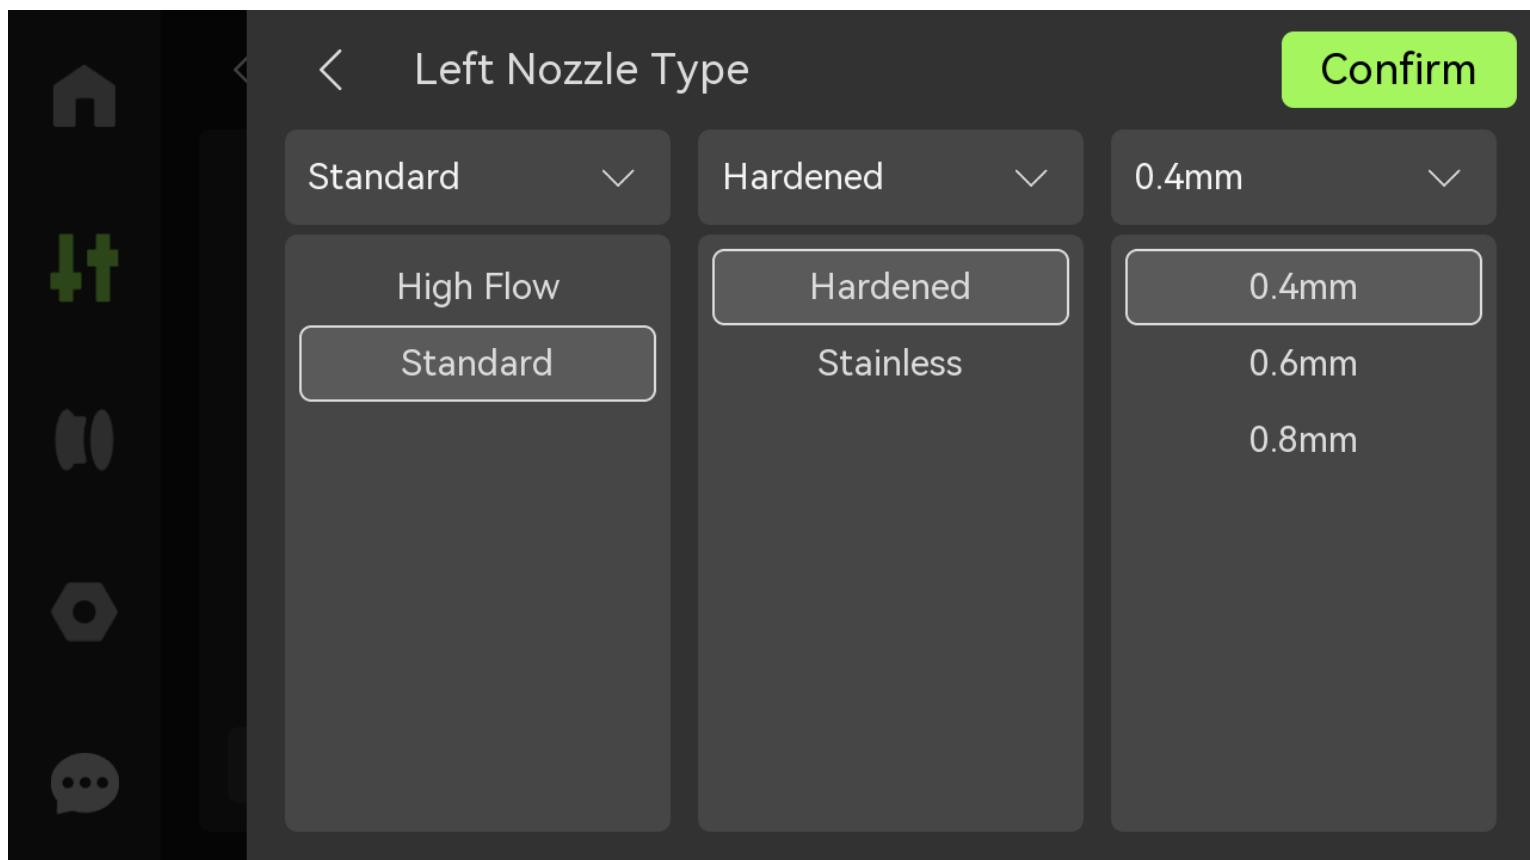

4. **Extruder:** Click the up and down buttons to manually extrude or eject filament. If the green light is on, the extruder filament sensor has detected the entry of filament.

< Nozzle & Extruder

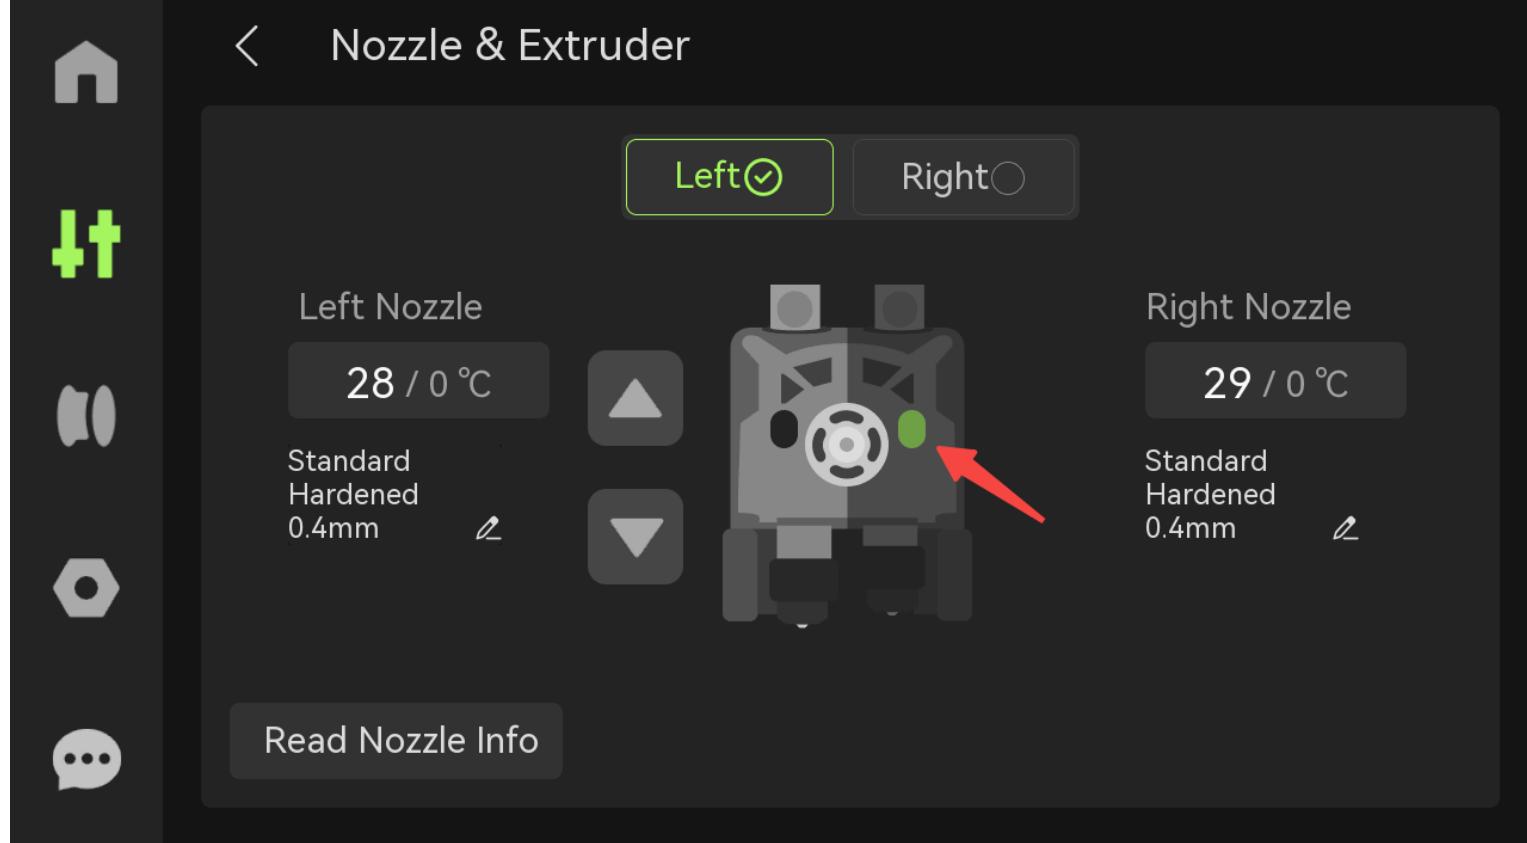

5. **Read Nozzle Info:** After turning it on, the printer will automatically read the nozzle information. Please make sure the build plate is empty and avoid putting your hands into the printer.

Nozzle & Extruder

Left

Right

! The toolhead will move during this process. Please don't reach into the printer.

Cancel

Confirm

Read Nozzle Info



5. Chamber Temperature

Same as the above chamber temperature.

6. Heatbed Temperature

Enter a value to set the heatbed temperature.



°C

1

2

3

4

5

6

7

8

9


0




The heatbed will maintain the set temperature during printing to help material adhere better to the plate.

7. LED light

Click the icon to open or close the LED light.

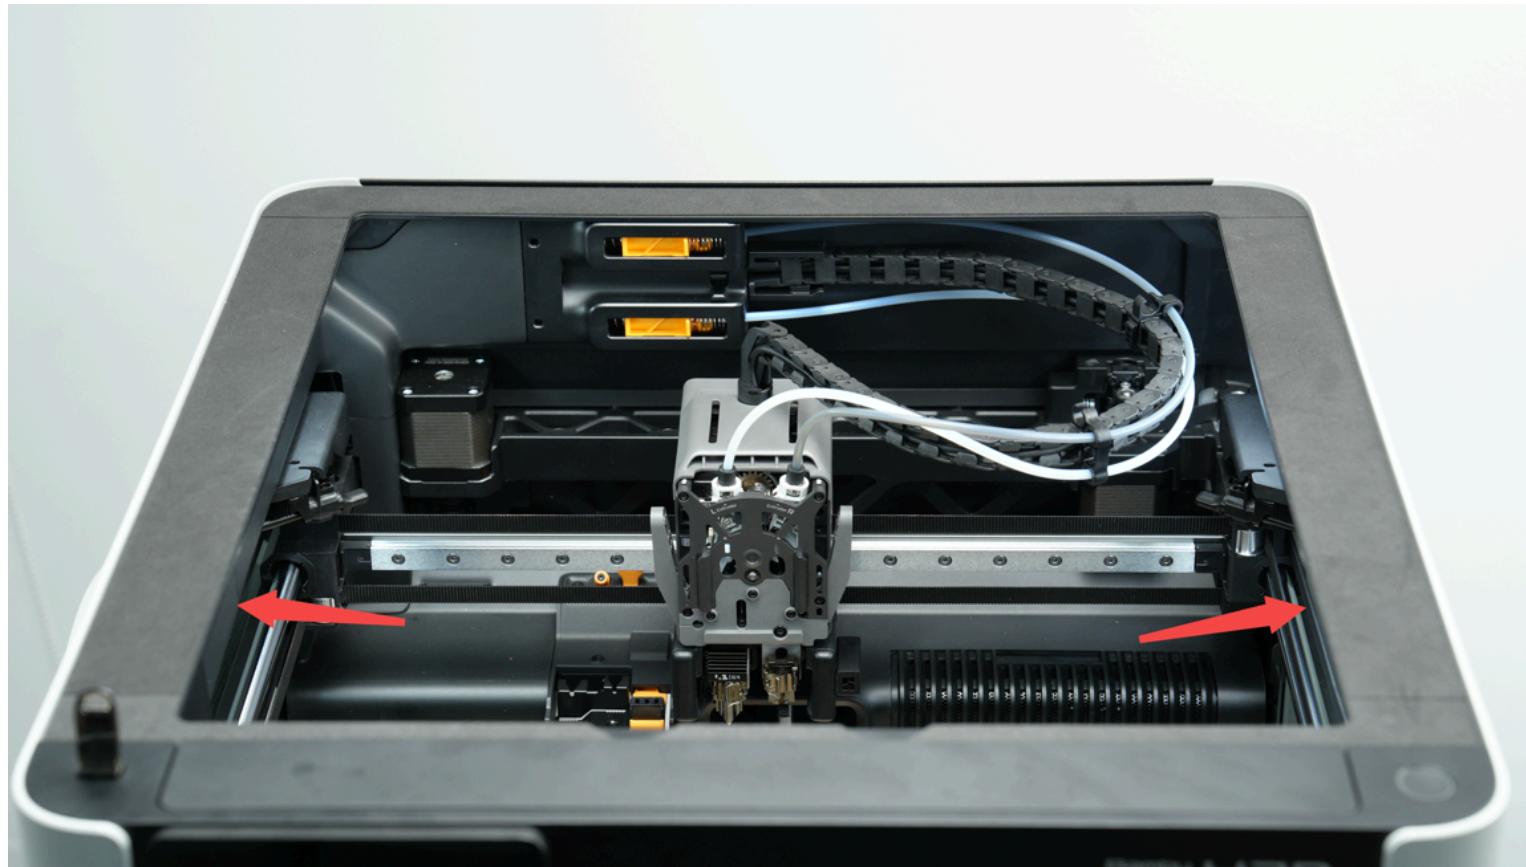


Filament

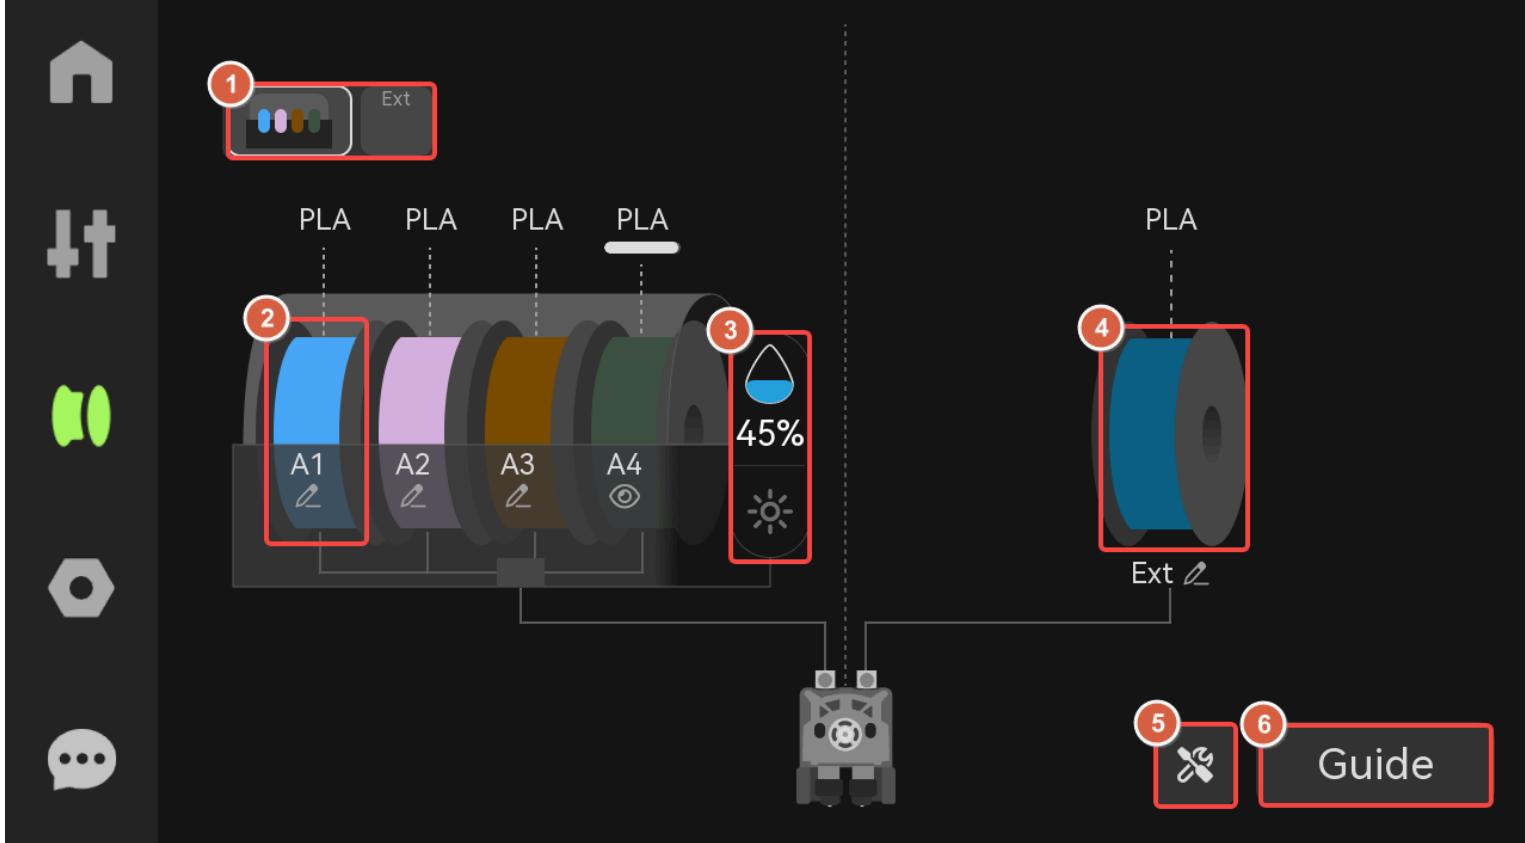


1. Device

Click to switch between different devices (AMS or external spool).

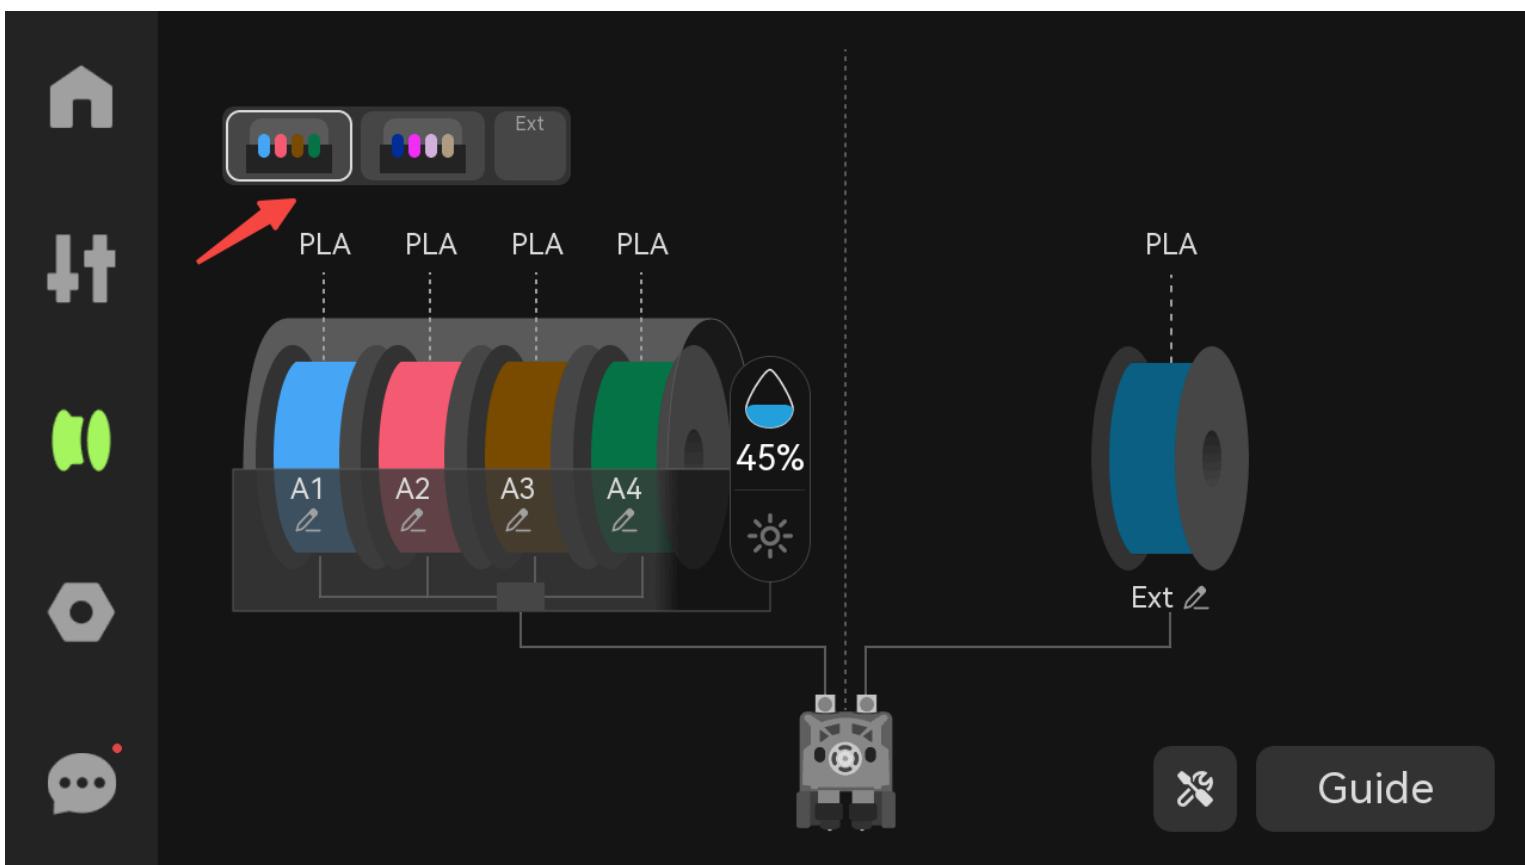


2. Spool


Click any spool icon to edit, load/unload, and re-read filament RFID.

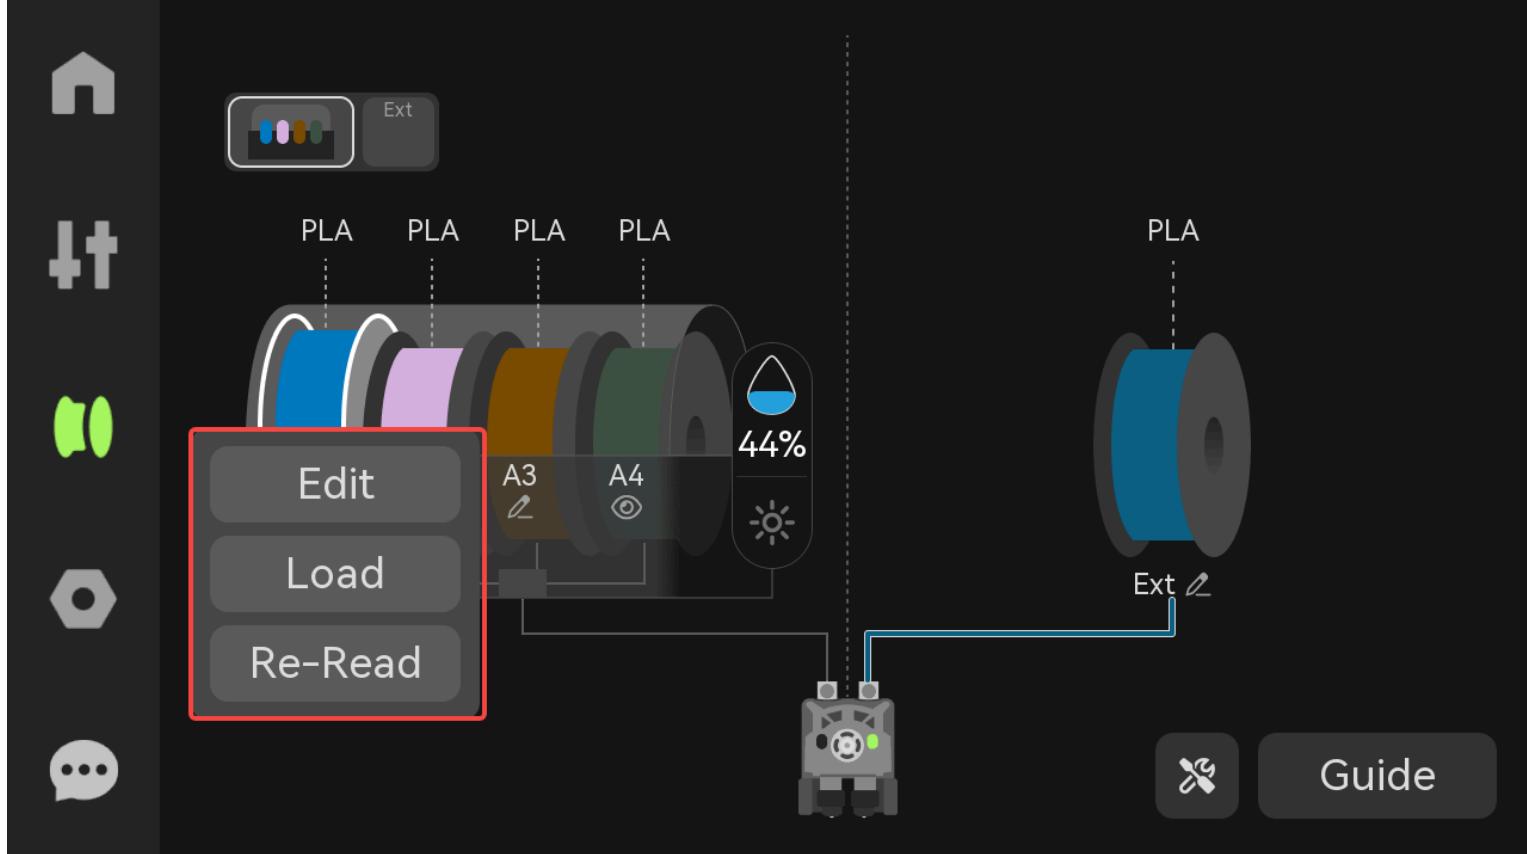

- ▶ **Edit:** If AMS has identified a spool through RFID, you can view the filament information here, but you cannot modify the filament parameters; if the RFID is not read, you can modify the filament information here;

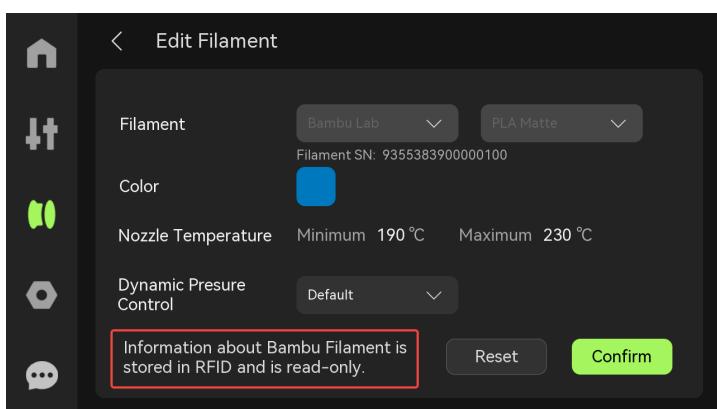

RFID read

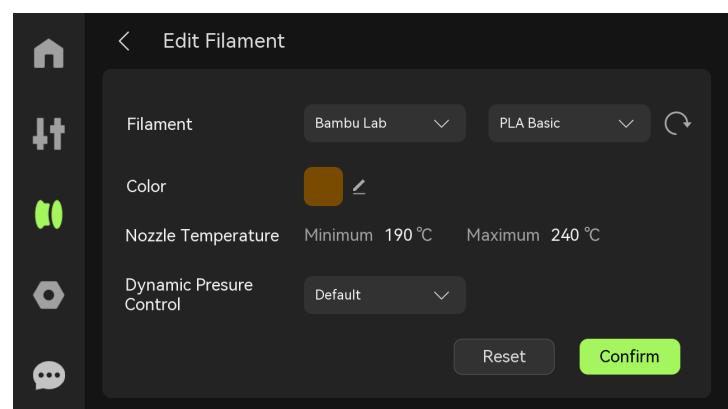


RFID not read

- ▶ **Load:** Click the button, and the AMS 2 Pro will automatically feed the filament into the extruder;
- ▶ **Re-Read:** Click the button, and AMS 2 Pro will reread the RFID of the spool in the slot.


3. Dry and Humidity

The humidity and temperature inside the AMS can be checked, and filaments can be dried.

NOTE: You can also turn on the drying function in Setting > Toolbox > Dry Filament.

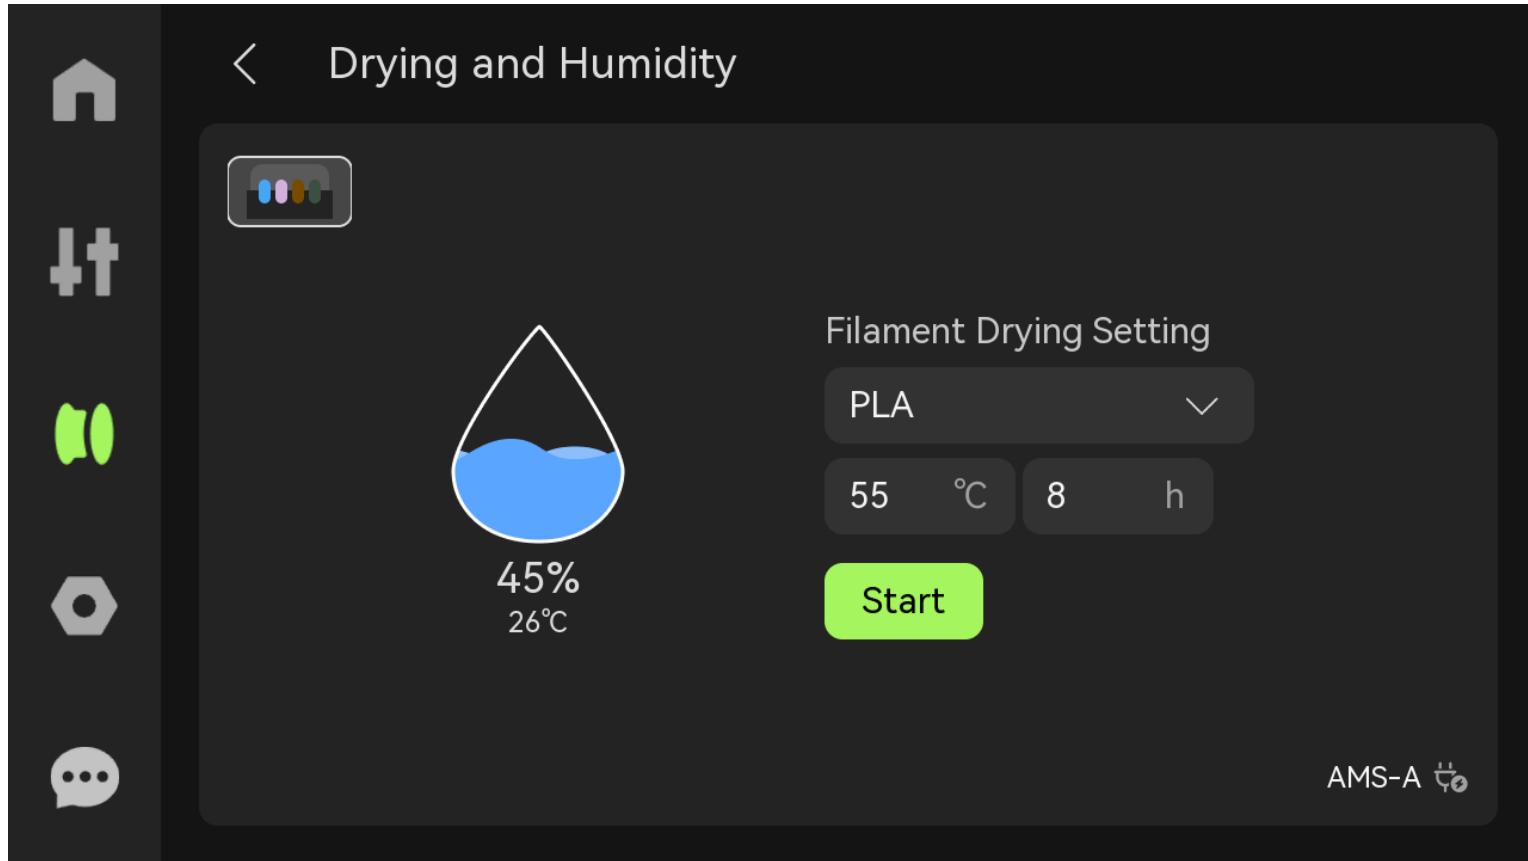


If multiple AMS 2 Pro/HT are connected, you can click the icon in the upper left corner to switch between different devices, view the real-time humidity and temperature data of each AMS, or start drying.

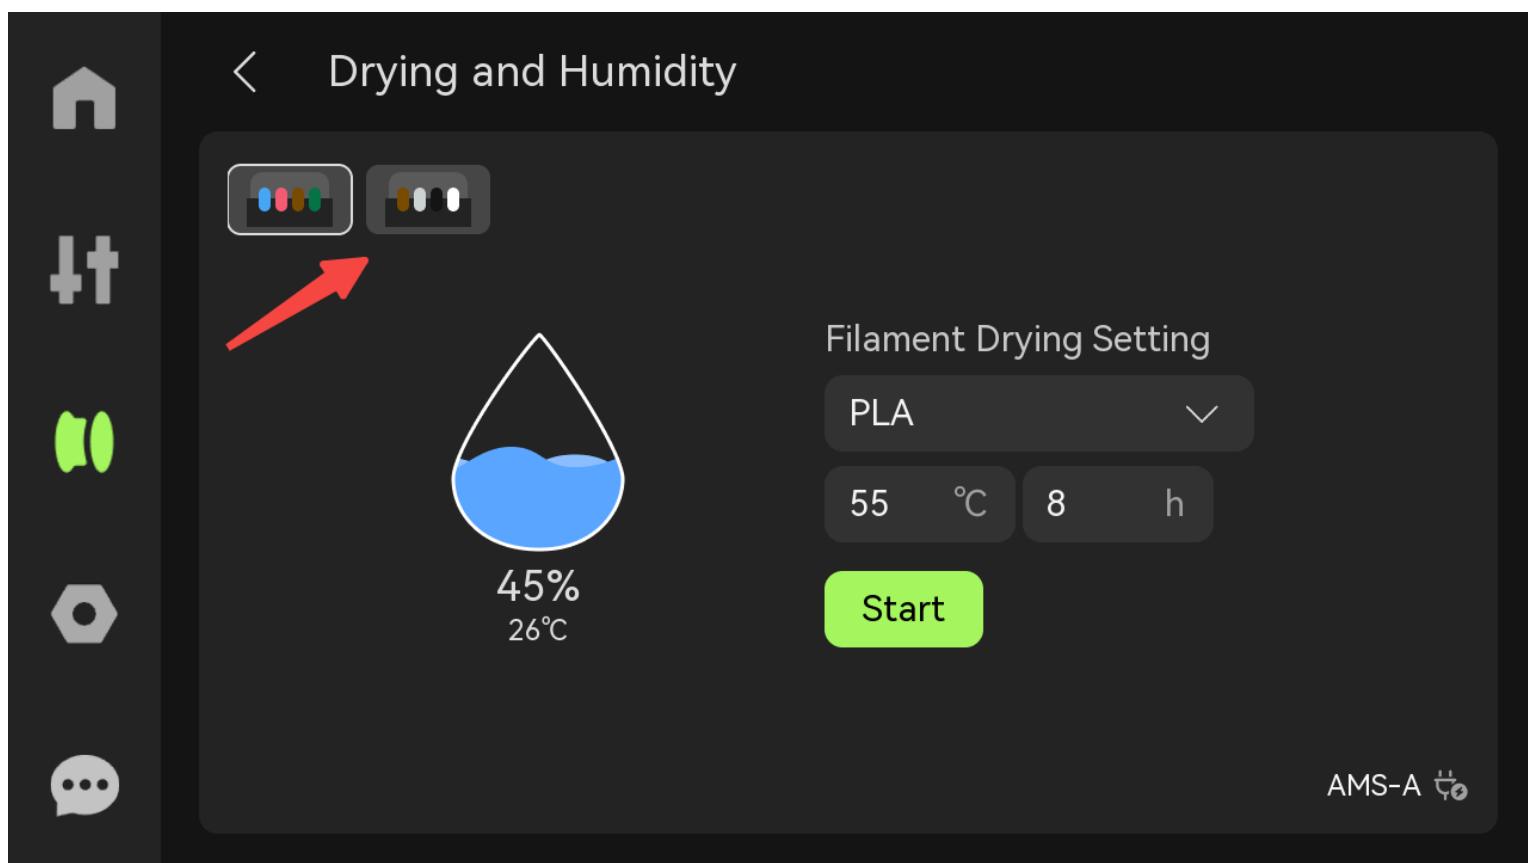


4. External spool

Click the external spool icon to edit, load and unload filaments;

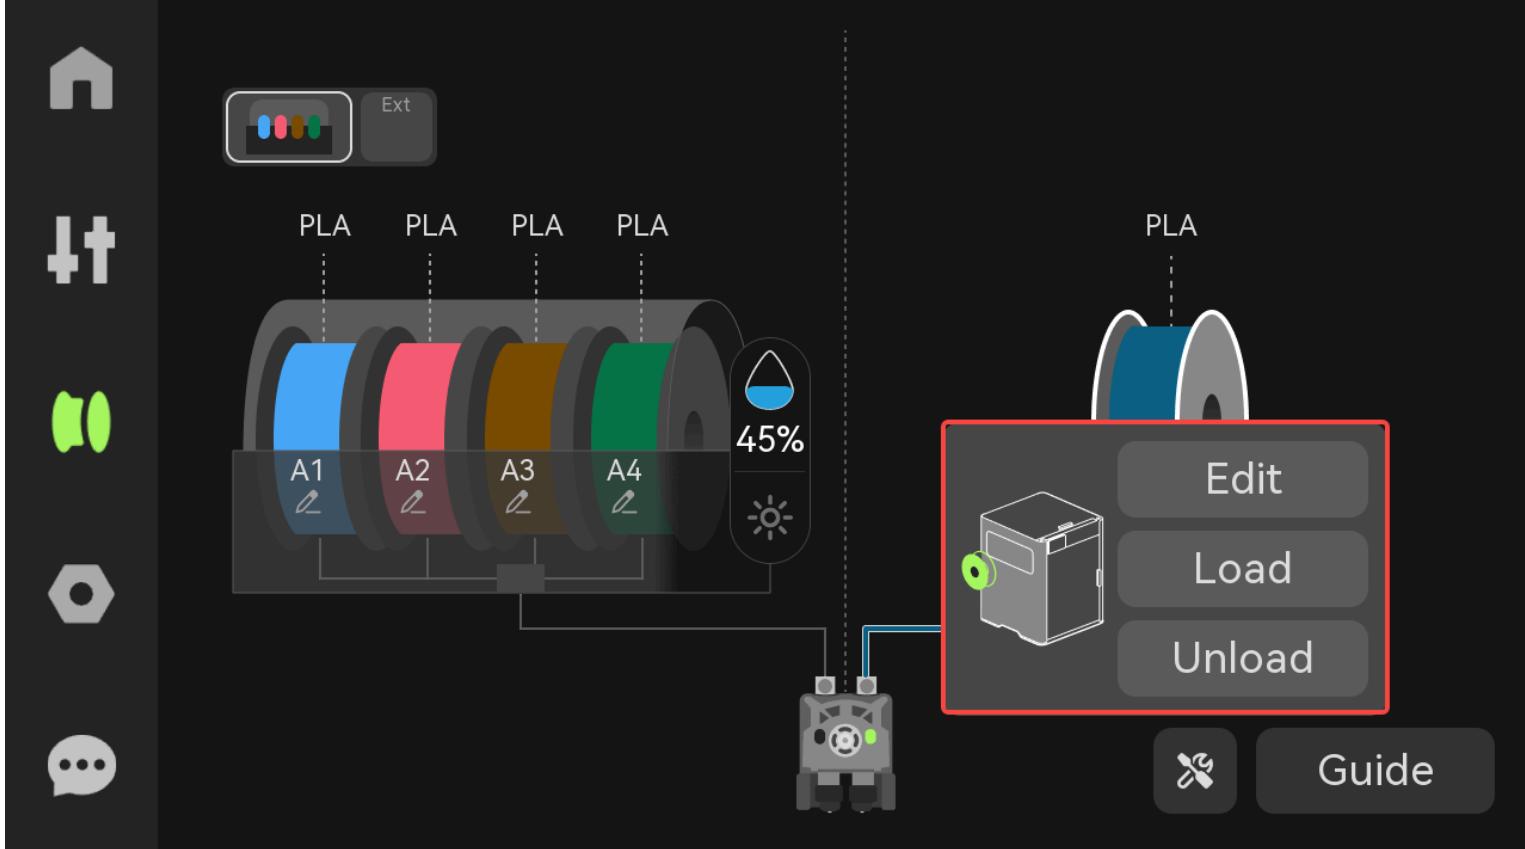


5. Tools

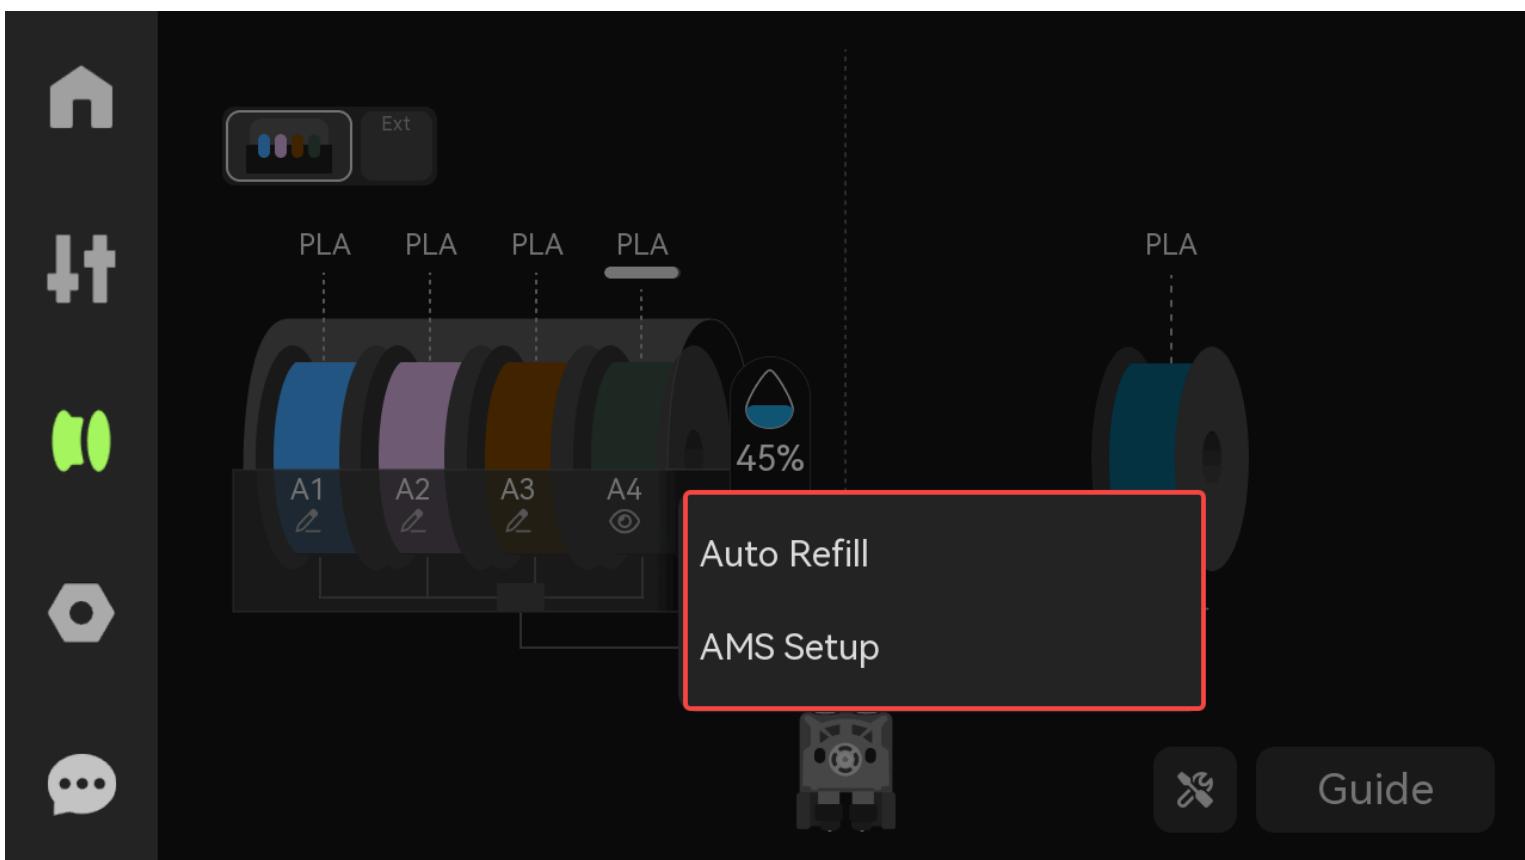

1. Auto Refill: When the brand, type, and color of the filaments are identical, the system will establish an automatic refill relationship. When the current filaments run out, the printer will automatically switch to another filament with the same properties to continue printing.

Note: An automatic refill relationship can only be established if both identical filaments come from the same extruder connected to the AMS, meaning left to left and right to right. If the filaments come from different extruders, an automatic

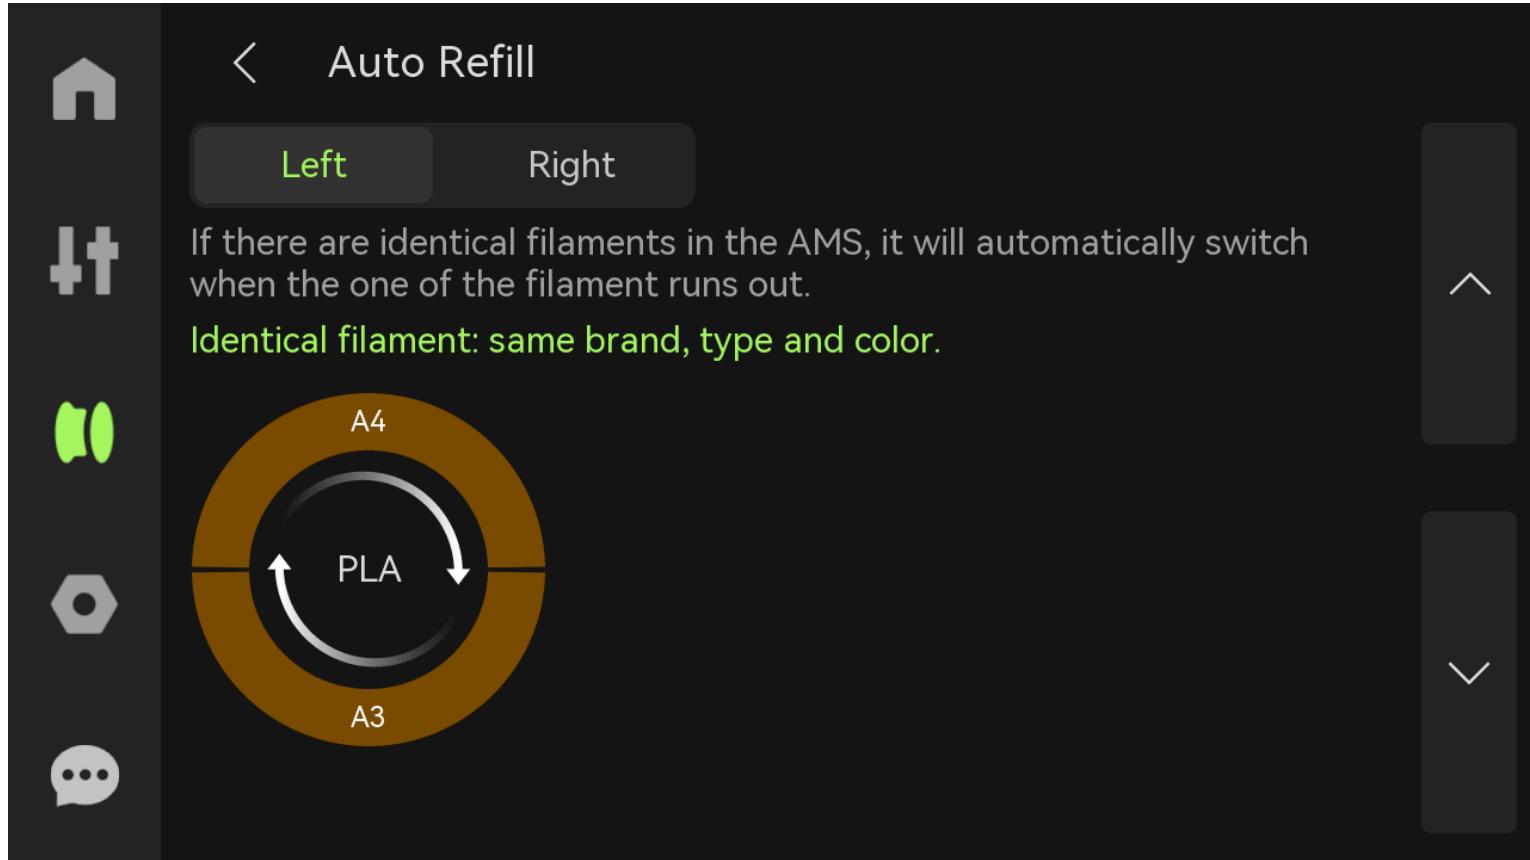

Auto Refill

Left Right


If there are identical filaments in the AMS, it will automatically switch when the one of the filament runs out.

Identical filament: same brand, type and color.

A4
PLA
A3

This screen shows the 'Auto Refill' configuration. It features a central circular icon with 'PLA' in the center and 'A4' at the top and 'A3' at the bottom. Two curved arrows indicate a circular flow. Below the icon are 'Left' and 'Right' buttons. To the left of the screen is a vertical sidebar with icons for Home, Tools, Filaments, Settings, and Help.

2. **AMS Setup:** When the AMS 2 Pro is connected to the H2D printer for the first time, it requires setup to detect which side of the extruder the AMS is connected to.

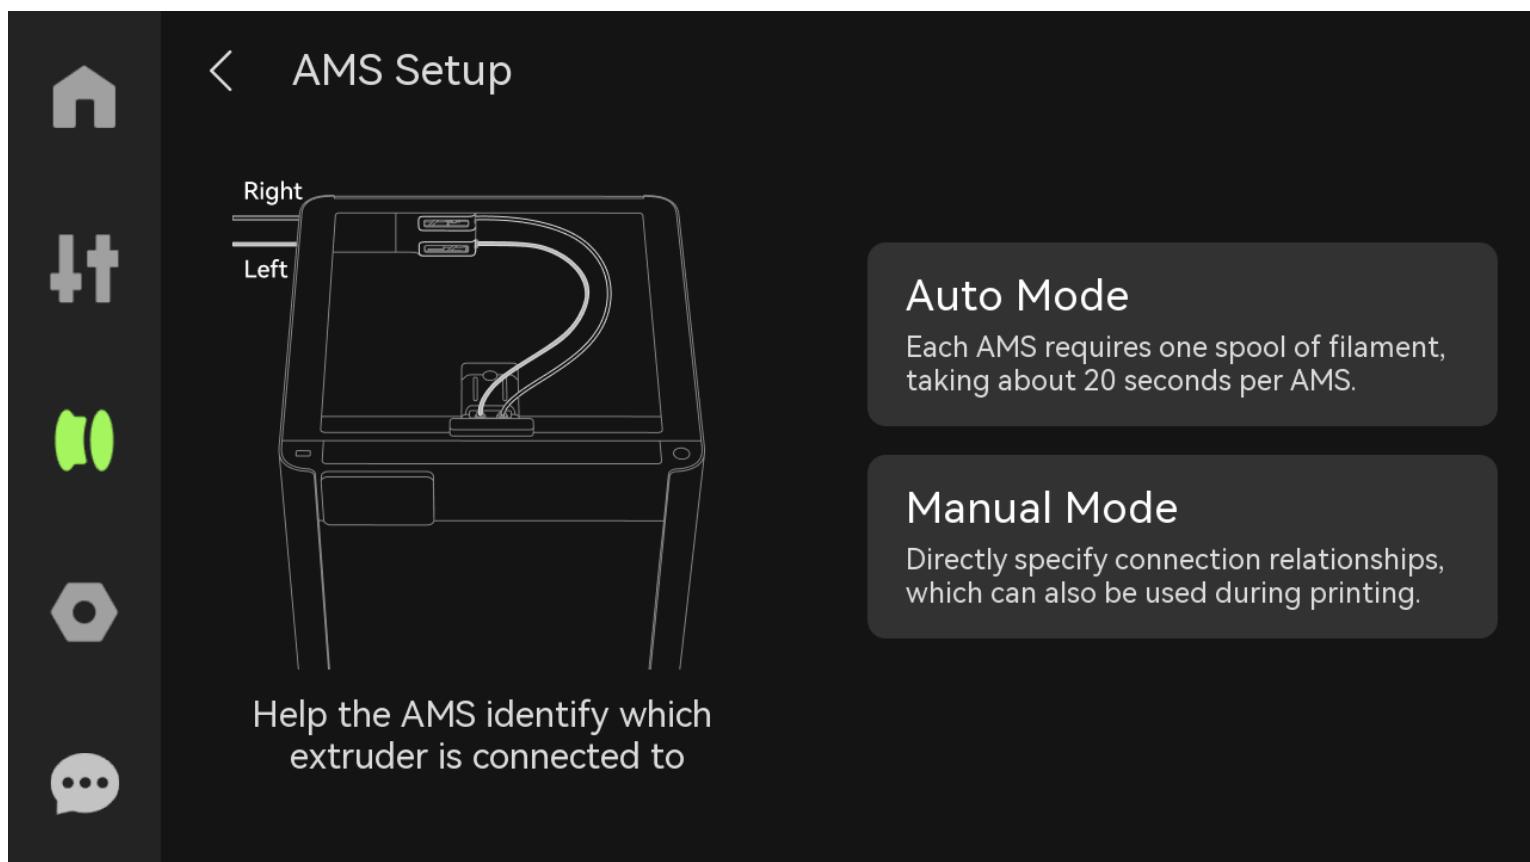

AMS Setup

Right
Left

Help the AMS identify which extruder is connected to

Auto Mode
Each AMS requires one spool of filament, taking about 20 seconds per AMS.

Manual Mode
Directly specify connection relationships, which can also be used during printing.

This screen shows the 'AMS Setup' configuration. It features a diagram of a printer with two extruders, labeled 'Right' and 'Left'. Below the diagram is a text box: 'Help the AMS identify which extruder is connected to'. To the right are two sections: 'Auto Mode' (describing a 20-second filament pull test) and 'Manual Mode' (describing manually specifying connection relationships). The left side of the screen has a vertical sidebar with icons for Home, Tools, Filaments, Settings, and Help.

► **Auto AMS Setup:** AMS sends the filament to the extruder. Each left and right extruder is equipped with a Hall sensor. The signal triggered by the Hall sensor is used to determine which extruder AMS is paired with.

Note:

1. Ensure that the filament is inserted into AMS 2 Pro (any slot is fine).
2. Any loaded filament must be unloaded in advance.
3. Ensure that no filament is broken in the buffer. Ensure that there is no residual filament inside the filament buffer (to avoid leftover filament inside).


Auto AMS Setup

Before the Setup

- Place a roll of filament into each AMS and insert it into the filament inlet
- Ensure that no filament is loaded in the extruder and filament buffer.

If you don't have filament available for this automatic setup, you can:

[Set it up manually.](#)

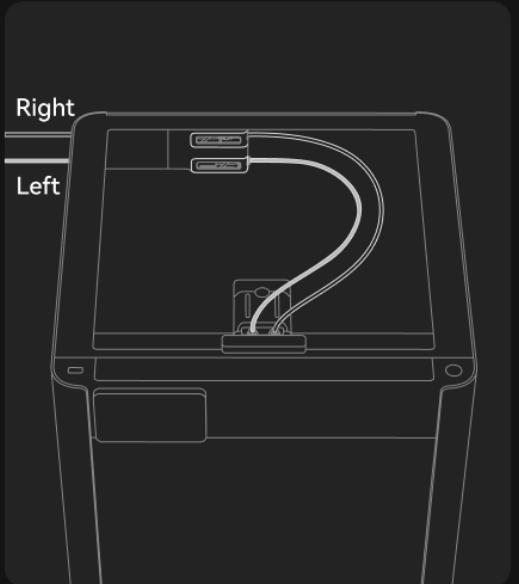

[Detect](#)

- **Manual AMS Setup:** Manually adjust the pairing relationship between AMS and extruder when there is no filament in AMS. When an AMS has sent the filament to the extruder, its icon will be gray (AMS-B in the figure below) and the pairing relationship with the extruder cannot be changed.

Manual AMS Setup

Confirm

! Select an AMS to assign it to a connected extruder. Once selected, the AMS light will blink.



AMS Connected to
Left Extruder



Join Right




AMS Connected to
Right Extruder



AMS-B

6. Guide

Instructions for feeding operation: Select a specific slot, click the spool icon, and then click the **Load** button to trigger automatic loading.

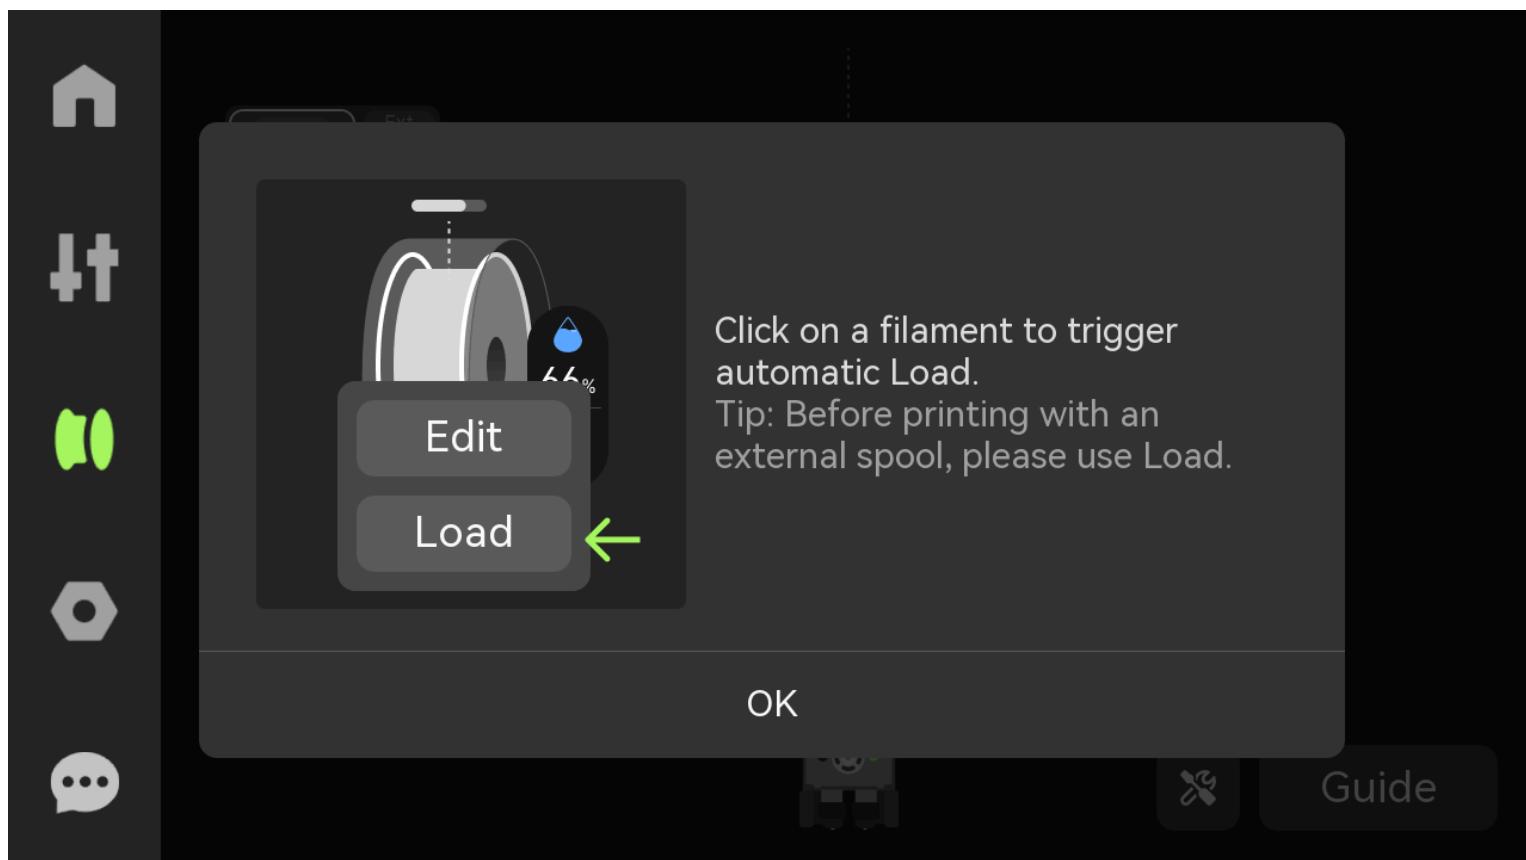


For more information on the filament page, please refer to:

[Introduction to AMS 2 Pro Workflow](#)


[Introduction to AMS HT Workflow and Features](#)

Setting

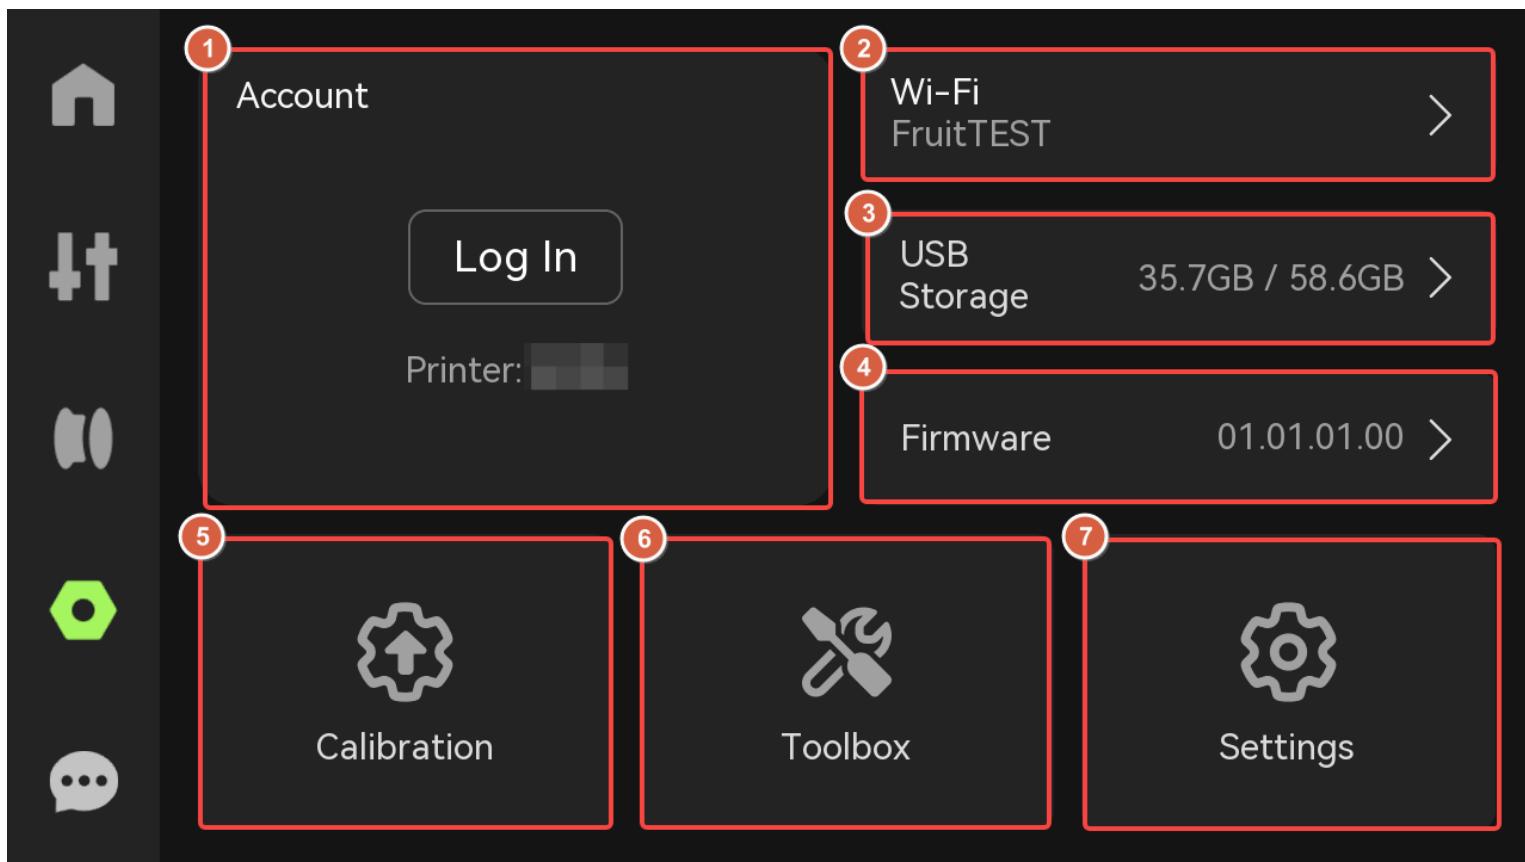


1. Account

Open Bambu Handy and scan the code to access the account.

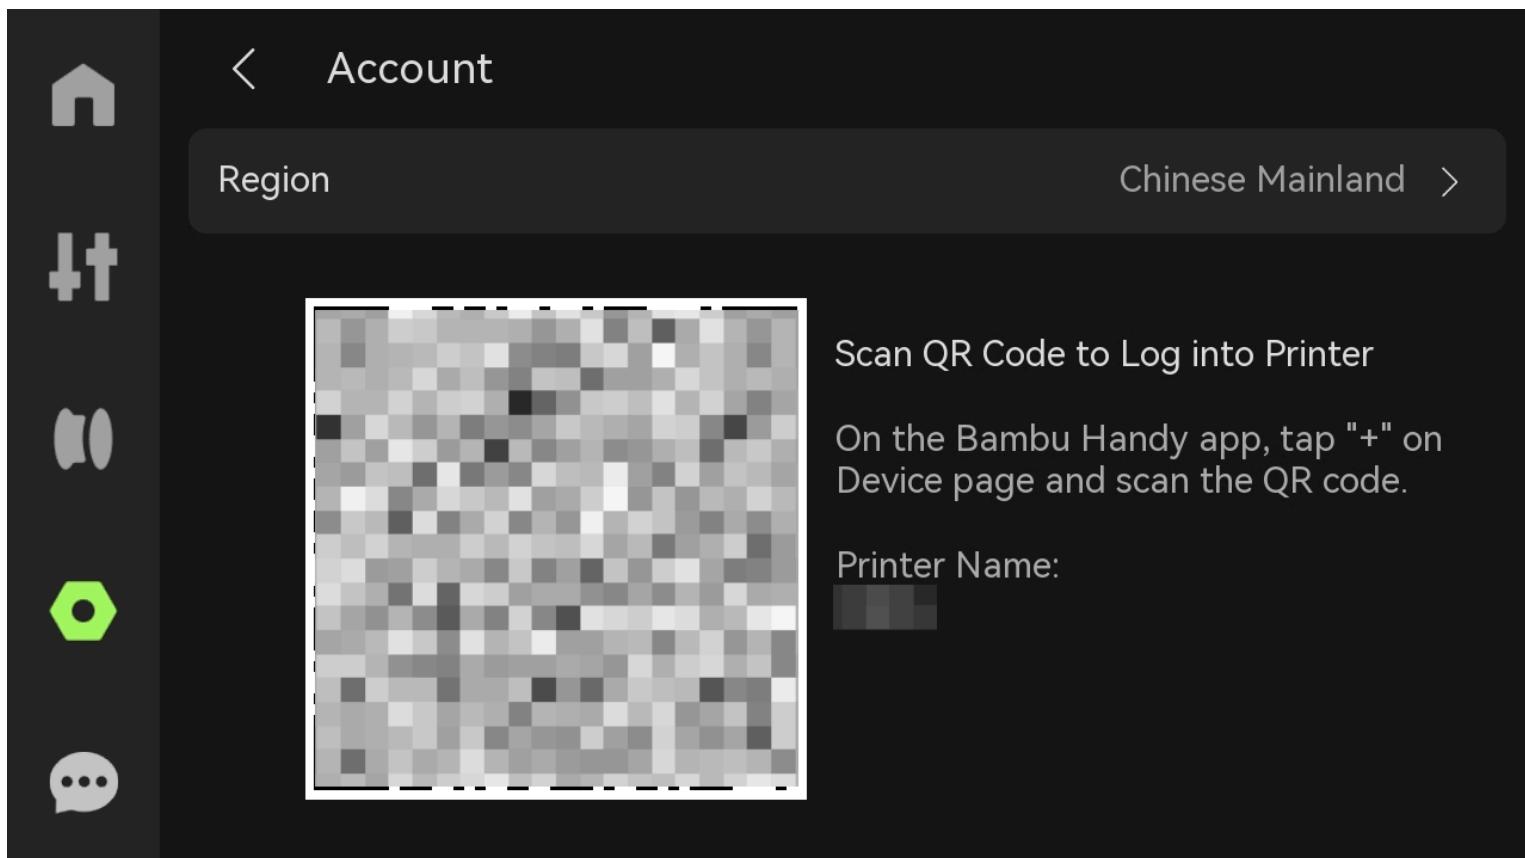

2. Wi-Fi

Set up the WLAN, view the current network, test network, or view and add other networks.

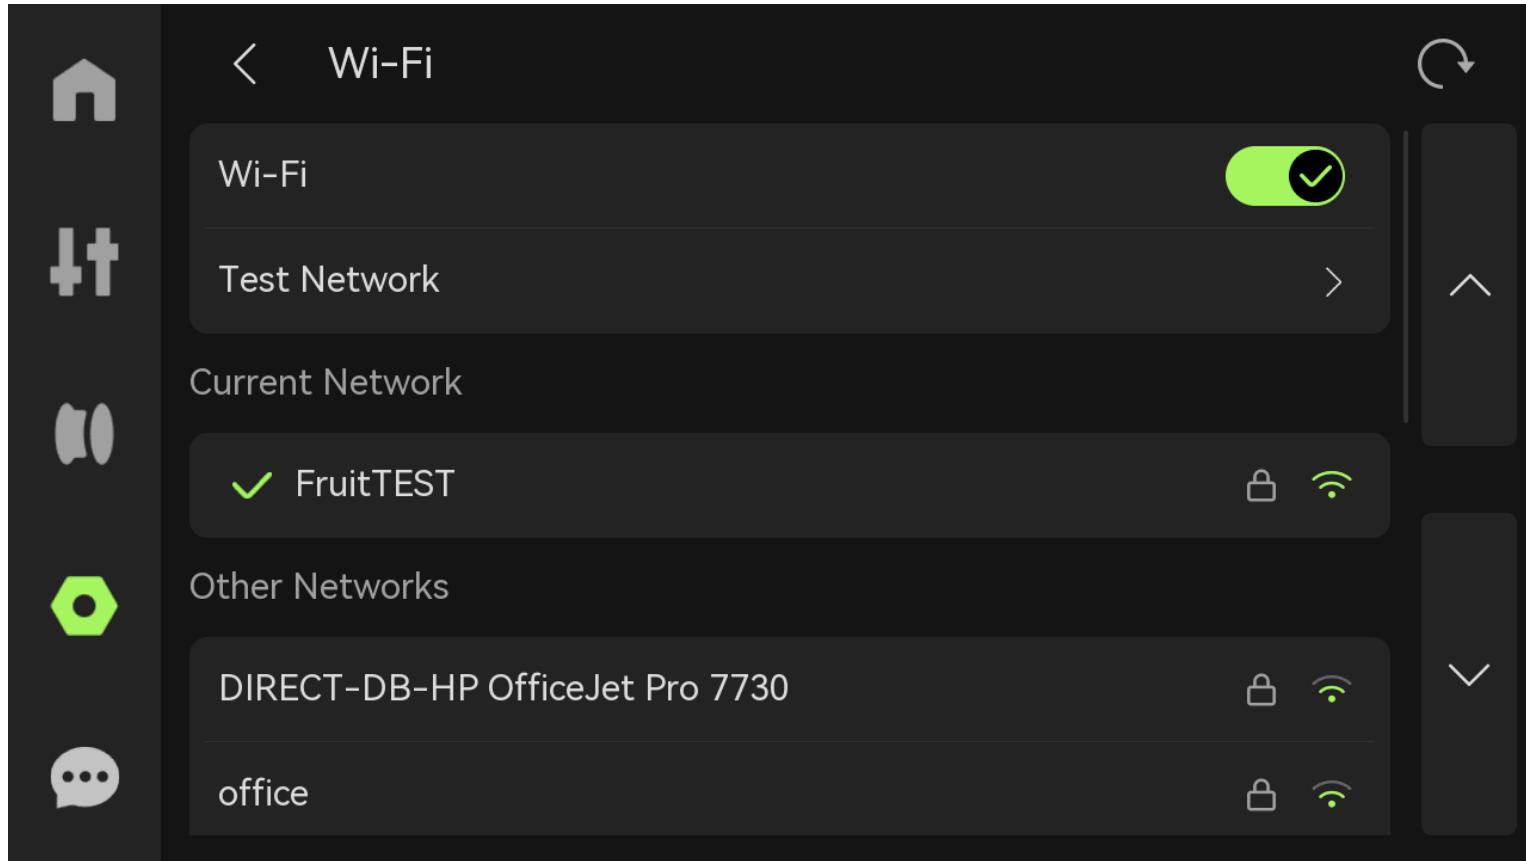

3. USB Storage

- **Storage:** Display the used capacity and maximum capacity of the USB flash drive.
- **Eject:** Click "Eject" to eject the USB drive safely.
- **Format external storage:** Once reset, the storage cannot be restored.

For USB flash drive specifications and usage recommendations, please refer to: [Specifications and Usage](#) [Recommendations of H2D USB Flash Drives](#).

< USB Storage

Storage

35.7GB / 58.6GB

Eject

>

Format the external storage

>

4. Firmware

View the current version of the device and historical versions, or perform offline upgrades. If the firmware needs to be updated, the "Update" button in the upper right corner will light up.

< Firmware

Update

Bambu Lab H2D

01.01.01.00

AMS 2 Pro (1)

02.00.19.47

Air Pump

00.00.10.27

History Versions

>

Update Offline

>

5. Calibration

Calibration

1 Print Calibration

2 High-Precision Nozzle Offset Calibration

3 Live View Camera Calibration

4 Motion Accuracy Calibration

1. Print Calibration: Includes motor noise cancellation, vibration compensation, auto bed leveling, high-temperature bed leveling and nozzle offset calibration.

Print Calibration

Start

Motor Noise Cancellation (12mins)

Measures the subtle individual differences of each motor to actively cancel the motor noise.

Vibration Compensation (4mins)

Measures the printer's mechanical resonance model to compensate vibration. It reduces artifacts caused by acceleration and enables significantly faster print.

Auto Bed Leveling (30mins)

Calibrates the heatbed's print surface by bringing the nozzle into contact with it, ensuring a more uniform extrusion height across the entire print area.

High-temperature Bed Leveling (30mins)

Check heatbed level at 100°C to improve first-layer quality for high-temperature filaments.

Nozzle Offset Calibration (3mins)

Calibrates the offset of the two nozzles to improve print quality.

- ▶ **Motor Noise Cancellation:** Reduces the noise generated by the motor during printing, especially when printing for a long time or at high speed. By optimizing the motor's operating algorithm and control strategy, it can not only reduce noise, but also make the print surface smoother, thereby improving the final printing effect.
- ▶ **Vibration Compensation:** When any vibration is detected in real-time during printing, the toolhead position can be automatically adjusted to ensure the accuracy of printing. Especially when printing complex or detailed models, this calibration can effectively prevent errors caused by vibration and ensure that each layer is completed accurately.

- ▶ **Auto Bed Leveling:** Through intelligent algorithms, the distance between the nozzle and the build plate is adjusted to ensure that the gap in each corner is consistent, which can effectively avoid printing defects caused by uneven heatbed, thereby improving printing accuracy.
- ▶ **High-temperature Bed Leveling:** Before printing with high-temperature filaments such as ABS/ASA/PC/PA, high-temperature heatbed calibration can ensure that the heatbed remains stable in a high-temperature environment, effectively preventing warping or poor adhesion of the first layer, and improving the quality of the first layer print.
- ▶ **Nozzle Offset Calibration:** If the positioning of the two nozzles is offset, it may cause the model to be misaligned or layer-shifted during printing. If you find that the model has an obvious layer shift after switching nozzles during printing, it is recommended to perform a nozzle offset calibration. This process uses the eddy current sensor in the toolhead and the nozzle offset calibration sensor behind the heatbed to ensure the accuracy of the nozzle position to improve the quality and accuracy of the print. Through effective calibration, you can reduce printing errors and ensure perfect alignment of each layer.

2. **High-Precision Nozzle Offset Calibration:** Load two filaments, one dark and one light, to two nozzles respectively, and use AI visual inspection technology to accurately calibrate the offset of the two nozzles in the XY direction to improve print quality and accuracy.

High-Precision Nozzle Offset Calibration

Before Start

1. Prepare two rolls of filament of the same material, one dark and another light. (please use solid colors and avoid gradient, dual, and transparent colors)
2. Put them in AMS. If there is no AMS, load the filaments first and then start calibration.

Introduction

It enhances nozzle precision with the Toolhead Camera to improve the print quality. it will initiate a printing task.



Start

3. **Live View Camera Calibration:** By identifying specific marks on the heatbed and calibrating the position and angle of the live camera, the detection error caused by camera viewing angle deviation and position error can be reduced, thereby significantly improving its detection accuracy and achieving higher image capture quality.

< Live View Camera Calibration

Before Proceeding

1. Remove all external modules from the toolhead.
2. Clean up the heatbed and expose the heatbed marker.

Introduction

Calibrates the camera's position and attitude to improve detection accuracy.



Start

4. **Motion Accuracy Calibration:** Designed for users who have high requirements for print quality, it aims to solve the absolute positioning problem in the 3D printing process, thereby improving printing accuracy, especially for large-size printing. Through this process, motion hysteresis and motion distortion can be significantly suppressed, ensuring a more accurate printing.

For more information on motion accuracy calibration, please refer to: [Motion Accuracy Calibration](#).

< Motion Accuracy Calibration




Before Start

1. A Vision Encoder needs to be placed on the heatbed (click the top right corner for details).
2. Do not place any objects on the board.

Precautions

Please remove the Vision Encoder after use, as it is not designed for 3D printing applications.

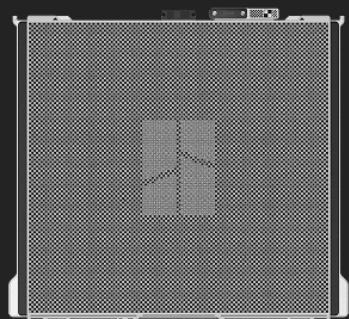

Start

< Toolbox

Tools

Dry Filament >

Maintenance

Laser Module Cleaning >

Nozzle Cold Pull Maintenance >

- **Dry Filament:** Select the filament type, set the drying temperature and duration, and dry the filament.

< Dry Filament

Filament Type

ABS/ASA ▾

25/90°C

12h

Step 1:


Remove anything under or above the heatbed to avoid collisions, and remove the filament from the toolhead to avoid clogging.

Step 2:

Tap the "Prepare" button to move the tool head and heatbed to the preset position.

Step 3:

Place the filament on the print bed and cover it with a lid printed using a high-temp material such as PA-CF or PC (the 3MF is available on wiki. bambulab.com), or with one made from a cardboard spool box.

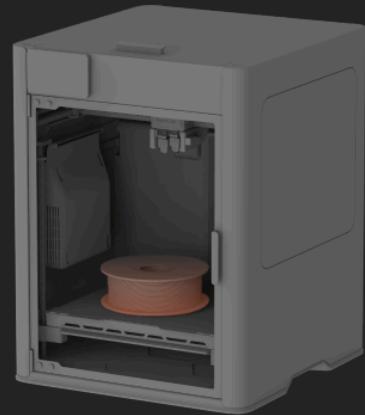

Prepare

- **Laser Module Cleaning:** Regular cleaning of the laser module prevents the accumulation of powder and debris, ensuring the normal operation of the equipment and extending its service life. The printer will assess the degree of contamination of the printer based on the total engineering time and laser task type in Bambu Suite. The length of the green progress bar on the left side of the screen will decrease as the laser module is cleaned; if the progress bar turns red and displays "Cleaning Required Immediately", cleaning is required. Specific tutorials can be obtained through the QR code on the right. Please refer to: [Regular maintenance recommendations for 10w laser module](#).

< Laser Module Cleaning

No cleaning needed



Introduction

Laser cutting produces smoke and dust that can contaminate the laser module. Regular cleaning is essential to maintain power.

Cleaning steps



Complete

Later

- ▶ **Nozzle Cold Pull Maintenance:** When the extruder motor frequently overloads and reports errors at normal printing flow, it means that the nozzle resistance is too large and needs to be cleaned urgently; at the same time, since TPU is extremely sensitive to nozzle resistance, if the nozzle has been used to print other filaments before, it is recommended to perform cold pull cleaning on the nozzle before printing TPU to ensure smooth printing. For details on nozzle cold pull maintenance, please refer to: [H2D Nozzle Cold Pull Maintenance and Cleaning](#).

< Nozzle Cold Pull Maintenance




Introduction



Cold pull can prevent clogging by removing residual deposits in the nozzle. The main steps are: Insert the filament, Heat and purge, Cool to let the residue adhere to the filament, Pull out the filament with debris.

Recommendation



It is recommended to use light-colored and tough filament such as PLA and PETG. The melting temperature should be equal or higher than the printing temperature of residual filament.

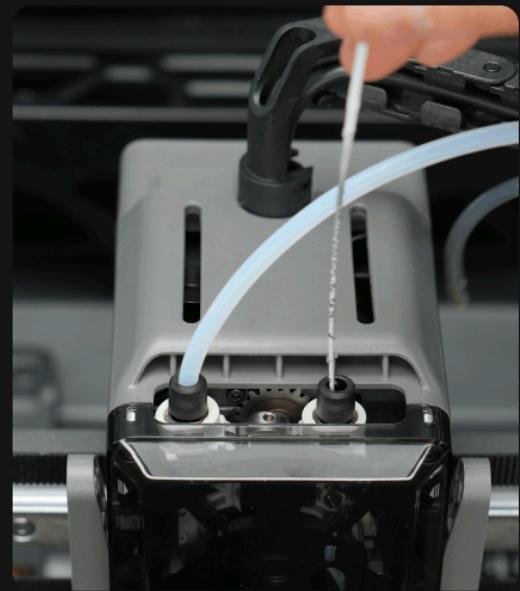

Next

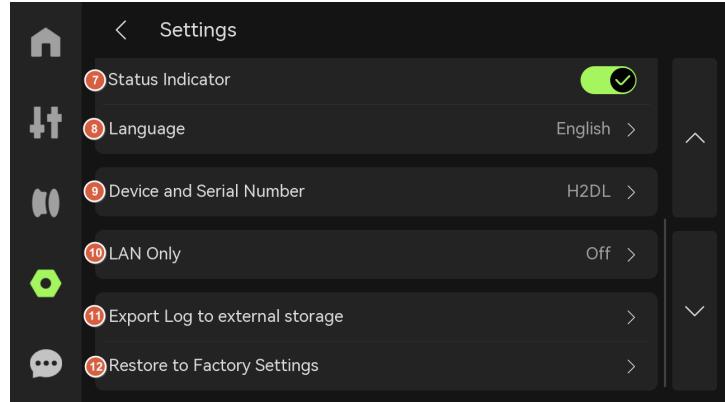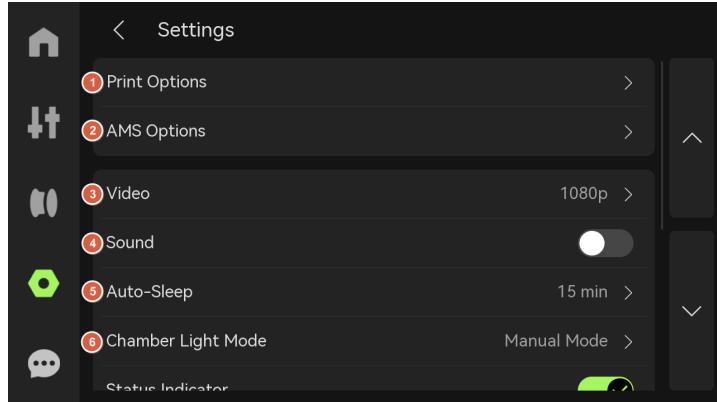

1. Print Options:

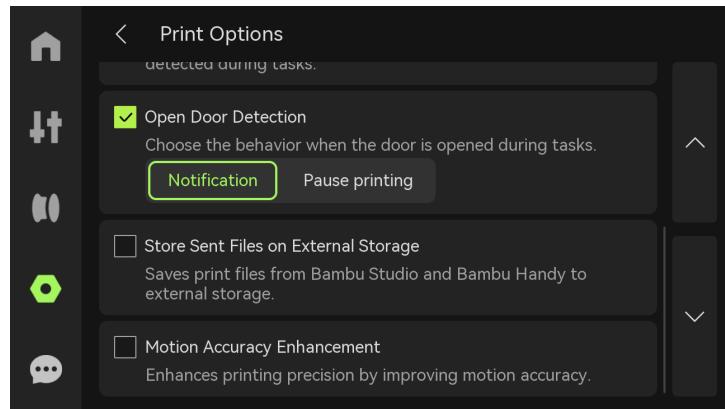
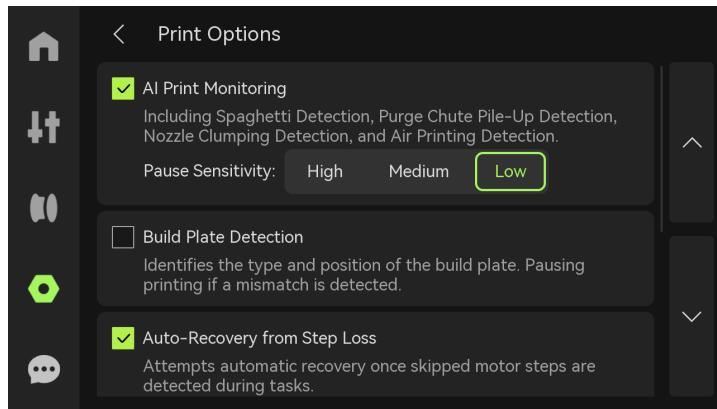


- ▶ **AI Print Monitoring:** Detect spaghetti, purge chute pile-up and nozzle clumping during the printing process, and select the sensitivity to pause printing. The pause sensitivity is divided into **high** (pause immediately when small problems are found), **medium** (pause when a certain degree of problem occurs), and **low** (pause only when there is an obvious abnormality) to adapt to different print quality needs.
- ▶ **Build Plate Detection:** Detect print plate markings. If the markings are not within the predefined range or do not match the slice file, the printer stops printing. This prevents unplaced or misplaced print plates.

For more information about intelligent detection, please refer to: [Introduction to H2D Intelligent Detection](#).


- ▶ **Auto-Recovery from Step Loss:** When the motor detects a position shift (lost step), the X-axis, Y-axis, and Z-axis are repositioned and returned to the pre-shift position to continue executing the unfinished G-code to ensure print quality.
- ▶ **Open Door Detection:** When turned on, the printer will detect whether the front glass door is open, and you can choose to trigger a notification or pause printing when the door is opened.
- ▶ **Store Sent Files on External Storage:** If printing is initiated through the cloud, the print files will be cached in external storage.
- ▶ **Motion Accuracy Enhancement:** Designed for users who have high requirements for print quality, it aims to solve the absolute positioning problem in the 3D printing process, thereby improving printing accuracy, especially for large-size printing. Through this process, motion hysteresis and motion distortion can be significantly suppressed, ensuring a more accurate printing.

2. AMS Settings:

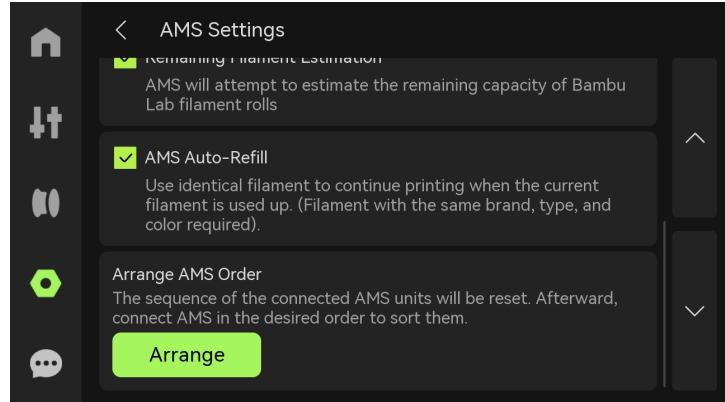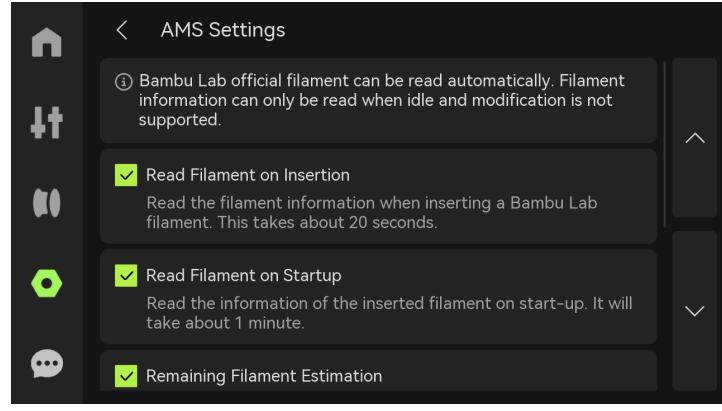


- ▶ **Read Filament on Insertion:** After inserting the filaments for pre-loading, AMS will perform RFID reading operation.
- ▶ **Read Filament on Startup:** Everytime you restart the printer, AMS will automatically read the inserted filaments information (the reading process will rotate the filaments).
- ▶ **Remaining Filament Estimation:** Estimate the remaining filaments when reading the RFID. When this function is turned on, the RFID will be read twice to obtain the filament information and estimate the remaining quantity. After reading the RFID and remaining quantity information of the filament, you can view the filament name above each slot. The small horizontal bar below the filament name shows the estimated remaining filaments.
- ▶ **AMS Auto-Refill:** When the filaments in one slot of the AMS run out, it can automatically switch to filaments with the same properties in other slots. These properties include brand, type, color, and nozzle temperature. Please make sure to configure the information of all filaments before printing to meet the requirements of auto-refill.
- ▶ **Arrange AMS Order:** Each AMS is assigned a sequence and displayed on the screen. The purpose of assigning AMSID is to facilitate the identification of their connections. The logic of assigning IDs is: the one directly connected to the printer is AMS-A, the one connected to AMS-B is AMS-C, and so on. If you need to reorder the AMS, you can click "Arrange", which will reset the order information of the AMS. After the reset is completed, please connect the AMS in sequence as needed.


3. **Video:** Set the video resolution. Higher resolution requires more storage space.
4. **Sound:** If you turn on the option, the printer will emit a sound when it is turned on, when printing starts, and when printing ends.
5. **Auto-Sleep:** Select the length of time the printer will automatically sleep.

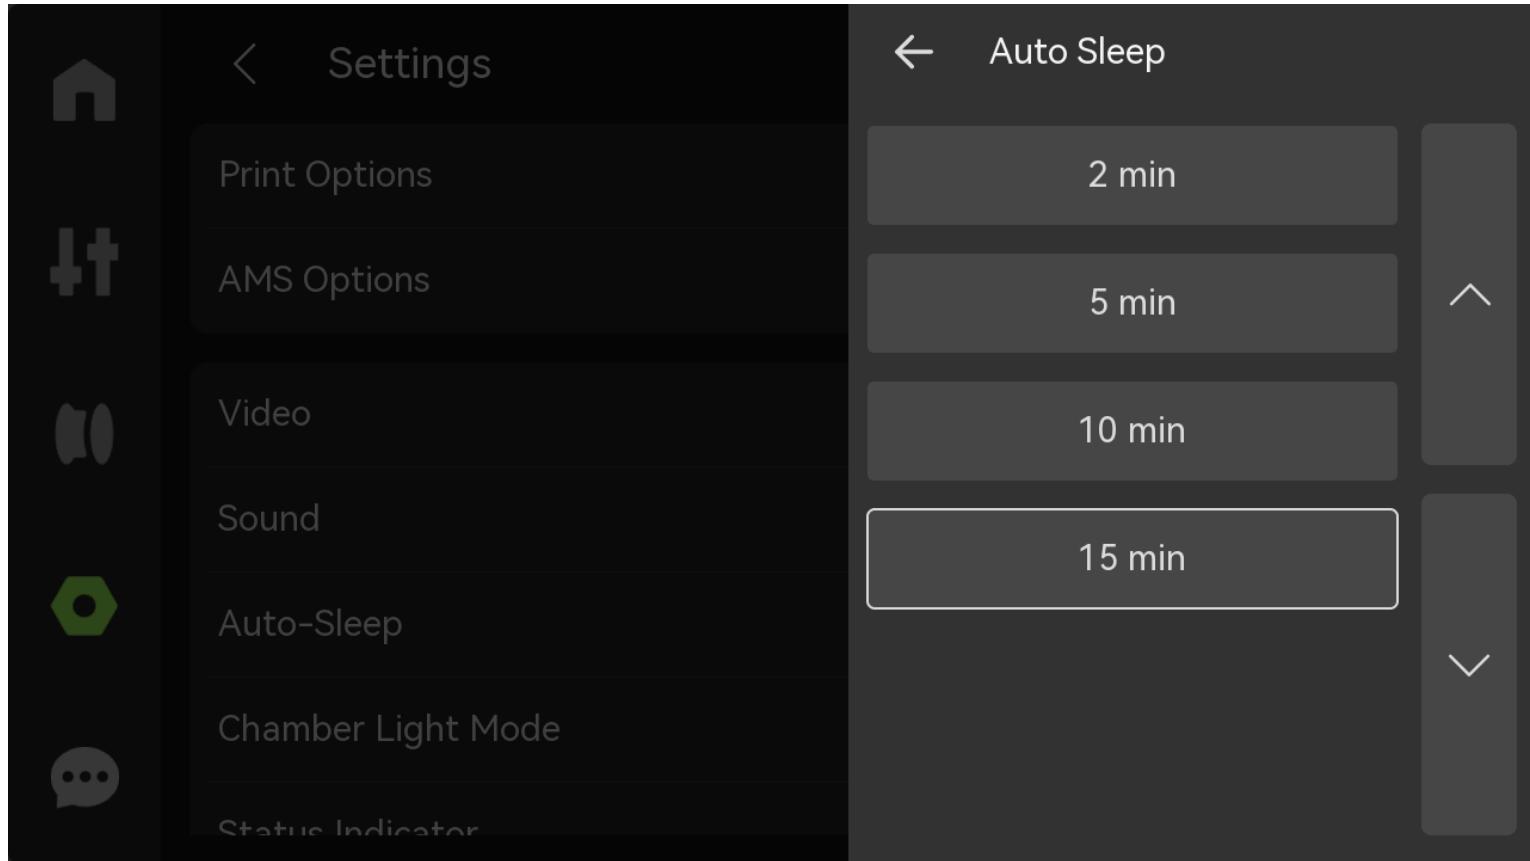

6. **Chamber Light Mode:** You can choose manual mode or energy-saving mode according to actual needs.

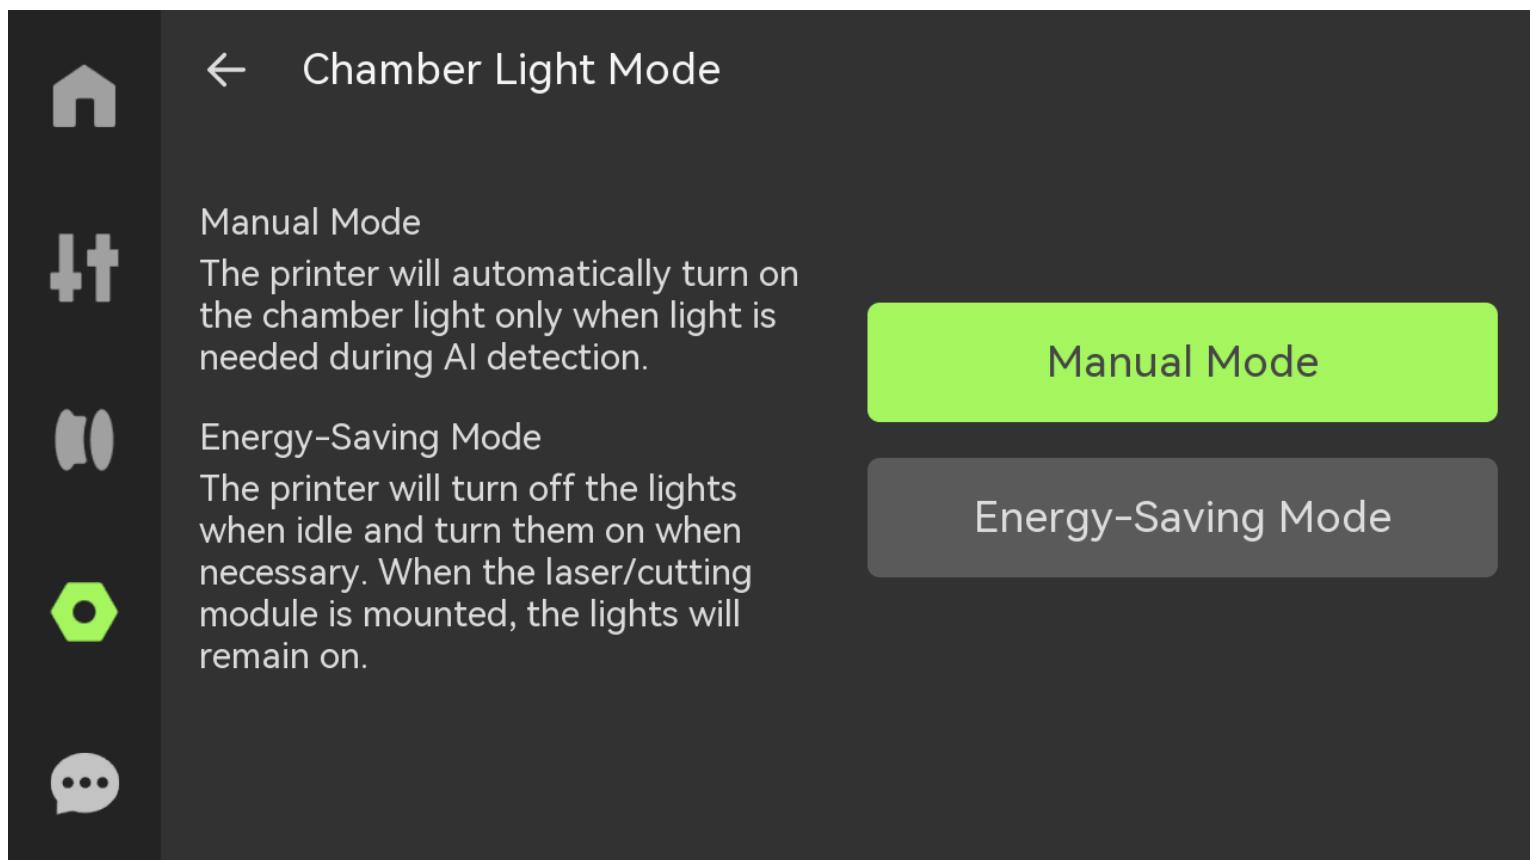

7. **Status Indicator:** Used to indicate the printer's health status and print task status.

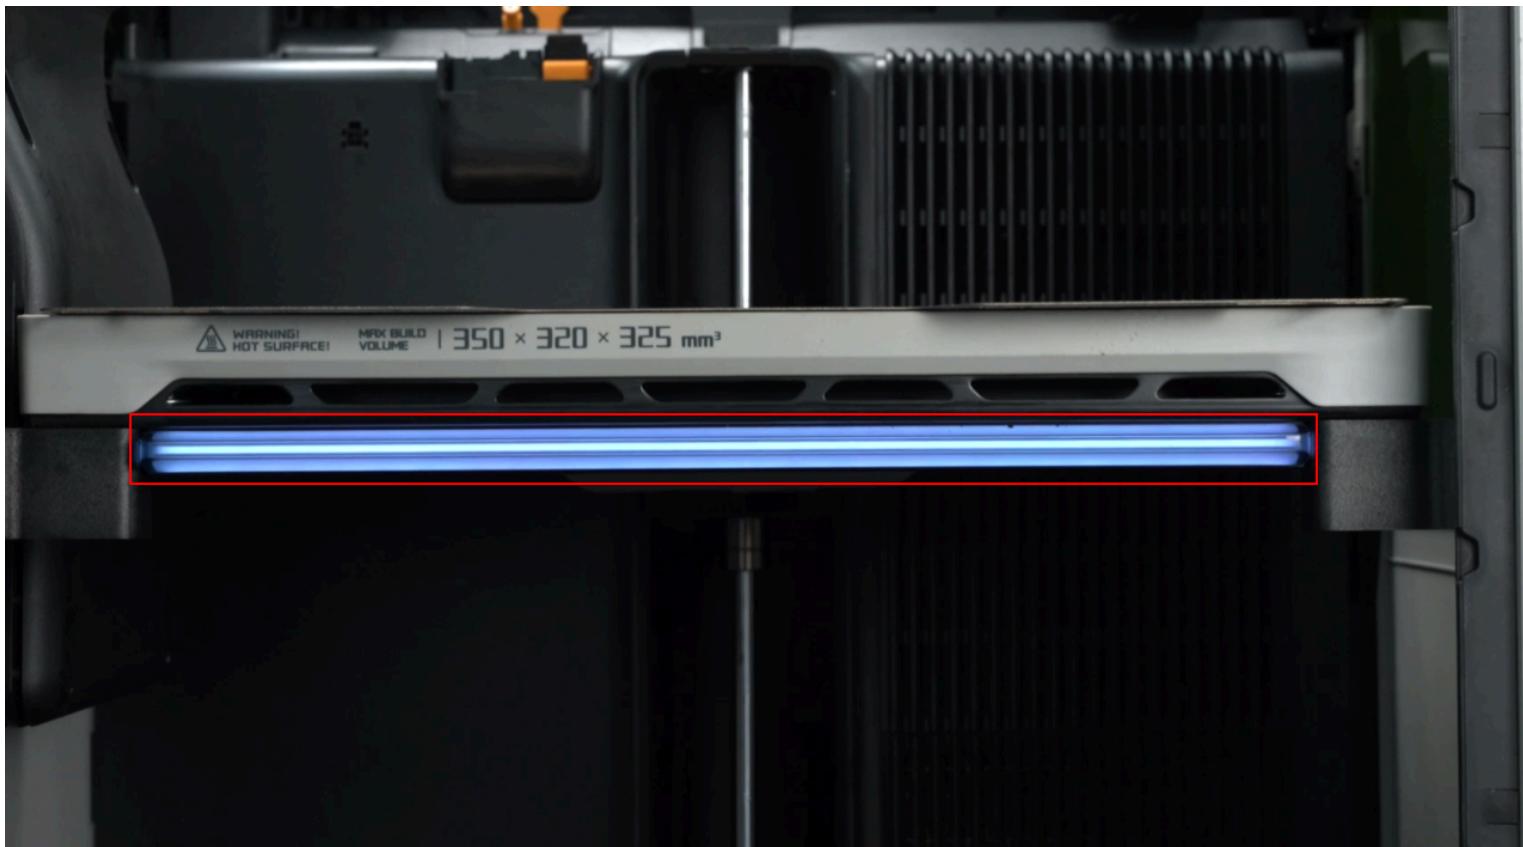

8. **Language:** Select the language in which the printer screen is displayed.

Settings

Status Indicator

Language

Device and Serial Number

LAN Only

Export Log to external storage

Restore to Factory Settings

Choose Language

Deutsch

English

Español

Français

Magyar nyelv

Italiano

9. **Device and Serial Number:** View the device name, device usage time, and serial number. Choose whether to join the user experience improvement program. Once enabled, the machine data (such as printing time, error information, etc.) can be uploaded to the official backend for subsequent statistics and improvements.



< Device and Serial Number

Device Info

Device Name

H2DL

Printer Used Time

4Days 6Hours

Serial Number

Bambu Lab H2D

0948

AMS 2 Pro (1)

19C0

Air Pump

20J1

10. **LAN Only:** When turned on, the printer can only be connected and accessed within the local network and cannot be accessed or controlled remotely over the Internet. If multiple devices are connected via the same LAN, live view or data sharing is possible.



< LAN Only

LAN Only



IP

Access Code




LAN Only Liveview




Enabling LAN Only mode will disable connection with Bambu Cloud and Bambu Handy.

11. **Export Log to External Storage:** Choose whether to export all logs, key photos (to determine micro radar and spaghetti problems), and G-code (to determine print quality problems) according to your needs.

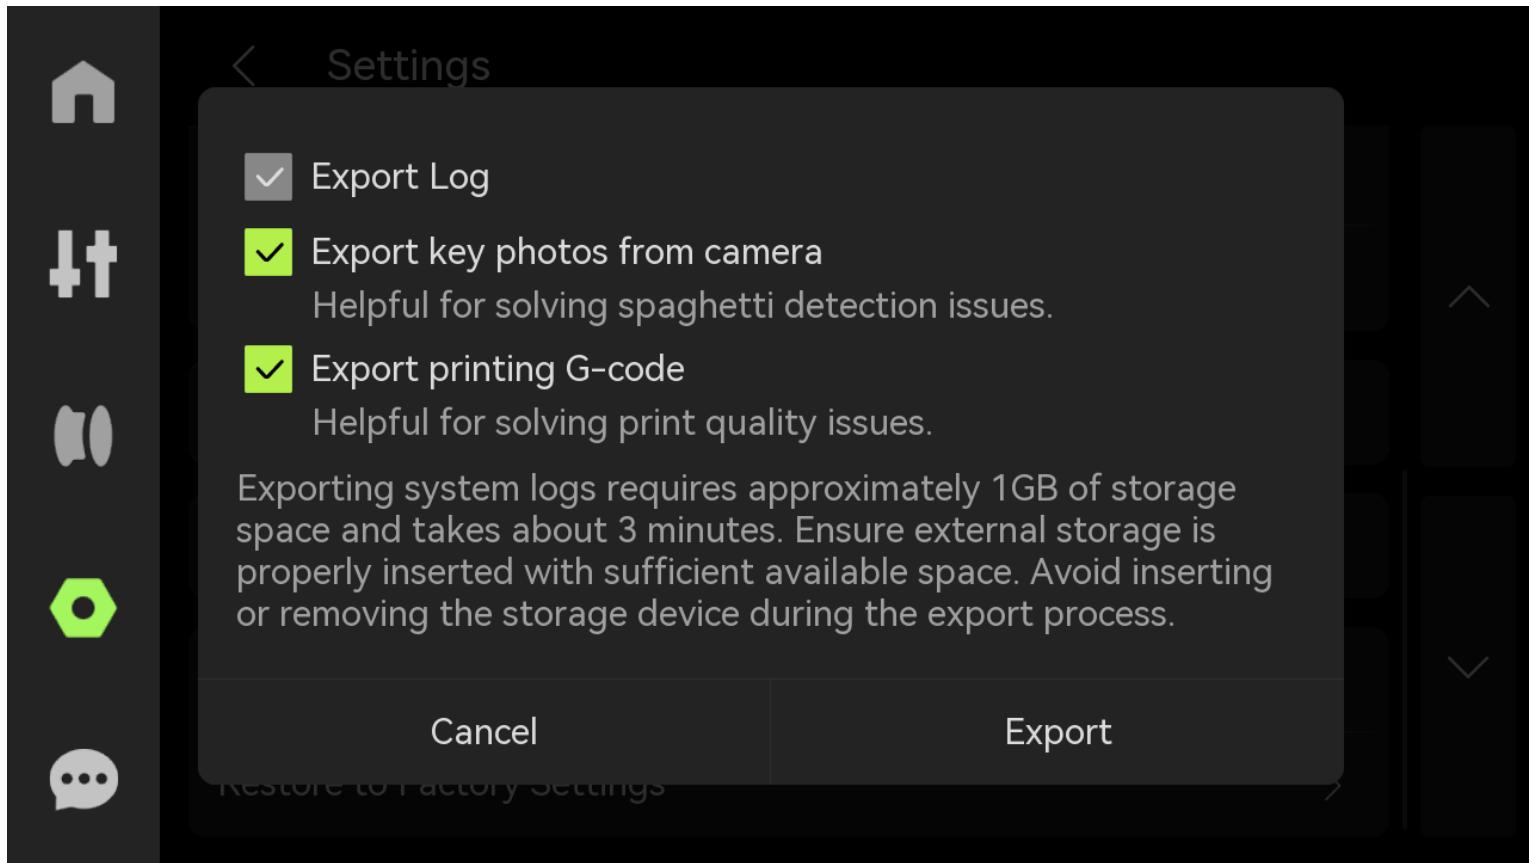


12. **Restore Factory Settings:** Reset the printer to the factory settings. Once reset, the settings cannot be restored.

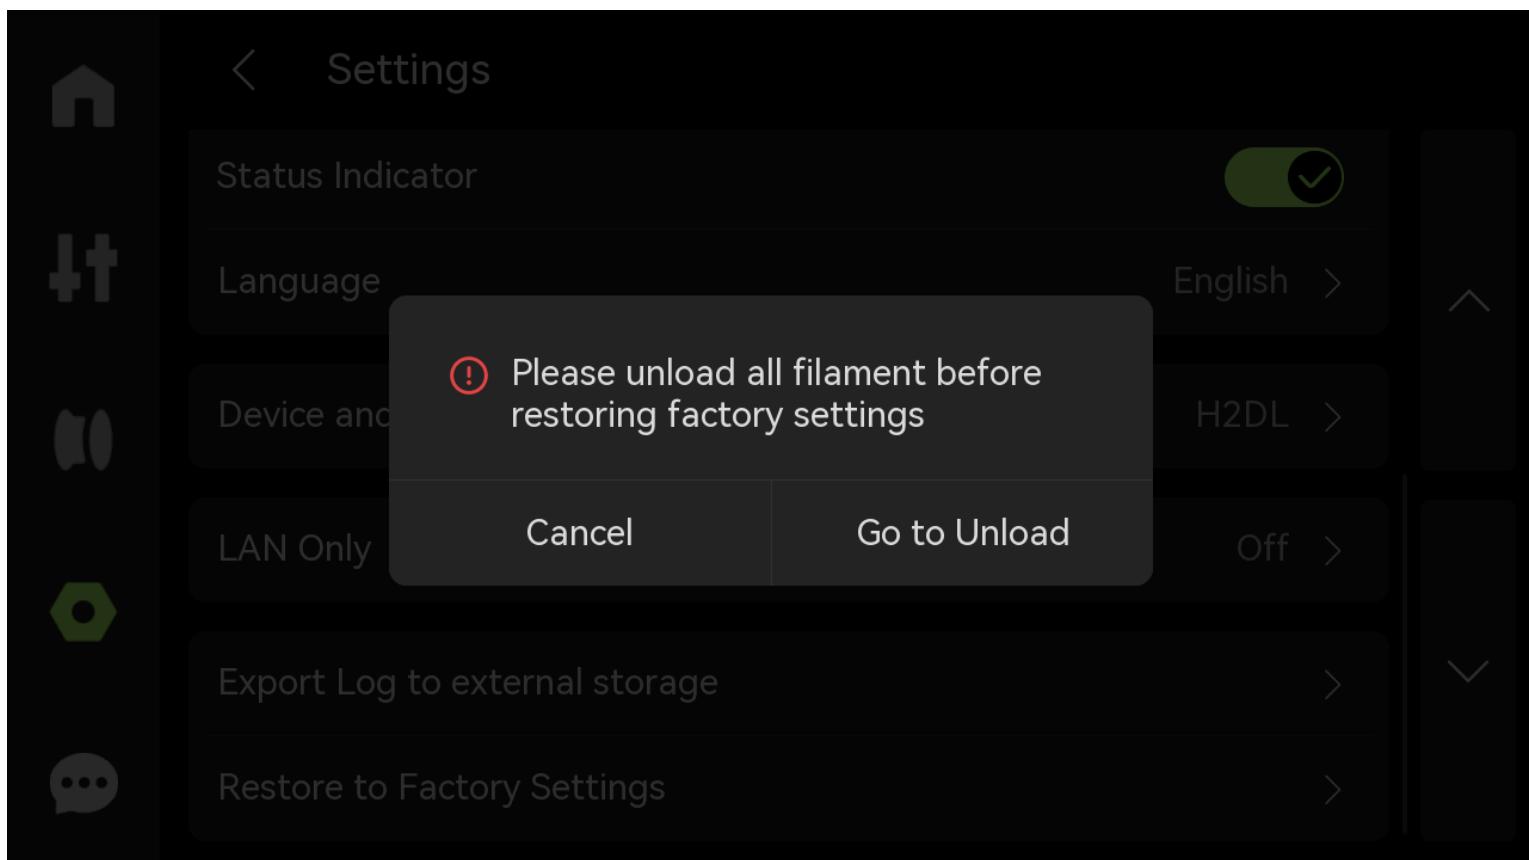

HMS

If there is a problem with the printer, an error message will be displayed here.

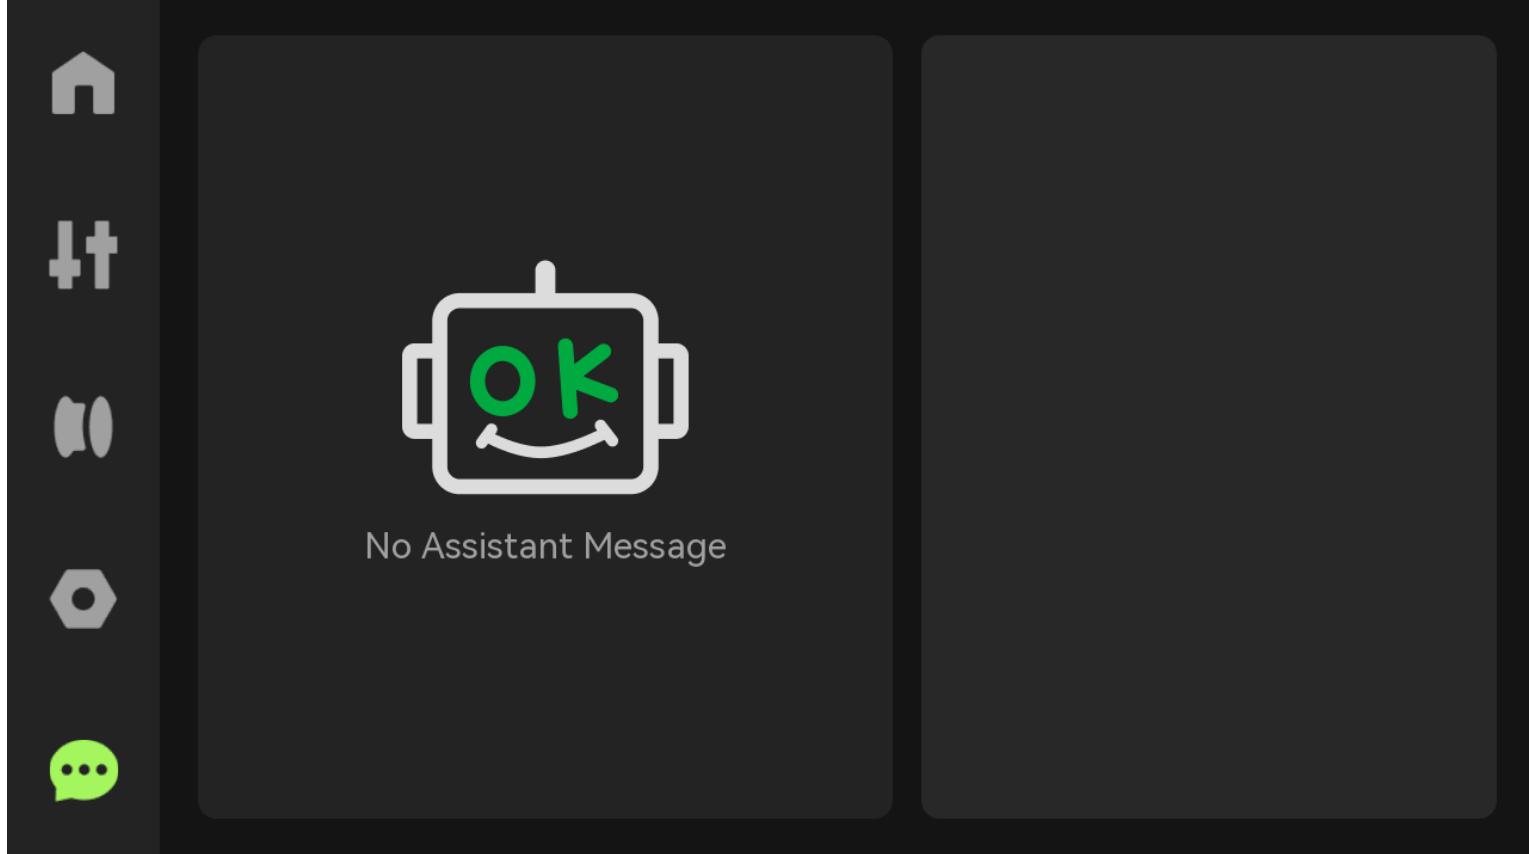


H2DL Laser Module

Note: Since the H2DL laser/cutting module does not involve the "filament" interface, this article will not explain it in detail.

Homepage


On the left side of the homepage is an on-screen menu bar that includes **Homepage**, **Controls**, **Filaments**, **Settings**, and **HMS**; on the right side is the **Print Files**, **Laser Module**, **Network Settings** and **HMS**.

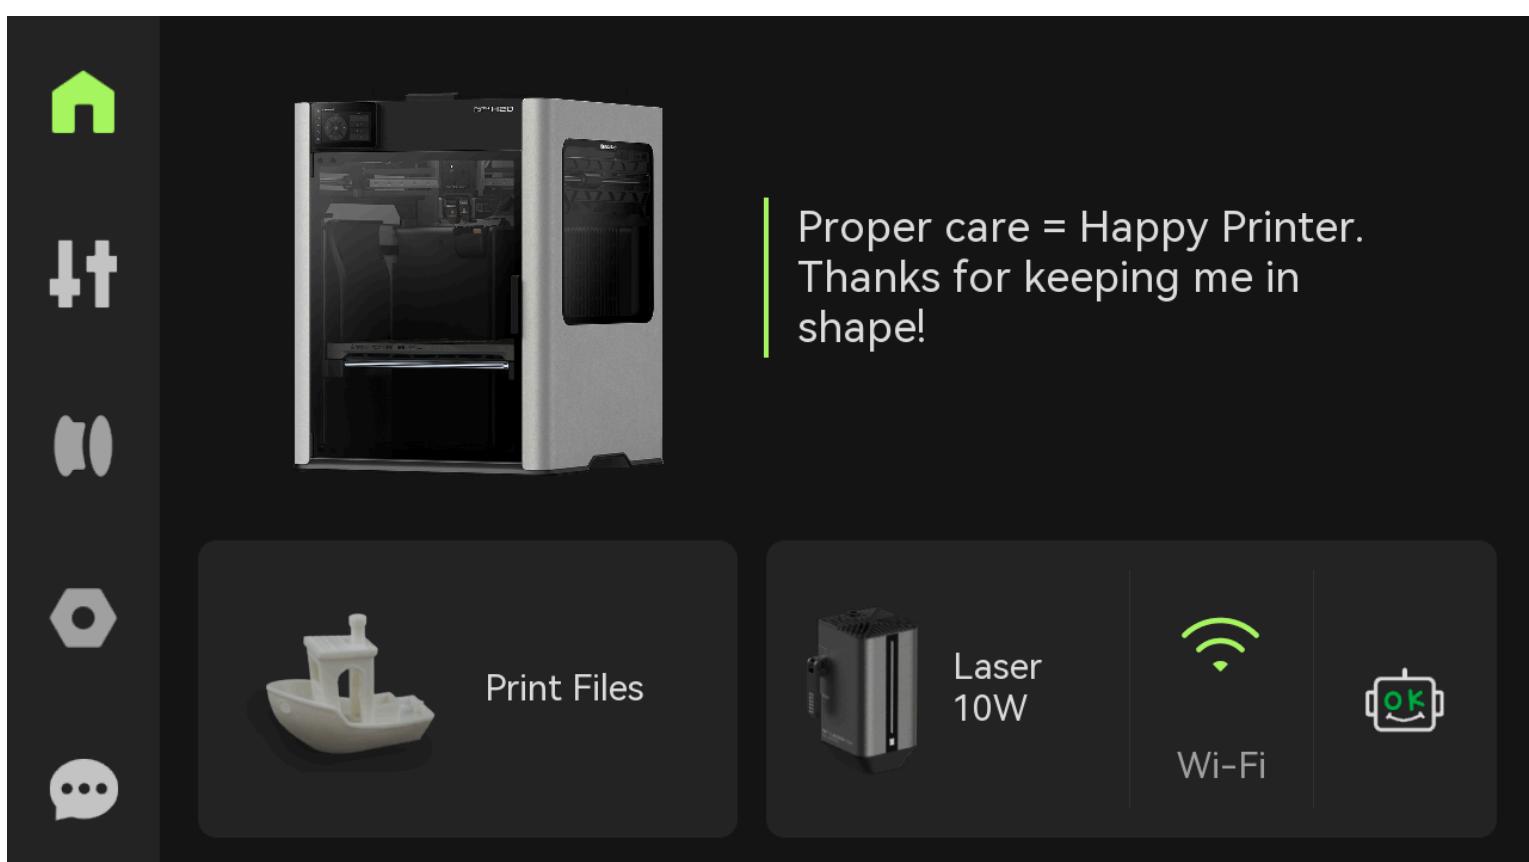



1. Exhaust Fan

Installed on the right lining of the printer, when the chamber cools down, the printer air condition system will switch to cooling mode, and the speed of the chamber exhaust fan will increase as the chamber temperature rises. If the current printer chamber temperature is not high and the heat dissipation demand of the printing filaments in the chamber is low, the speed of the chamber exhaust fan will drop to 30%.

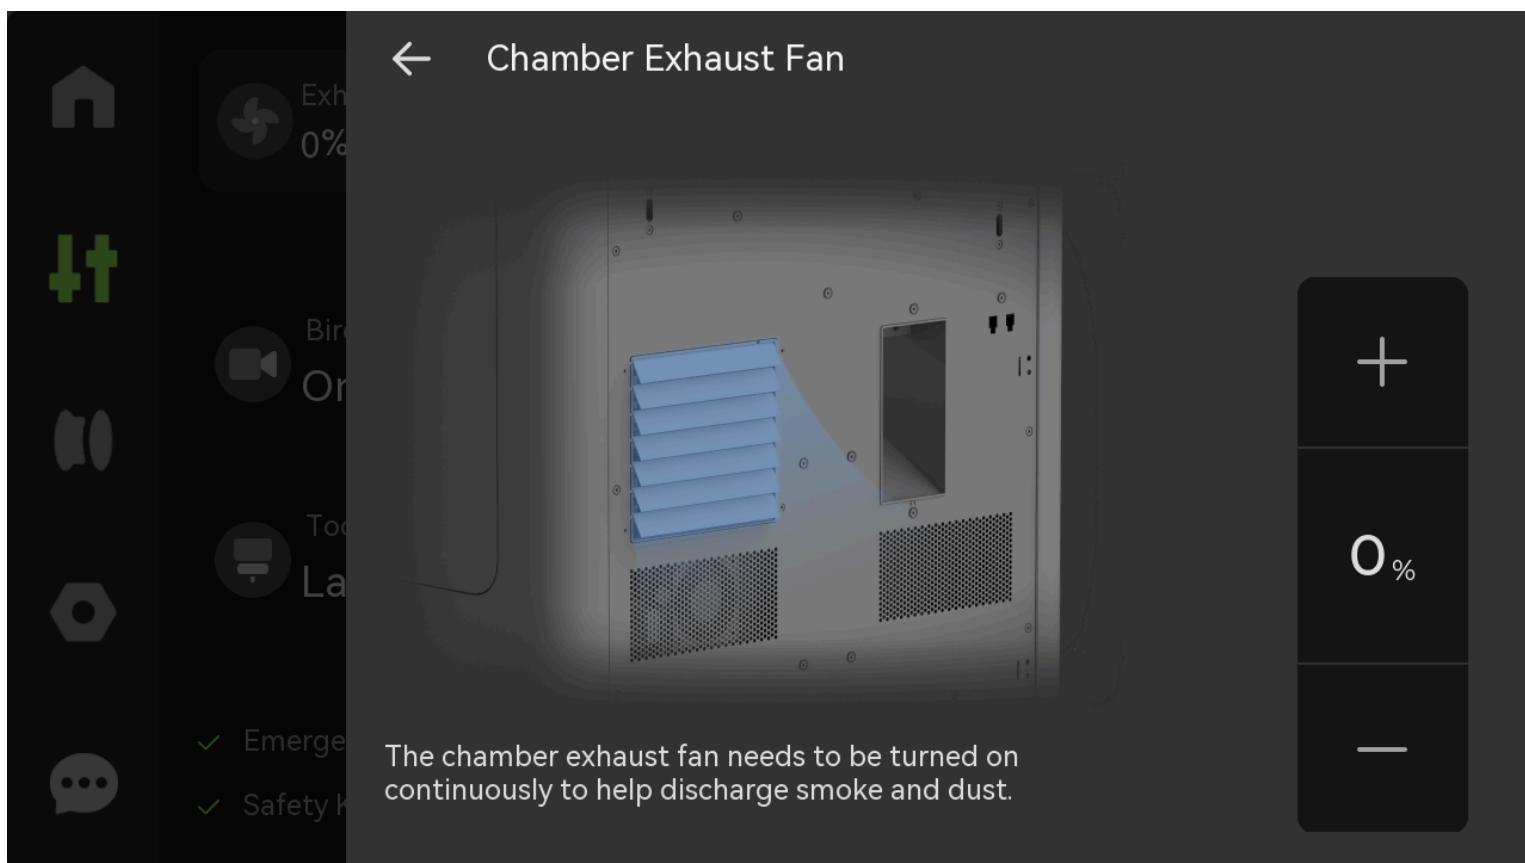


2. Air-assist

When the air-assist module is working, the printer will detect its status in real time and will report an error to the user when the status is abnormal. Turning on the air-assist not only helps improve the engraving quality, but also avoids the risk of fire caused

by heat accumulation when processing some materials.


3. Motion

- ▶ **Toolhead:** Click +1 or +10 to control the toolhead movement in the X-axis and Y-axis.
- ▶ **Heatbed:** Click the 1 or 10 move button to raise or lower the heatbed.

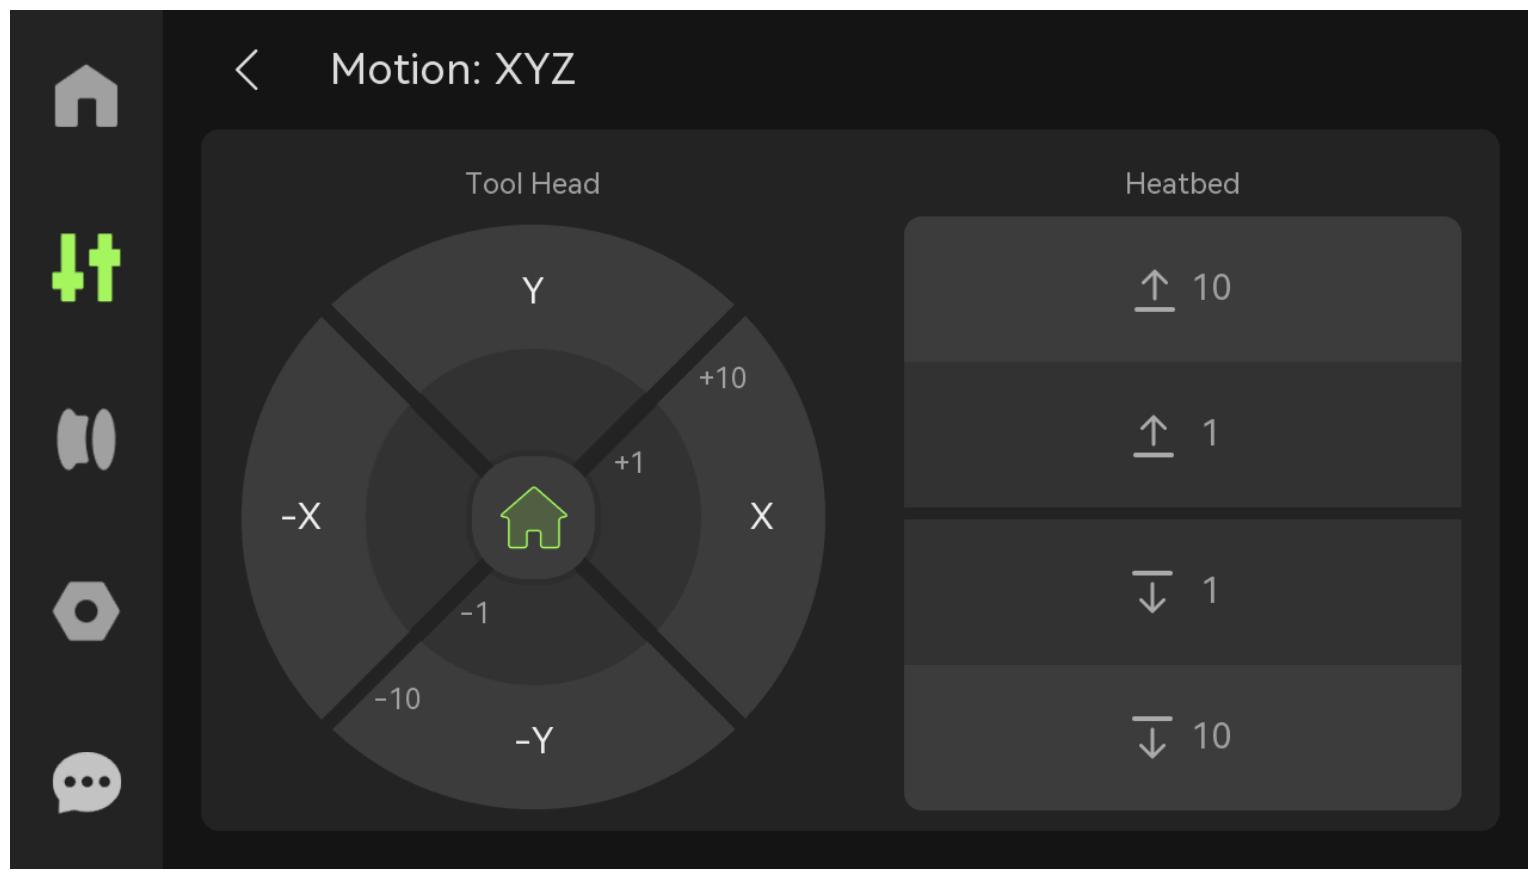


4. BirdsEye Camera

- ▶ If the birdseye camera is not installed or not installed properly, it will display "Not installed".
- ▶ If it is installed but not setup, it will display "Not set up yet".

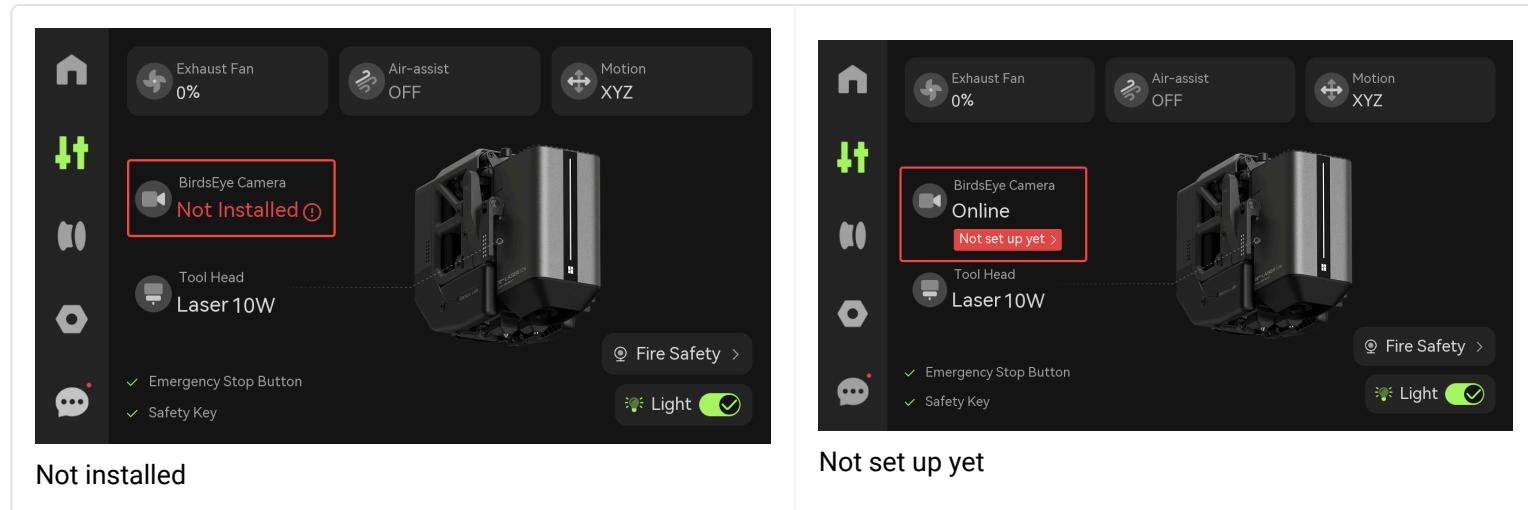

5. Toolhead

Displays the power type and status of the laser module. If it is not initialized, it will display "Not set up yet".

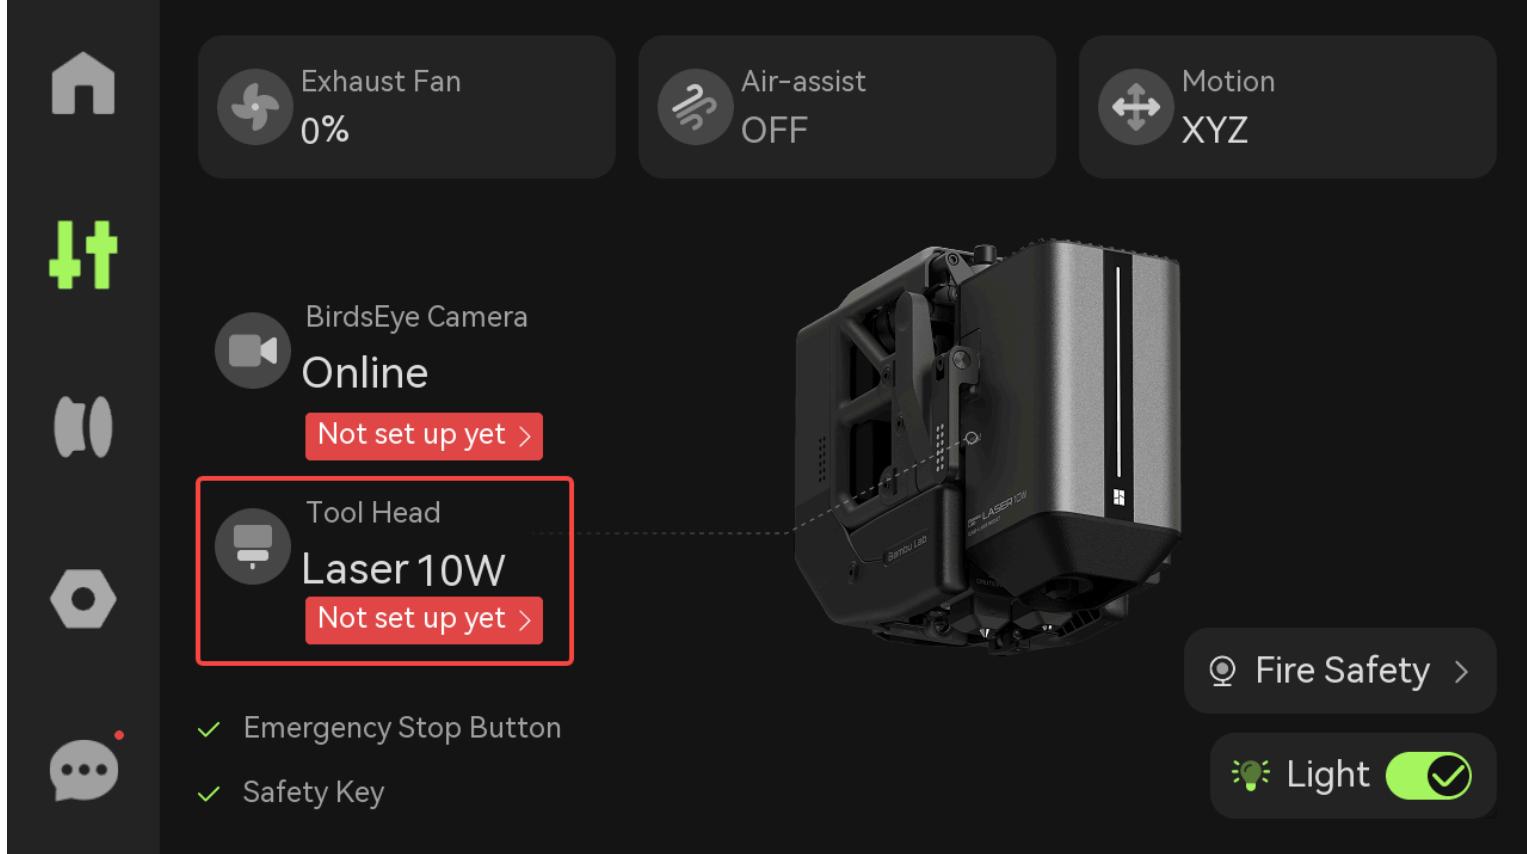

Exhaust Fan 0% Air-assist OFF Motion XYZ

BirdsEye Camera Online Not set up yet >

Tool Head Laser 10W Not set up yet >


✓ Emergency Stop Button ✓ Safety Key

Fire Safety > Light

The interface shows a central camera feed of a printer. On the left, there are icons for home, plus, minus, and hex. On the right, there are buttons for exhaust fan (0%), air-assist (OFF), motion (XYZ), fire safety, and light (on). Below the camera, sections for 'BirdsEye Camera' and 'Tool Head' are shown. The 'Tool Head' section for 'Laser 10W' is highlighted with a red box and a 'Not set up yet >' button. Below this, a list shows 'Emergency Stop Button' and 'Safety Key' status as 'Not Installed' with an exclamation mark.

6. Emergency Stop Button & Safety Key

Displays whether the emergency stop button and safety key are installed; if an accessory is not installed, "Not Installed" will be displayed.

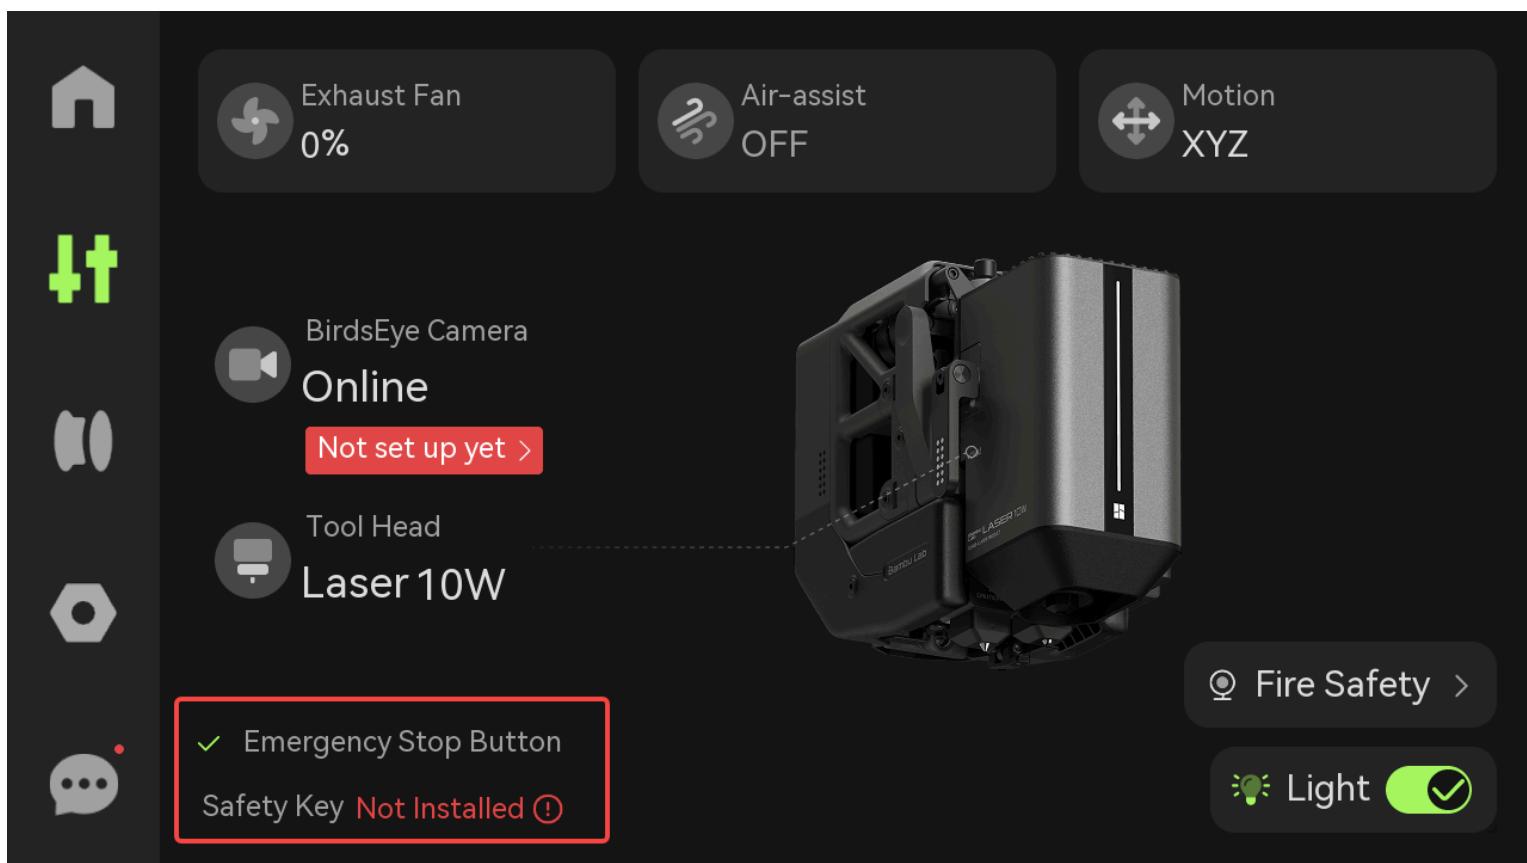

Exhaust Fan 0% Air-assist OFF Motion XYZ

BirdsEye Camera Online Not set up yet >


Tool Head Laser 10W

✓ Emergency Stop Button Safety Key Not Installed !


Fire Safety > Light

The interface shows a central camera feed of a printer. On the left, there are icons for home, plus, minus, and hex. On the right, there are buttons for exhaust fan (0%), air-assist (OFF), motion (XYZ), fire safety, and light (on). Below the camera, sections for 'BirdsEye Camera' and 'Tool Head' are shown. The 'Tool Head' section for 'Laser 10W' is highlighted with a red box. Below this, a list shows 'Emergency Stop Button' and 'Safety Key' status as 'Not Installed' with an exclamation mark.

7. Fire Safety

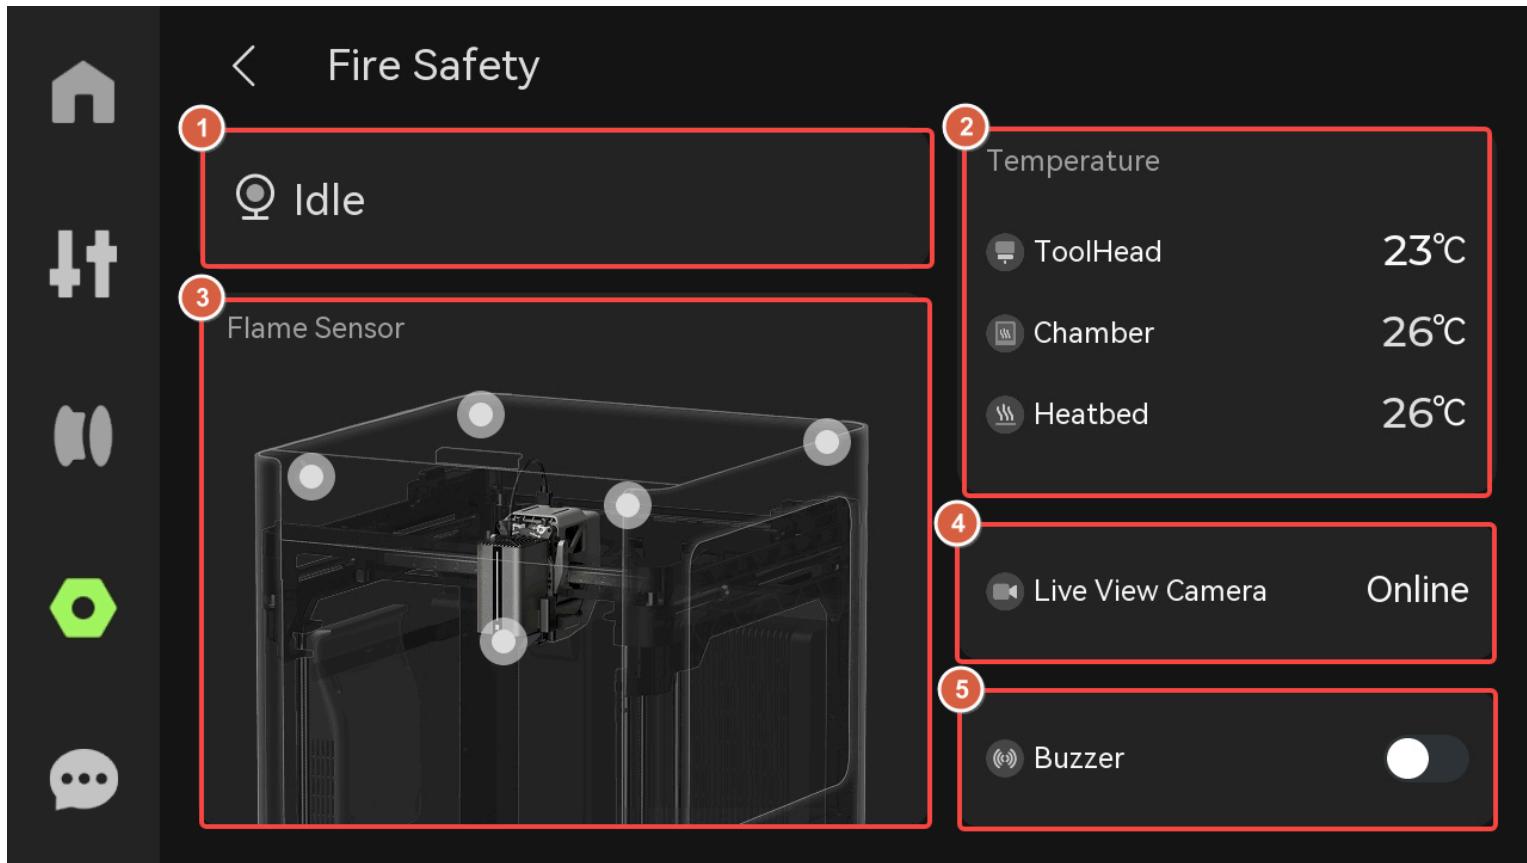

- 1. Flame Safety Status:** Automatically activates upon laser task initiation and maintains continuous monitoring until task completion.
- 2. Temperature:** The toolhead temperature, chamber temperature and heatbed temperature inside the chamber can be monitored in real time.
- 3. Flame Sensor:** Including infrared sensors at the four corners of the chamber, as well as the temperature sensor and flame sensor that comes with the laser module. If the sensor detects a flame, the sensor icon on the screen will flash red.

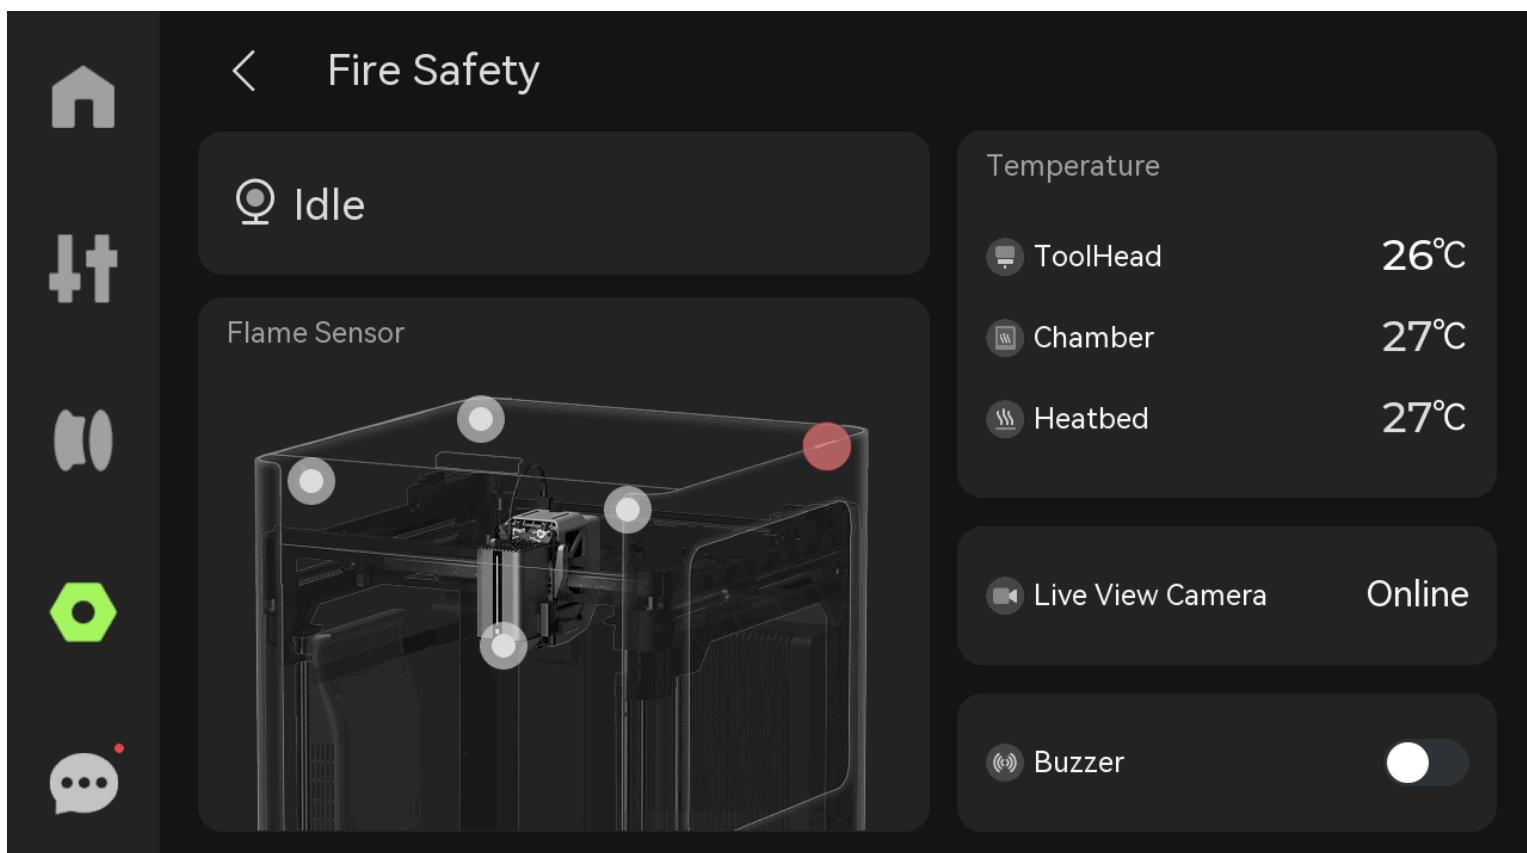

- 4. Live View Camera:** The side-mounted live view camera captures real-time processing within the chassis, using AI algorithms to analyze image features for fire detection.





5. **Buzzer:** Triggers a fire alarm upon detecting flame signatures, including audible alerts (via buzzer) and visual warnings (pop-up notifications), prompting immediate user intervention. Users can manually turn the buzzer on and off here to test whether it is normal.

For details about the flame detection feature, please refer to: [Introduction to H2D Flame Detection Feature](#).

8. Light


Click this button to control the LED light.

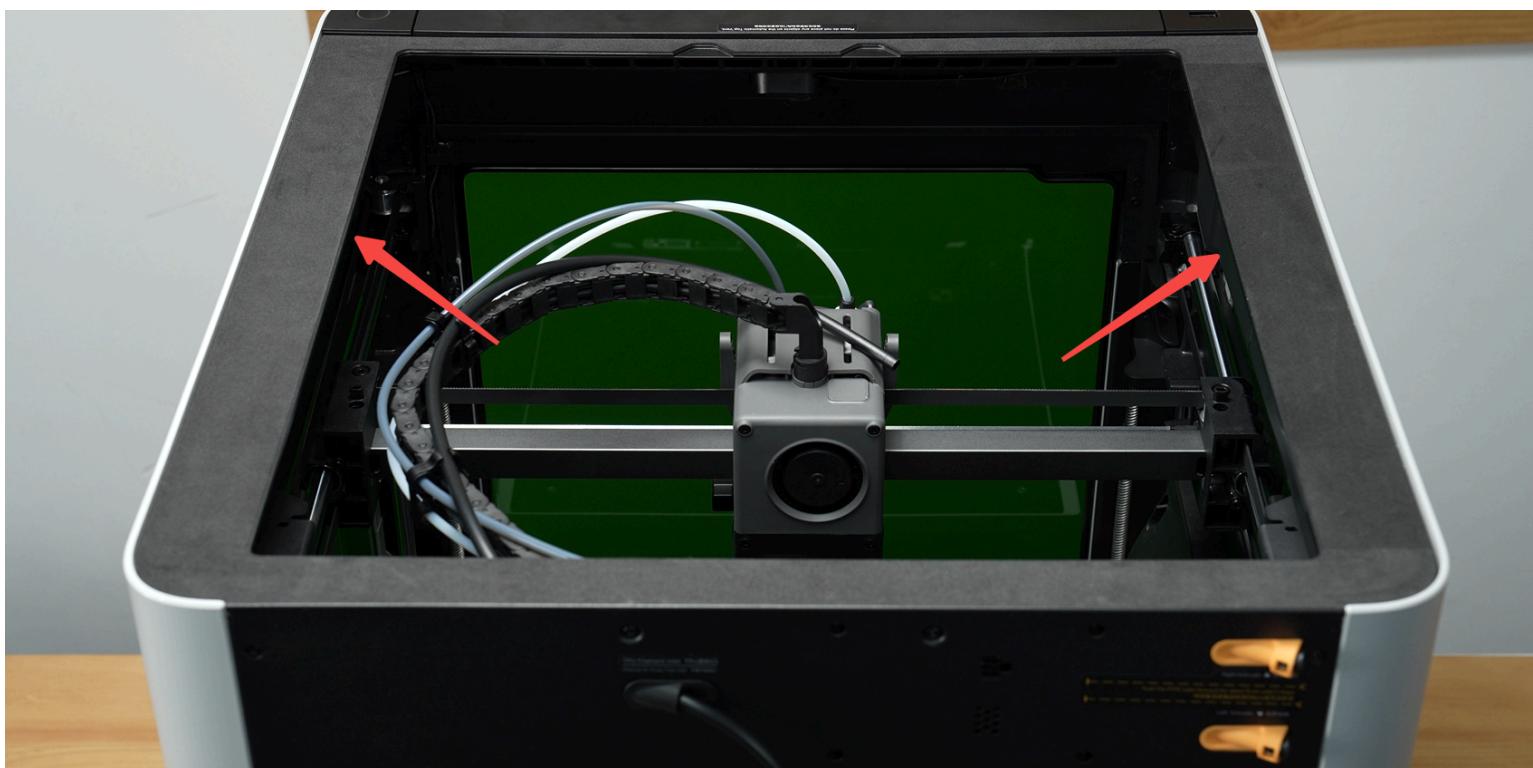

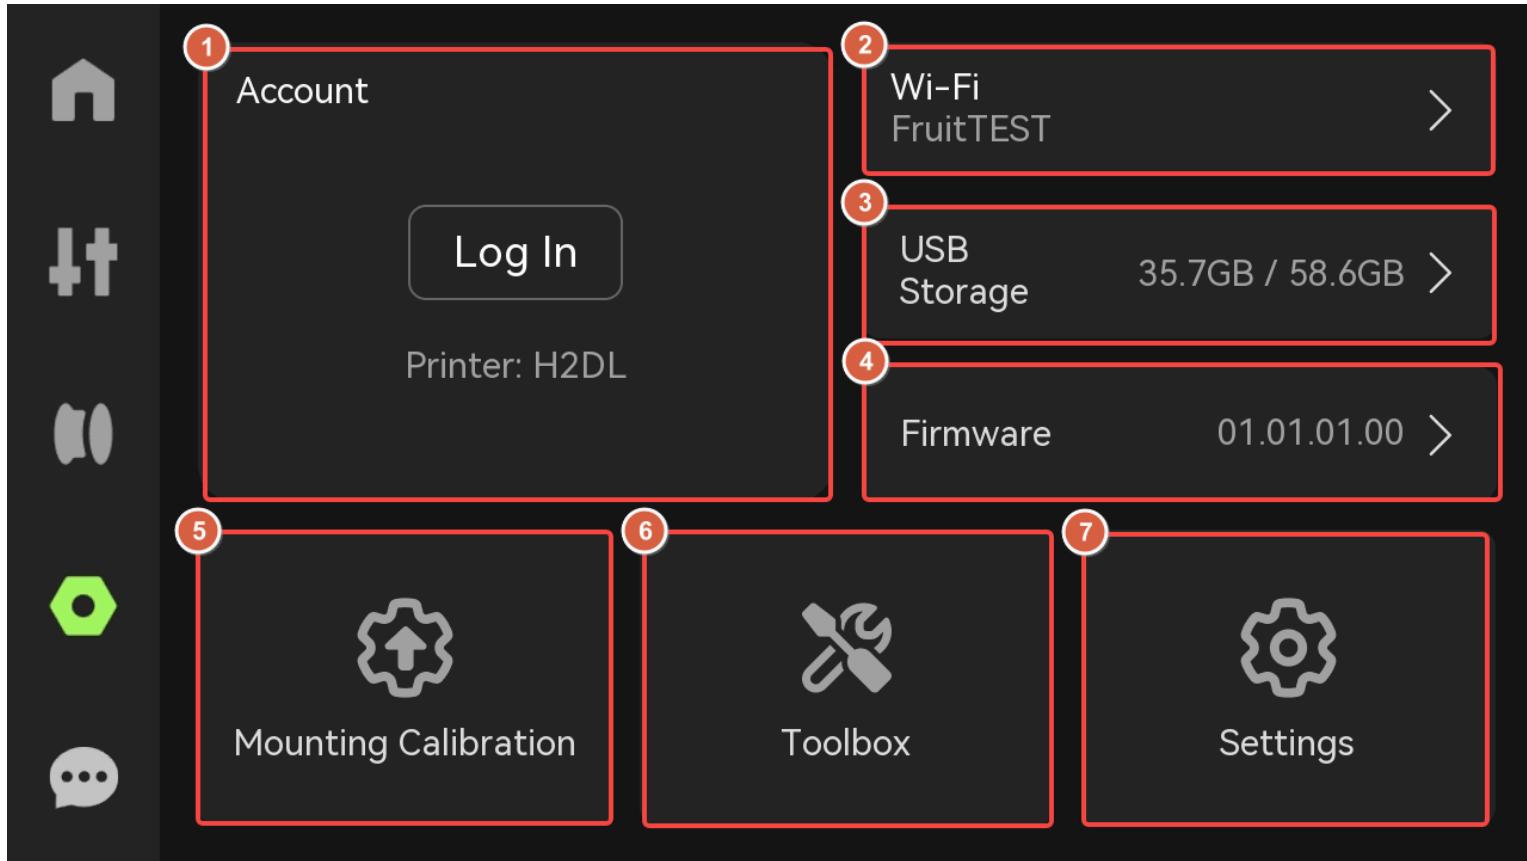


1. Account

Open Bambu Handy and scan the code to access the account.

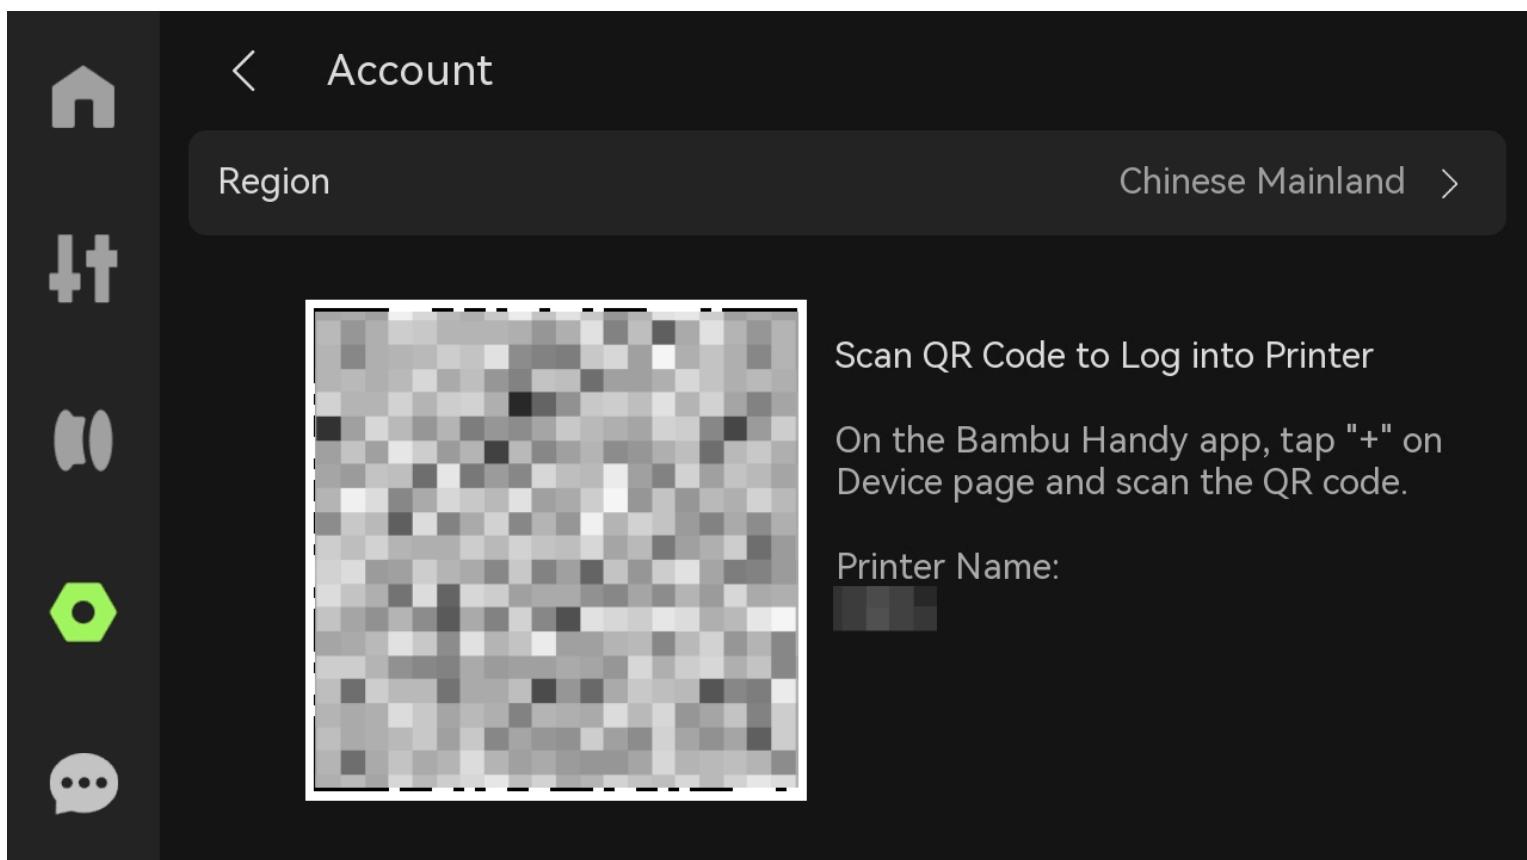

2. Wi-Fi

Set up the WLAN, view the current network, test network, or view and add other networks.

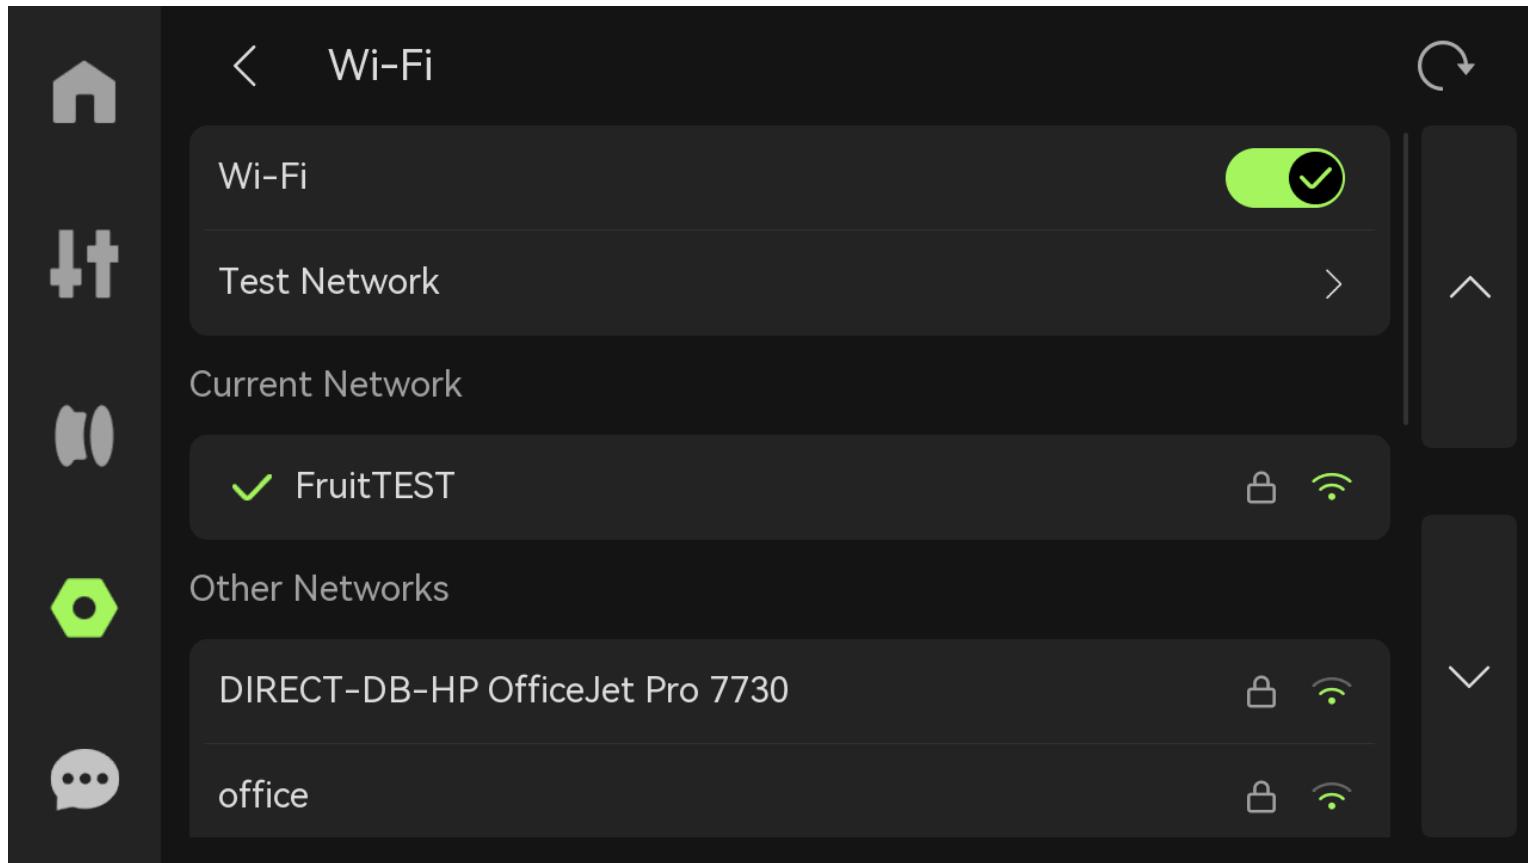

3. USB Storage

- **Storage:** Display the used capacity and maximum capacity of the USB flash drive.
- **Eject:** Click "Eject" to eject the USB drive safely.
- **Format external storage:** Once reset, the storage cannot be restored.

For USB flash drive specifications and usage recommendations, please refer to: [Specifications and Usage](#)
[Recommendations of H2D USB Flash Drives](#).

< USB Storage



Storage

35.7GB / 58.6GB



Eject



Format the external storage



4. Firmware

View the current version of the device and historical versions, or perform offline upgrades. If the firmware needs to be updated, the "Update" button in the upper right corner will light up.

< Firmware

Update



Bambu Lab H2D

01.01.01.00



AMS 2 Pro (1)

02.00.19.47



Laser 10W

00.00.09.57



Air Pump

00.00.10.27



History Versions



Update Offline



5. Mounting Calibration

After every power-up of the printer, motor restart, or occurrence of motor step loss, if you want to use the laser module, you need to recalibrate it. The purpose is to adjust the laser focus position and to set the printer into absolute positioning mode. When calibration is necessary, the "Assistant" page will automatically display a prompt. Before calibration, please ensure that the laser platform is placed on the heatbed.

< Laser Module Mounting Calibration

1/3 Install the Laser Module

- ✓ Slide in the Laser Module
- ✓ Plug in the Laser Connector
- ⚠ Fasten the Quick-release Lever
- ⚠ Install Air Assist Tube and connect it to the Laser Module

⚠ This item requires you to check manually



Next

6. Toolbox

< Toolbox

Setup

Laser Module Setup 10W >

Laser Module Mounting Calibration 10W >

BirdsEye Camera Setup >

Maintenance

Laser Module Cleaning >

Fire Safety >

- ▶ **Laser Module Setup:** When installing the laser module for the first time, setup is required. This process does not need to be repeated afterward unless the laser module is replaced, in which case re-setup is necessary. During this step, ensure that the laser platform and materials (calibration card) are placed on the heatbed.

For more information on laser focus calibration, please refer to the relevant section in the Wiki: [Laser Focus Calibration Introduction](#).

< Laser Module Setup

1/4 Remove the screw

! Remove the screw fixing the air pump

! Install the exhaust system



! This item requires you to check manually

Next

► **Laser Module Mounting Calibration:** Same as above "mounting calibration".

► **BirdsEye Camera Setup:** The BirdsEye camera is calibrated at the factory and can be used immediately. However, due to factors such as transportation or prolonged use, the calibration parameters of the BirdsEye camera may gradually become less effective. If you are dissatisfied with the precision of laser processing, you can trigger the BirdsEye camera setup. During the setup process, it is necessary to use the four markers on the heatbed. Therefore, in this step, no other items should be placed on the heatbed, and it is essential to ensure that the markers are visible to the BirdsEye camera to improve the accuracy of the imaging.

< BirdsEye Camera Setup

1/4 Install the BirdsEye Camera

✓ Connect the BirdsEye Camera cable

! Make sure the BirdsEye Camera locked well



! This item requires you to check manually

Next

► **Laser Module Cleaning:** Regular cleaning of the laser module prevents the accumulation of powder and debris, ensuring the normal operation of the equipment and extending its service life. The printer will assess the degree of contamination of the



printer based on the total engineering time and laser task type in Bambu Suite. The length of the green progress bar on the left side of the screen will decrease as the laser module is cleaned; if the progress bar turns red and displays "Cleaning Required Immediately", cleaning is required. Specific tutorials can be obtained through the QR code on the right.

For more information on laser module cleaning, please refer to [Regular maintenance recommendations for 10w laser module](#).





7. **Fire Safety:** Same as above "Fire safety".



7. Settings

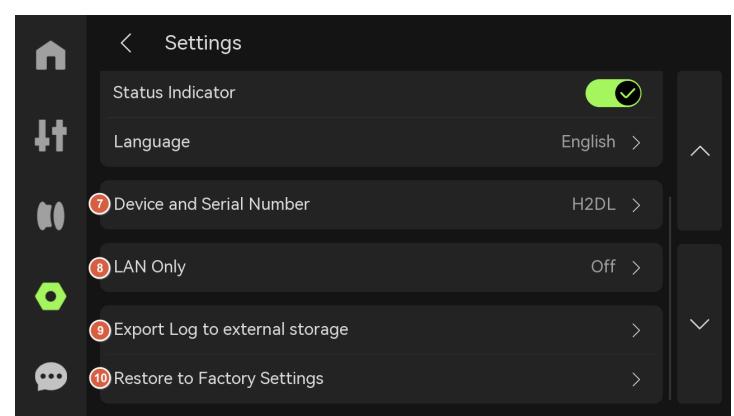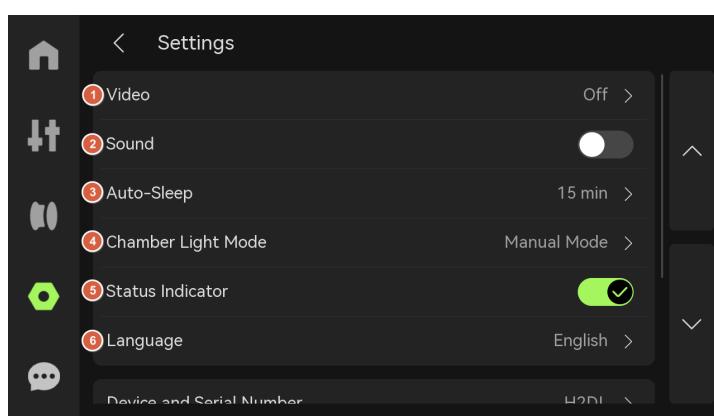

1. **Video:** Choose to turn the video function on or off.

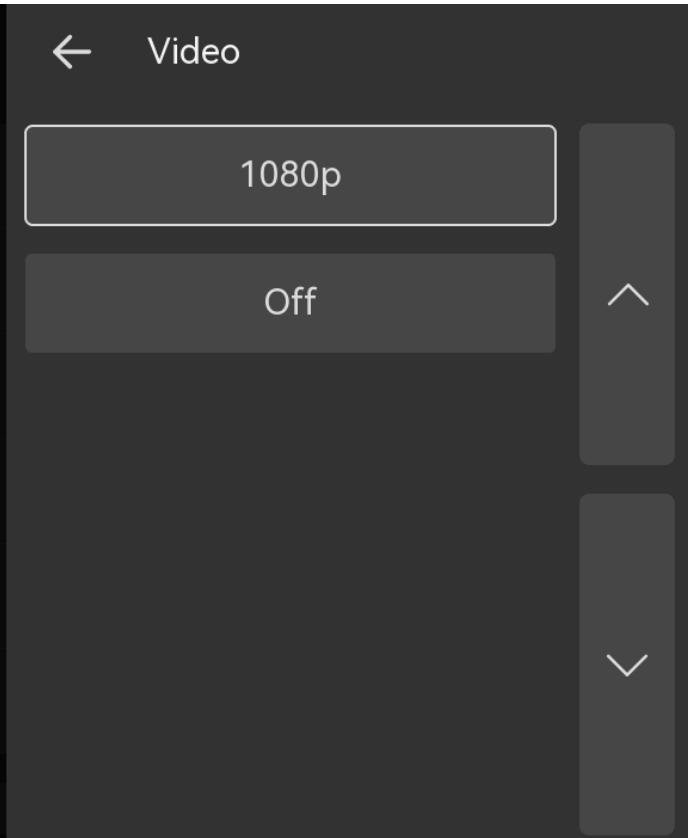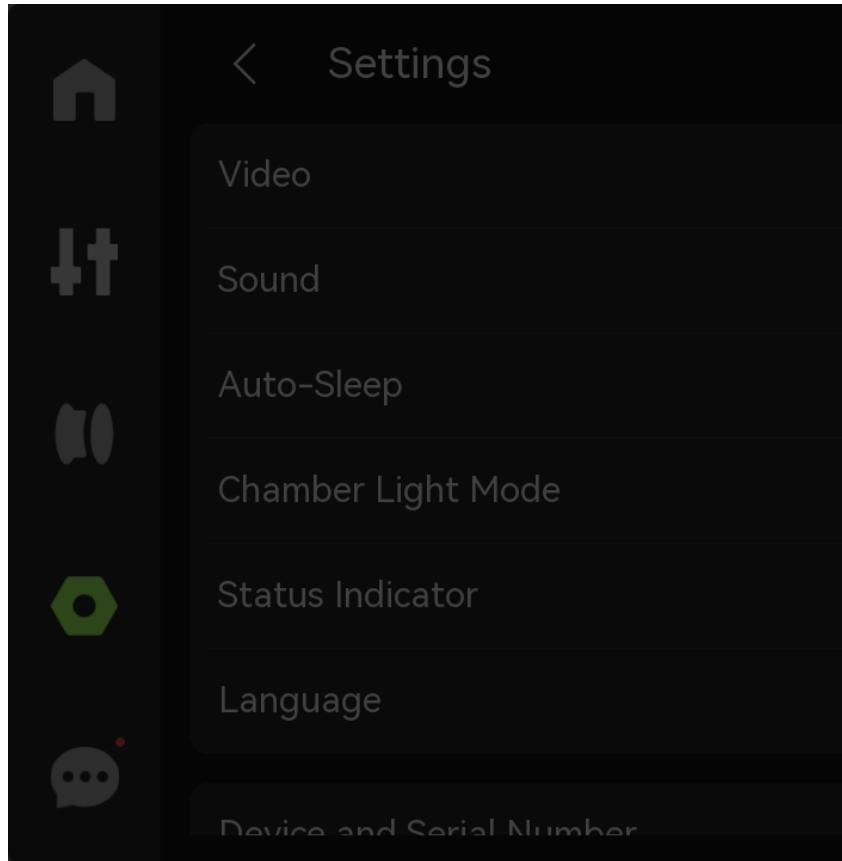

2. **Sound:** If you turn on the option, the printer will emit a sound when it is turned on, when printing starts, and when printing ends.
3. **Auto-Sleep:** Select the length of time the printer will automatically sleep.

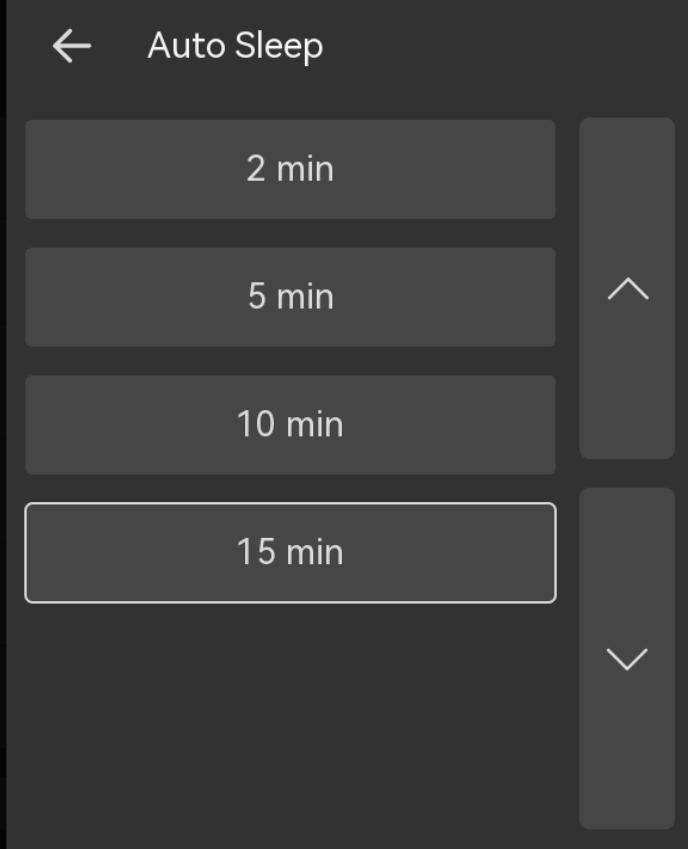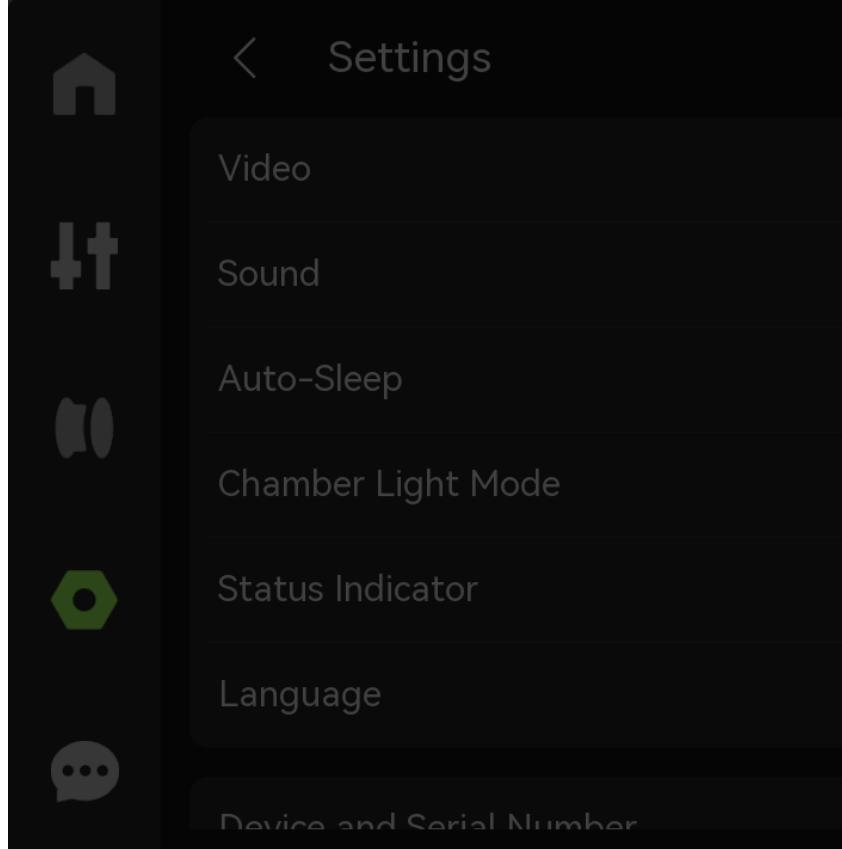

4. **Chamber Light Mode:** You can choose manual mode or energy-saving mode according to actual needs.



← Chamber Light Mode



Manual Mode

The printer will automatically turn on the chamber light only when light is needed during AI detection.

Manual Mode




Energy-Saving Mode

The printer will turn off the lights when idle and turn them on when necessary. When the laser/cutting module is mounted, the lights will remain on.


Energy-Saving Mode




5. **Status Indicator:** Used to indicate the printer's health status and print task status.

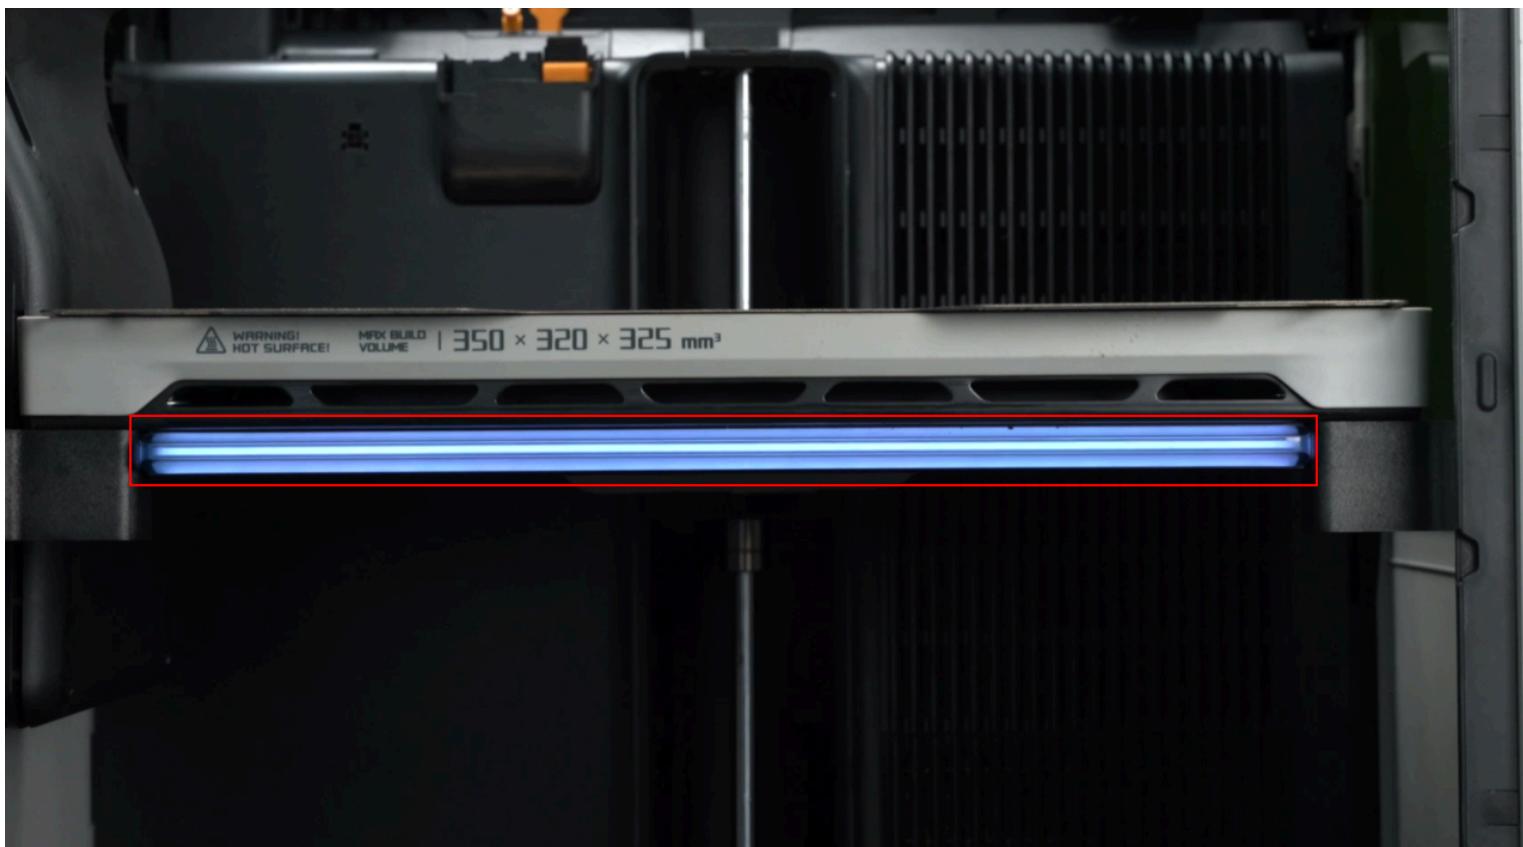

6. **Language:** Select the language in which the printer screen is displayed.

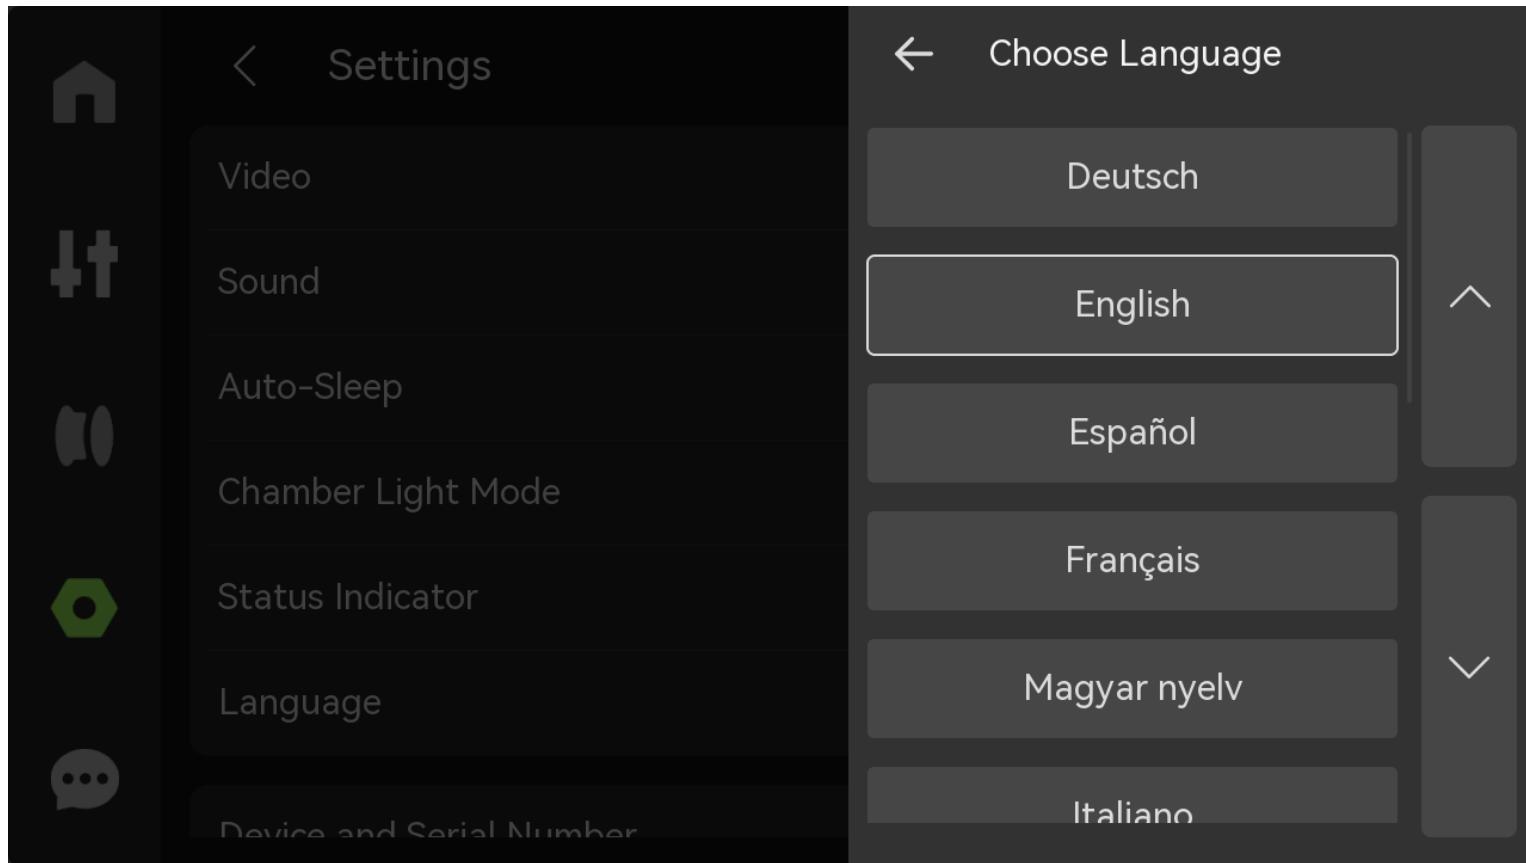

7. **Device and Serial Number:** View the device name, device usage time, and serial number. Choose whether to join the user experience improvement program. Once enabled, the machine data (such as printing time, error information, etc.) can be uploaded to the official backend for subsequent statistics and improvements.

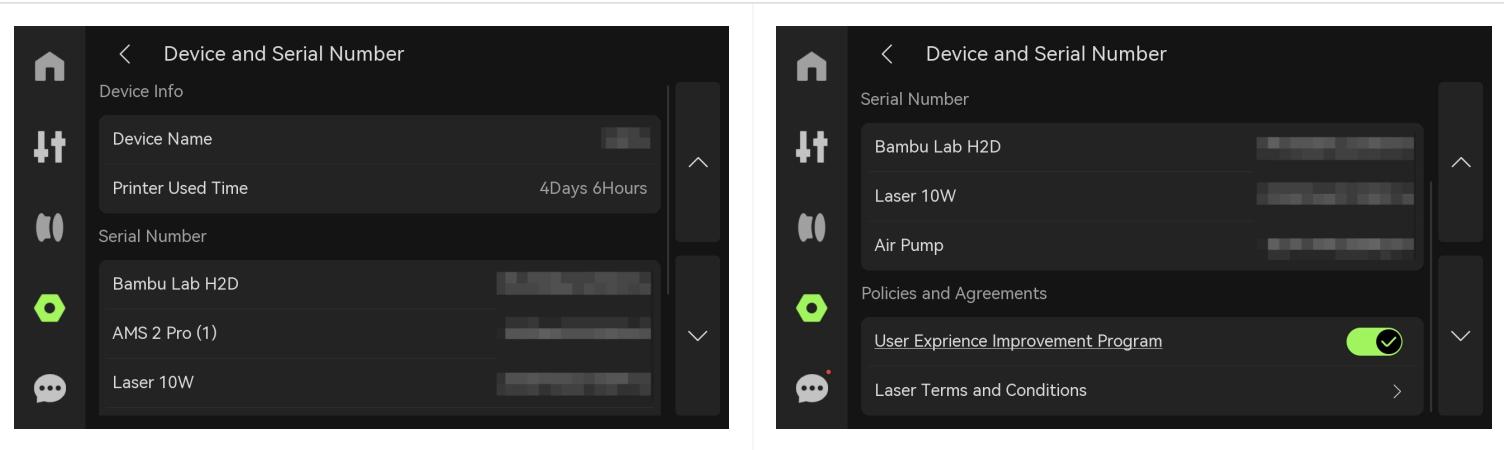

8. **LAN Only:** When turned on, the printer can only be connected and accessed within the local network and cannot be accessed or controlled remotely over the Internet. If multiple devices are connected via the same LAN, live view or data sharing is possible.

LAN Only

LAN Only



IP

Access Code



LAN Only Liveview



Enabling LAN Only mode will disable connection with Bambu Cloud and Bambu Handy.

9. **Export Log to external storage:** Choose whether to export all logs, key photos (to determine micro radar and spaghetti problems), and G-code (to determine print quality problems) according to your needs.

Settings

Export Log

Export key photos from camera

Helpful for solving spaghetti detection issues.

Export printing G-code

Helpful for solving print quality issues.

Exporting system logs requires approximately 1GB of storage space and takes about 3 minutes. Ensure external storage is properly inserted with sufficient available space. Avoid inserting or removing the storage device during the export process.


Cancel

Export

Restore to Factory Settings


10. **Restore to Factory Settings:** Reset the printer to the factory settings. Once reset, the settings cannot be restored.

Settings

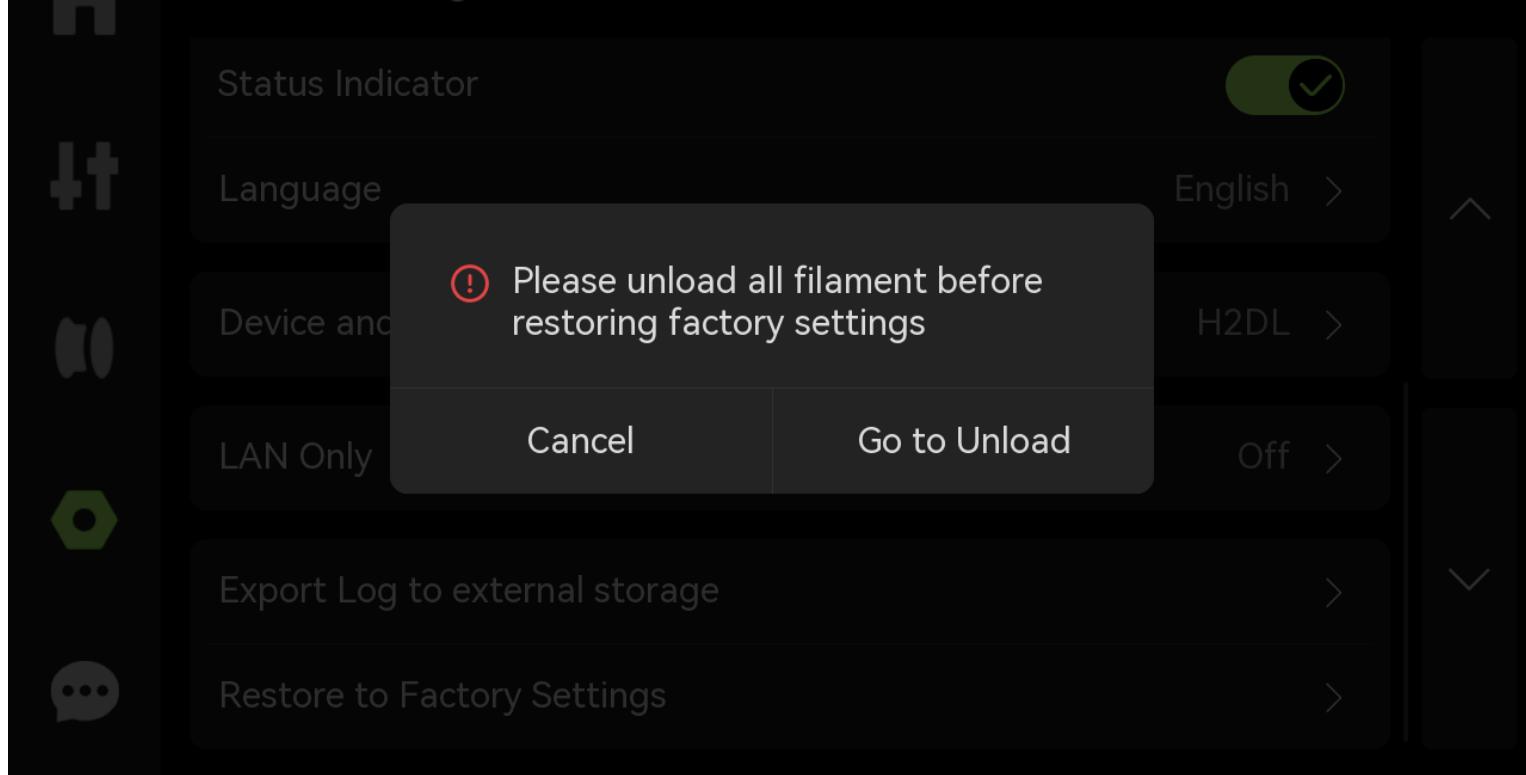

HMS

If there is a problem with the printer, an error message will be displayed here.

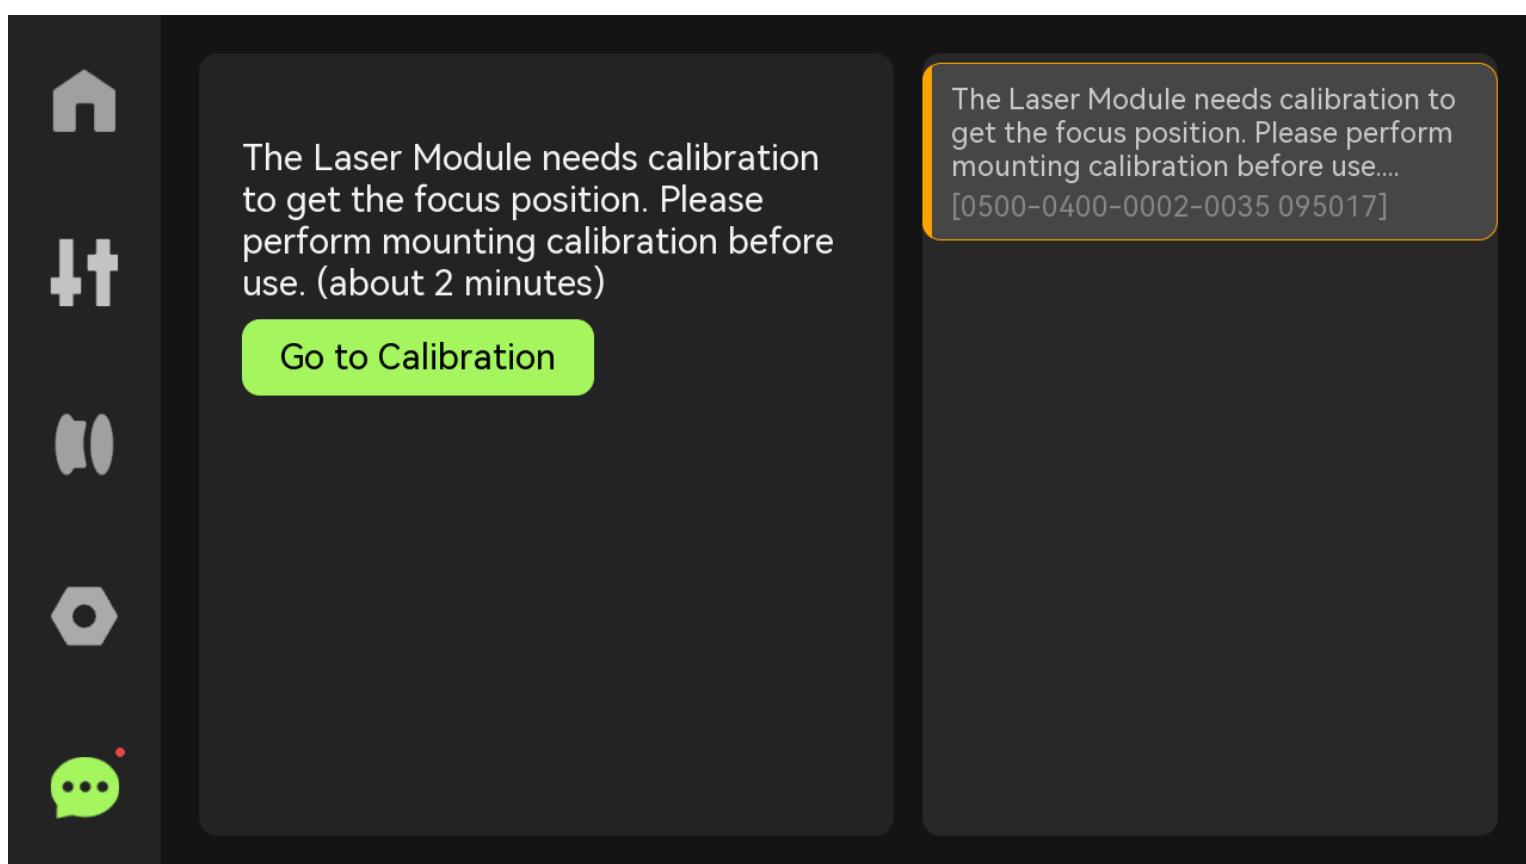


H2DL Cutting Module

Homepage

On the left side of the homepage is an on-screen menu bar that includes **Homepage**, **Controls**, **Filaments**, **Settings**, and **HMS**; on the right side is the **Print Files**, **Cutting Module**, **Network Setting**, and **HMS**.




Controls

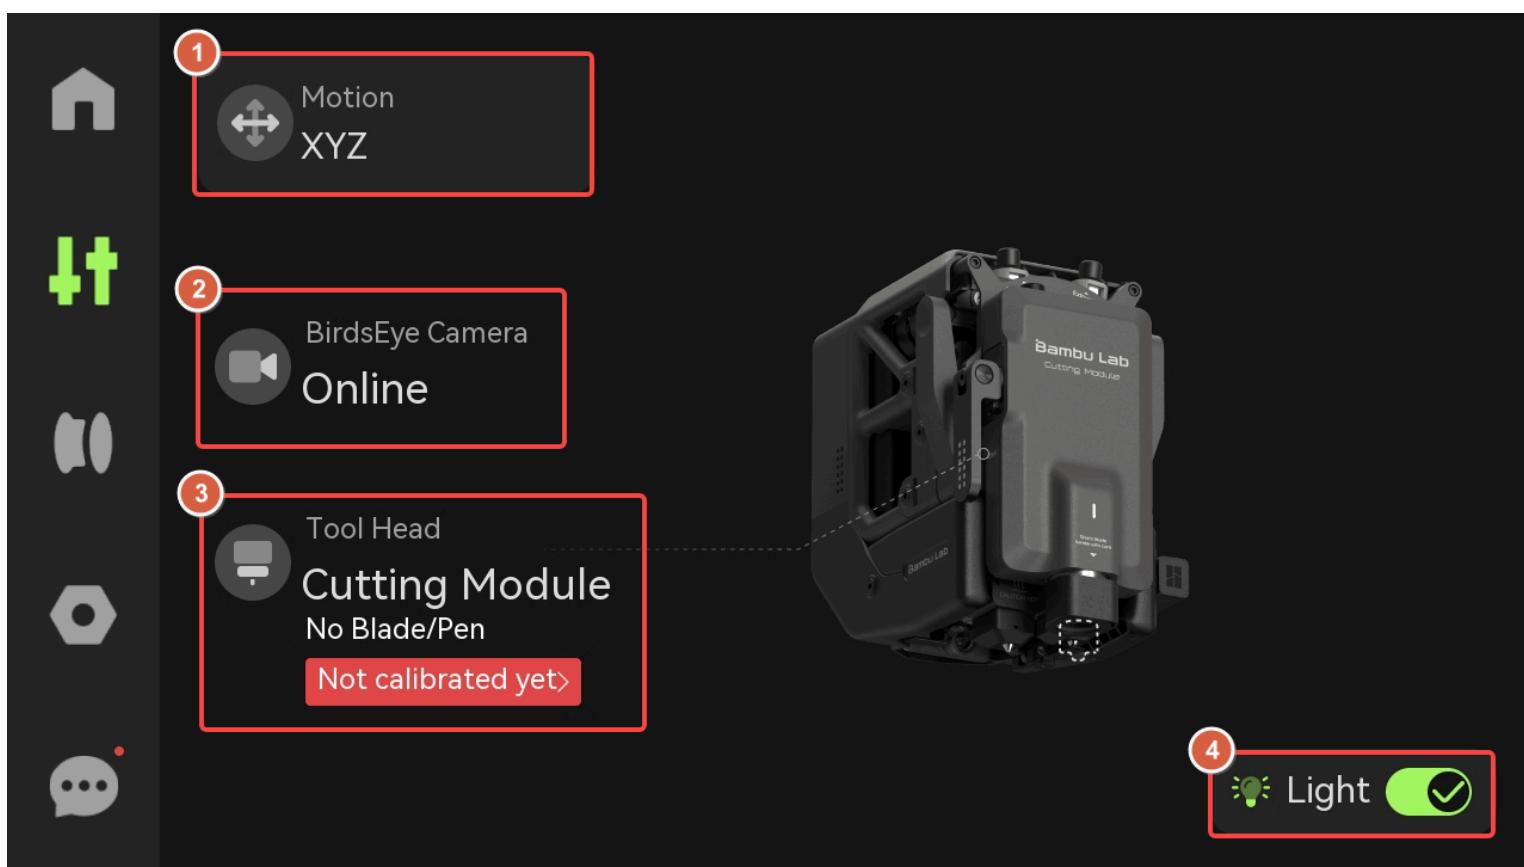


1. Motion

- ▶ **Toolhead:** Click +1 or +10 to control the toolhead movement in the X-axis and Y-axis.
- ▶ **Heatbed:** Click the 1 or 10 move button to raise or lower the heatbed.

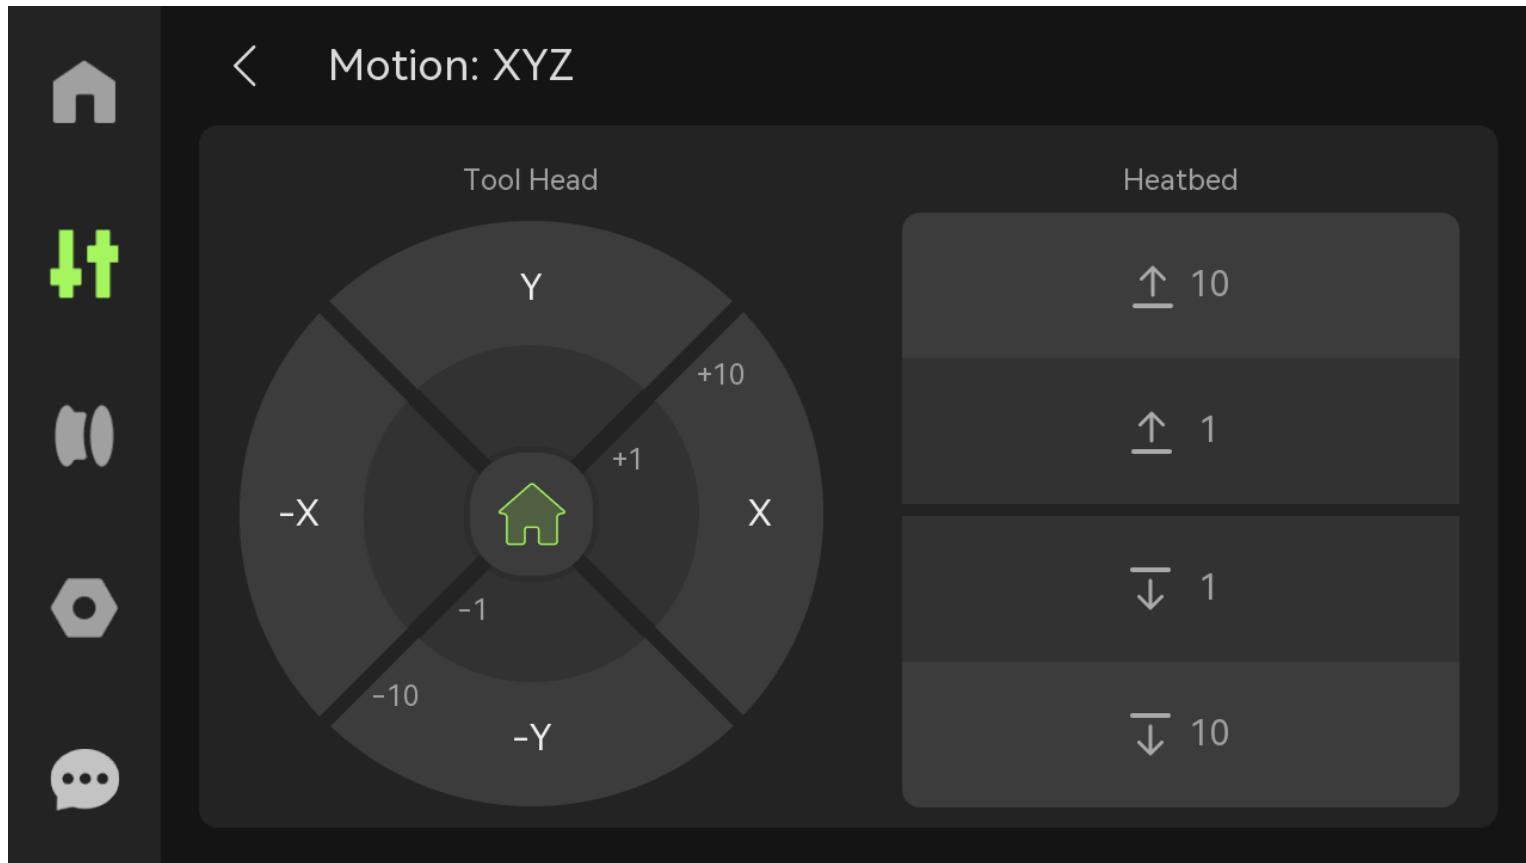


2. BirdsEye Camera

- ▶ If the birdseye camera is not installed, the birdseye camera icon will not be displayed.
- ▶ If it is installed but not setup, it will display "Not set up yet".

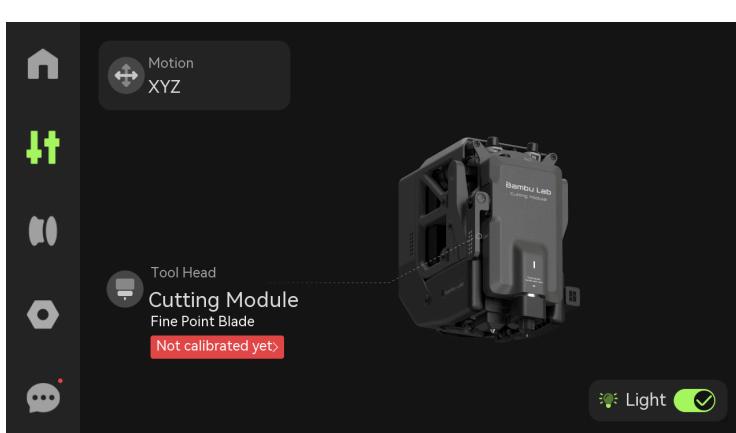


Icon not displayed

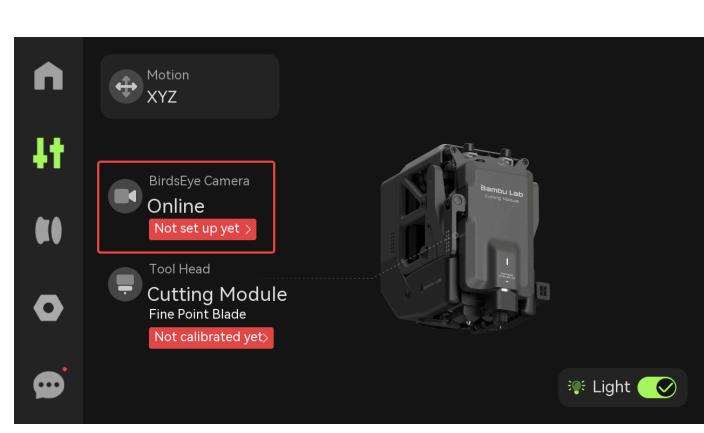


Not set up yet

3. Toolhead

Displays the status of the cutting module and the type of module installed. If it is not initialized, it will display "Not calibrated yet".

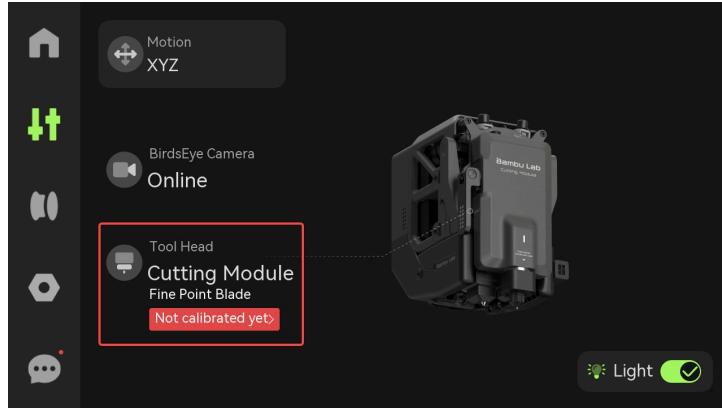


Fine Point Blade

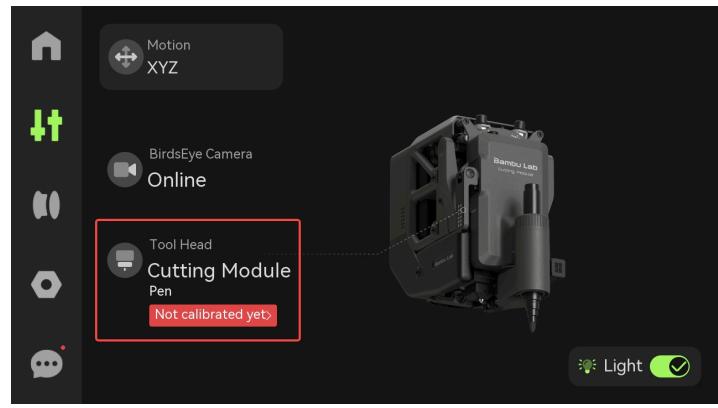


Pen

4. Light

Click this button to control the LED light.

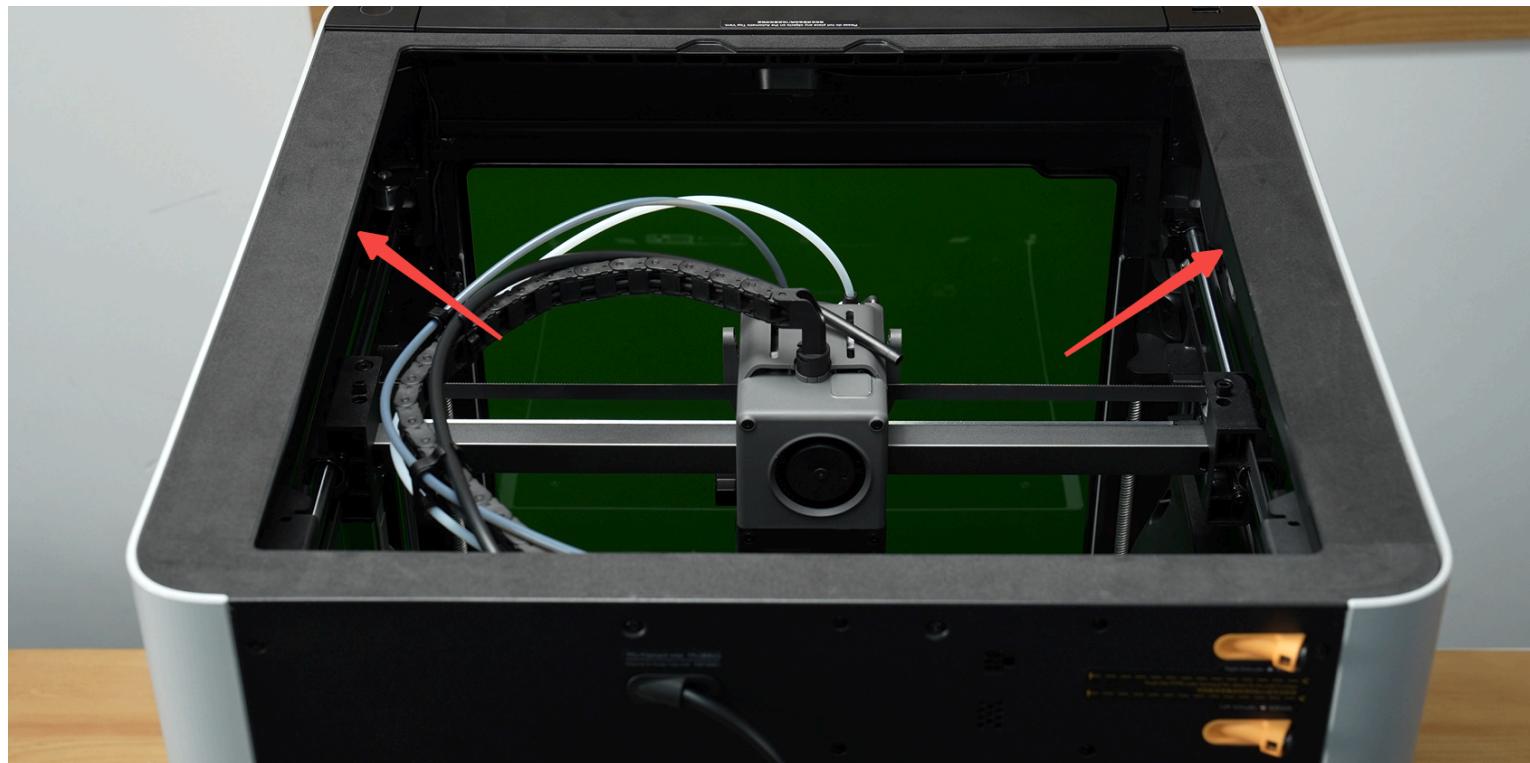


Settings

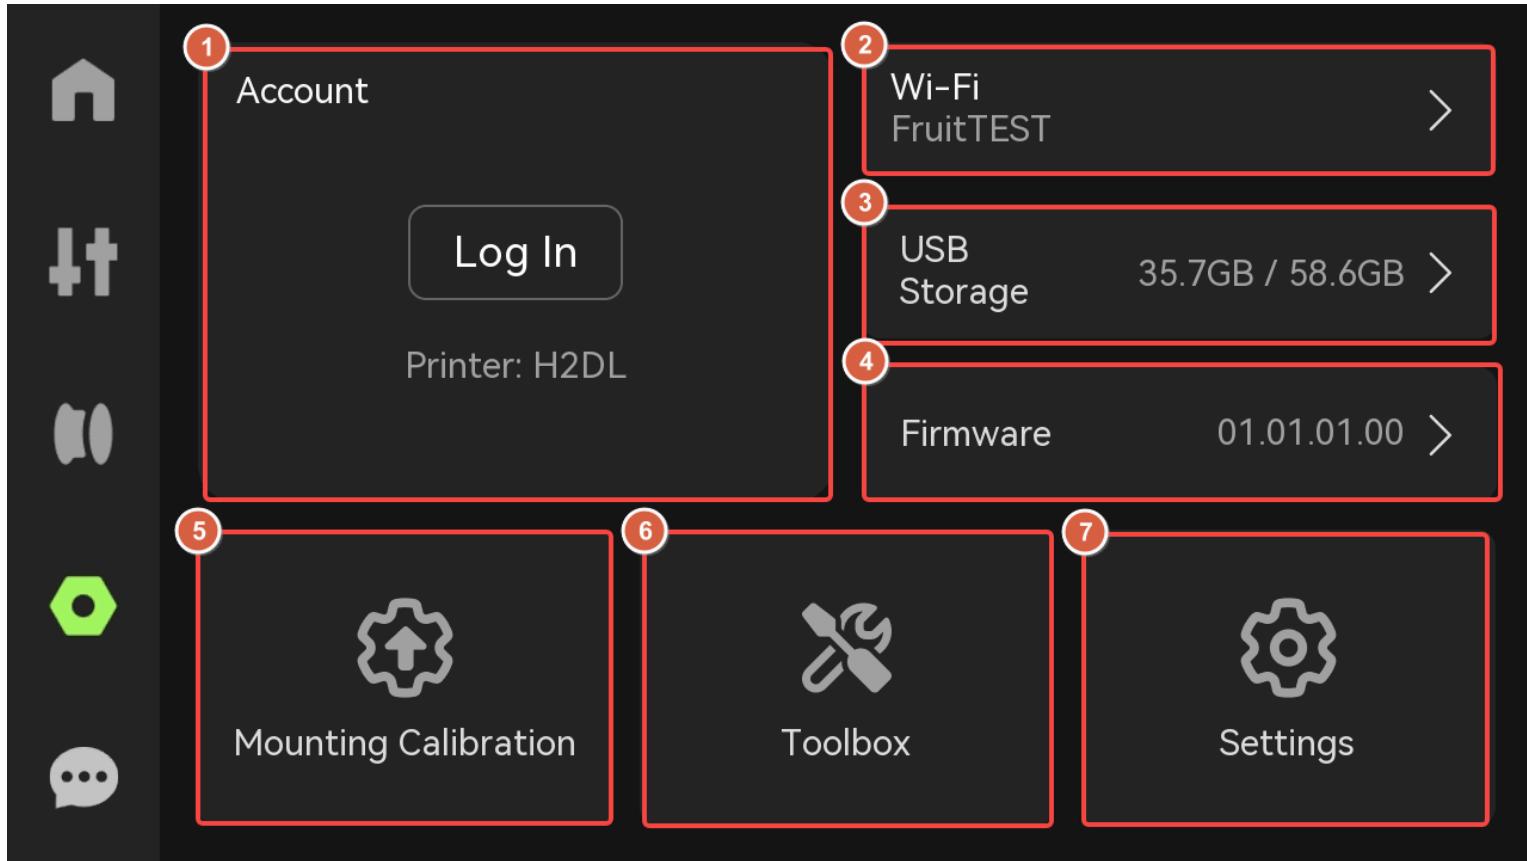


1. Account

Open Bambu Handy and scan the code to access the account.

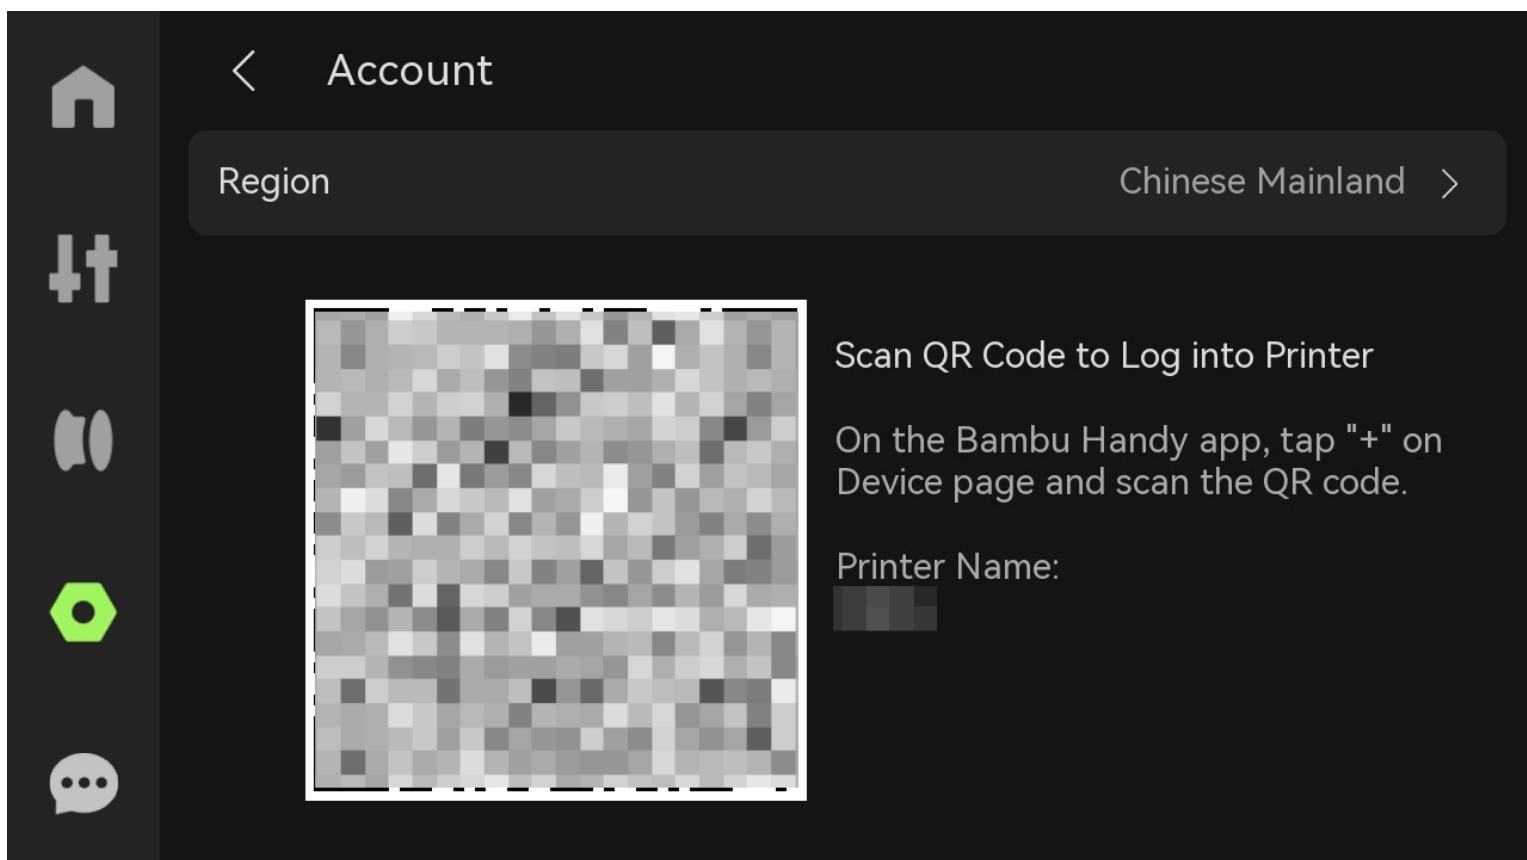

2. Wi-Fi

Set up the WLAN, view the current network, test network, or view and add other networks.

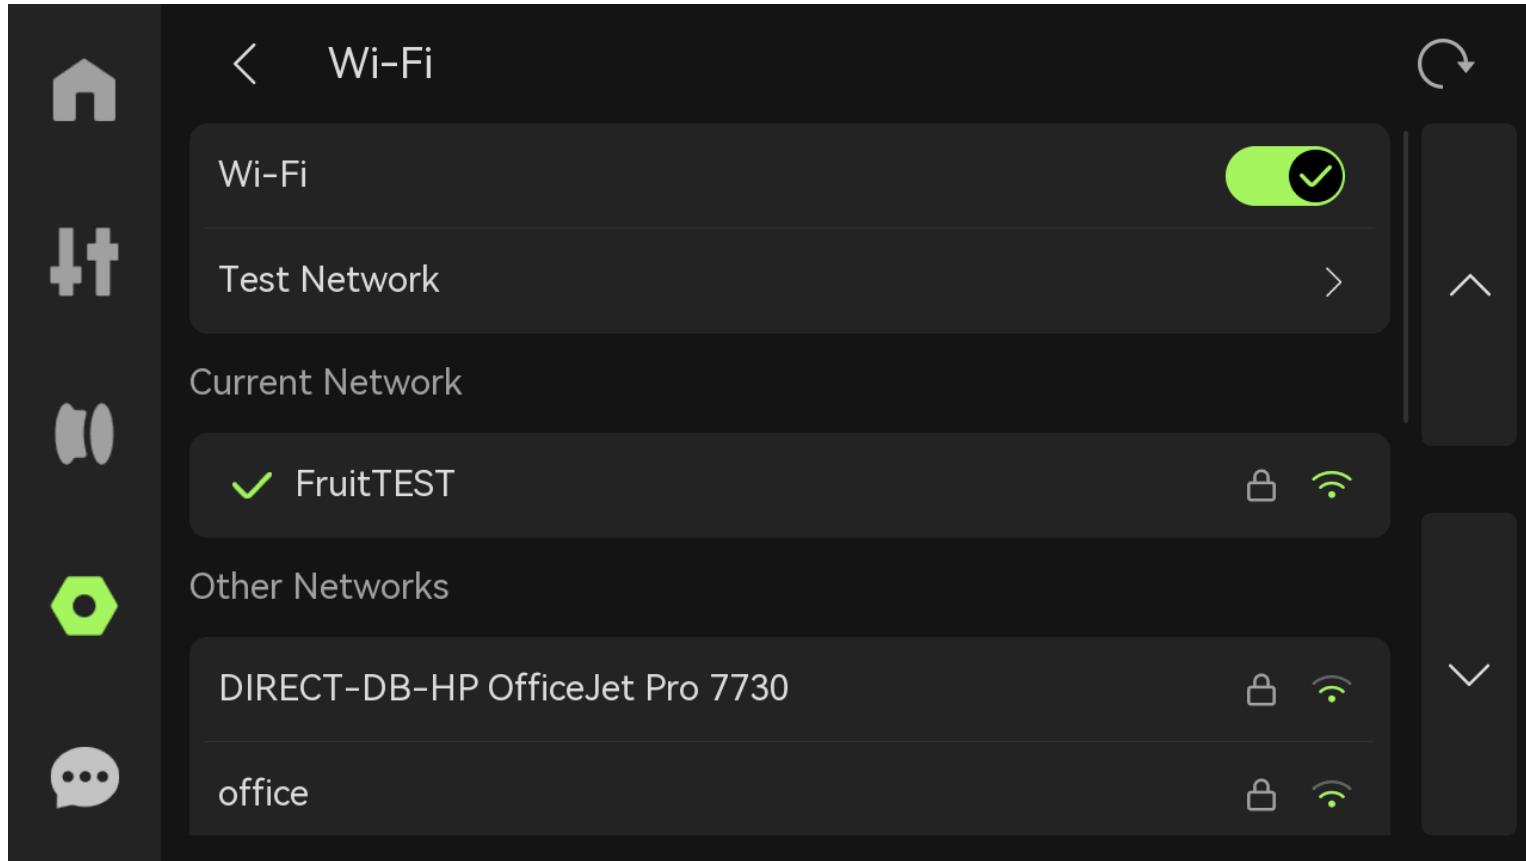

3. USB Storage

- ▶ **Storage:** Display the used capacity and maximum capacity of the USB flash drive.
- ▶ **Eject:** Click "Eject" to eject the USB drive safely.
- ▶ **Format external storage:** Once reset, the storage cannot be restored.

For USB flash drive specifications and usage recommendations, please refer to: [Specifications and Usage](#)
[Recommendations of H2D USB Flash Drives](#).

< USB Storage

Storage

35.7GB / 58.6GB

Eject

>

Format the external storage

>

4. Firmware

View the current version of the device and historical versions, or perform offline upgrades. If the firmware needs to be updated, the "Update" button in the upper right corner will light up.

< Firmware

Update

Bambu Lab H2D

01.01.01.00

AMS 2 Pro (1)

02.00.19.47

Air Pump

00.00.10.27

Cutting Module

00.00.09.32

History Versions

>

Update Offline

>

5. Mounting Calibration

Every time the printer is powered on again, a cutting module mounting calibration is required to help the cutting module return to the center. To this end, a cutting platform must be placed on the hot bed to ensure the accuracy of the calibration process.

< Cutting Module Mounting Calibration

1/2 Install the Cutting Module

 Slide in the Cutting Module

 Plug in the Cutting Connector

 Install the Blade

 Fasten the Quick-release Lever

 This item requires you to check manually



Next

6. Toolbox

< Toolbox

Setup

Cutting Module Mounting Calibration >

BirdsEye Camera Setup >

Maintenance

Laser Module Cleaning >

▶ **Cutting Module Mount Calibration:** Same as above “Mounting Calibration”.

< Cutting Module Mounting Calibration

1/2 Install the Cutting Module

 Slide in the Cutting Module

 Plug in the Cutting Connector

 Install the Blade

 Fasten the Quick-release Lever

 This item requires you to check manually



Next

- ▶ **BirdsEye Camera Setup:** The BirdsEye camera is calibrated at the factory and can be used immediately. However, due to factors such as transportation or prolonged use, the calibration parameters of the BirdsEye camera may gradually become less effective. If you are dissatisfied with the precision of laser processing, you can trigger the BirdsEye Camera Setup. During the setup process, it is necessary to use the four markers on the heatbed. Therefore, in this step, no other items should be placed on the heatbed, and it is essential to ensure that the markers are visible to the BirdsEye camera to improve the accuracy of the imaging.

< BirdsEye Camera Setup

1/4 Install the BirdsEye Camera

 Connect the BirdsEye Camera cable

 Make sure the BirdsEye Camera locked well

 This item requires you to check manually




Next

- ▶ **Laser Module Cleaning:** Regular cleaning of the laser module prevents the accumulation of powder and debris, ensuring the normal operation of the equipment and extending its service life. The printer will assess the degree of contamination of the printer based on the total engineering time and laser task type in Bambu Suite. The length of the green progress bar on the

left side of the screen will decrease as the laser module is cleaned; if the progress bar turns red and displays "Cleaning Required Immediately", cleaning is required. Specific tutorials can be obtained through the QR code on the right. Please refer to: [Regular maintenance recommendations for 10w laser module](#).



7. Settings

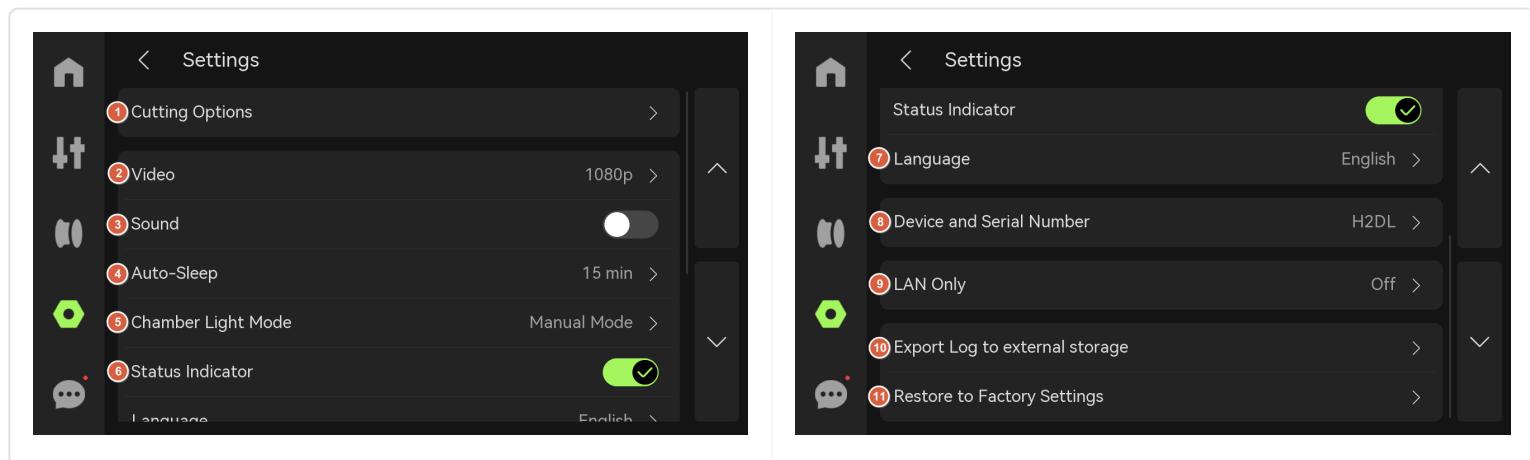

1. Cutting Options:

Open Door Detection: If open door detection is enabled, if the door is opened during a cutting task, a notification will be issued or the current task will be paused.

< Cutting Options

Open Door Detection

Configures the response when the door is opened during a task.

Notification

Pause



2. **Video:** Choose to turn the video function on or off.

< Settings

Cutting Options

Video

Sound

Auto-Sleep

Chamber Light Mode

Status Indicator

Language

< Video



1080p

Off




3. **Sound:** If you turn on the option, the printer will emit a sound when it is turned on, when printing starts, and when printing ends.

4. **Auto-Sleep:** Select the length of time the printer will automatically sleep.

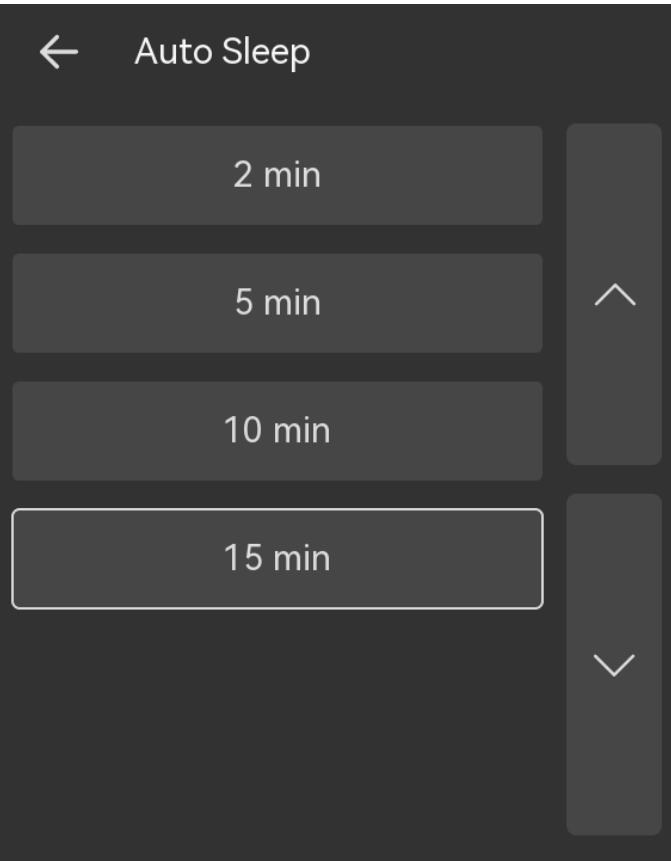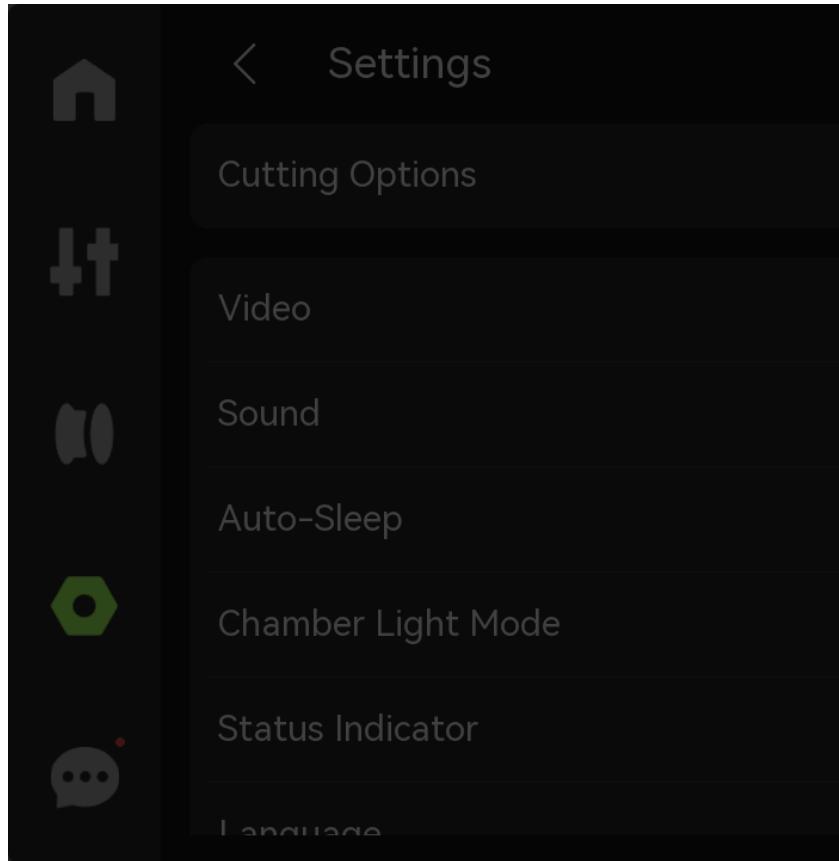

5. **Chamber Light Mode:** You can choose manual mode or energy-saving mode according to actual needs.

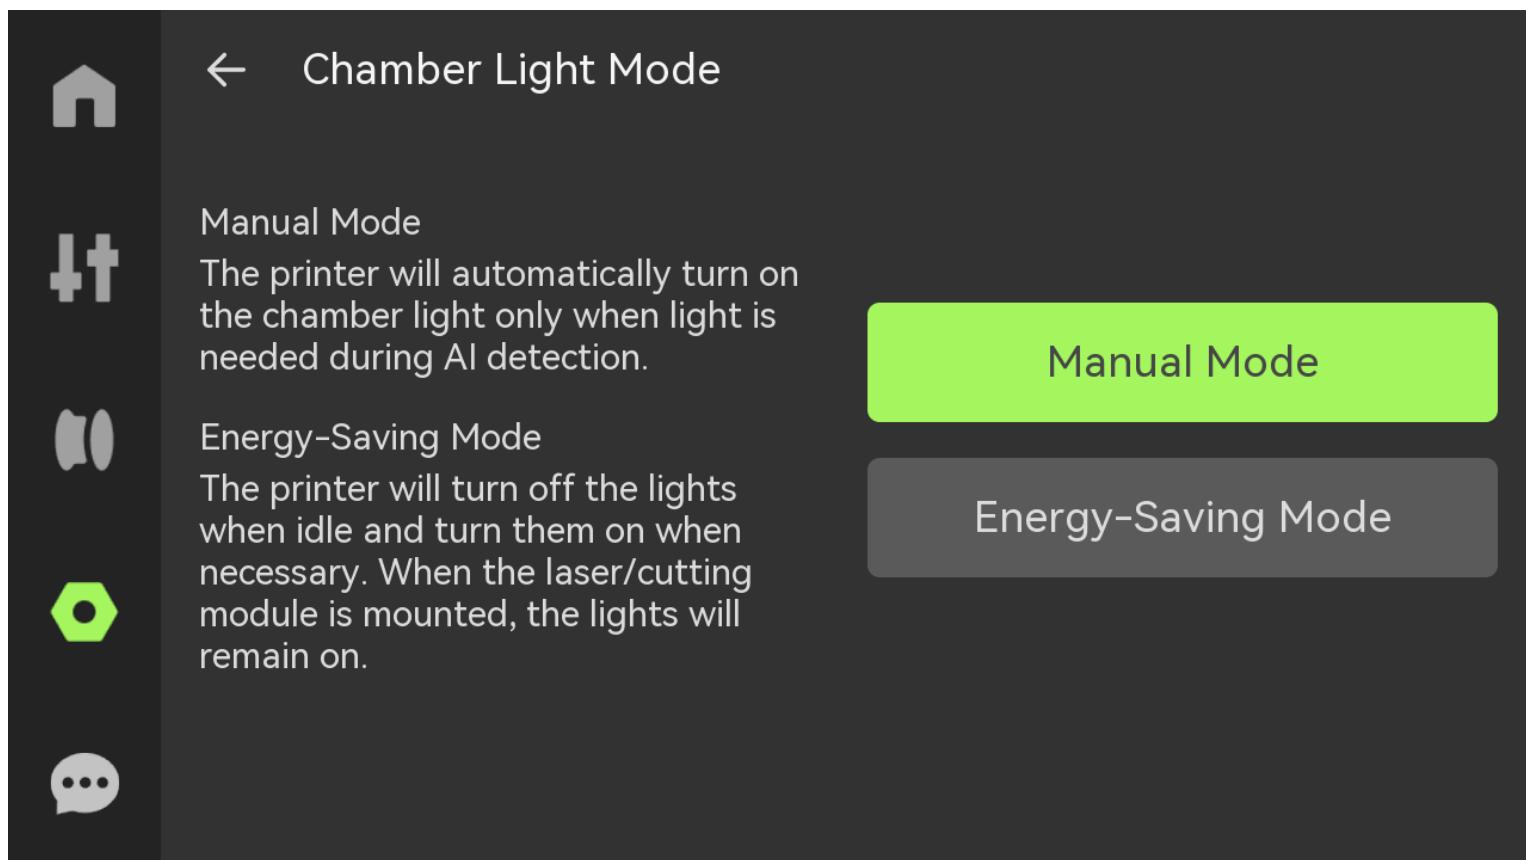

6. **Status Indicator:** Used to indicate the printer's health status and print task status.



7. **Language:** Select the language in which the printer screen is displayed.

Settings

Status Indicator

Language

Device and Serial Number

LAN Only

Export Log to external storage

Restore to Factory Settings

Choose Language

Deutsch

English



Español

Français


Magyar nyelv

Italiano


8. **Device and Serial Number:** View the device name, device usage time, and serial number. Choose whether to join the user experience improvement program. Once enabled, the machine data (such as printing time, error information, etc.) can be uploaded to the official backend for subsequent statistics and improvements.

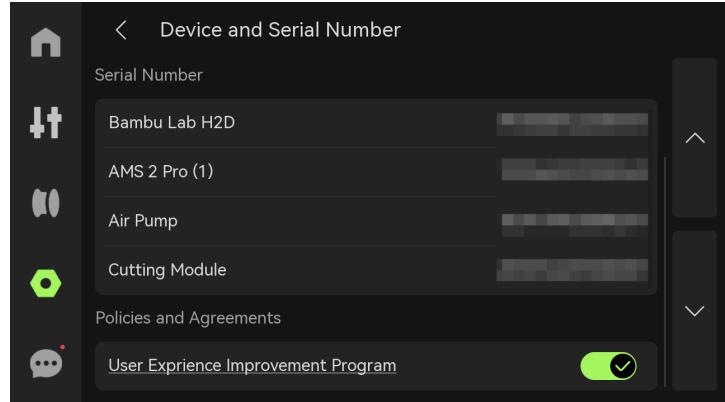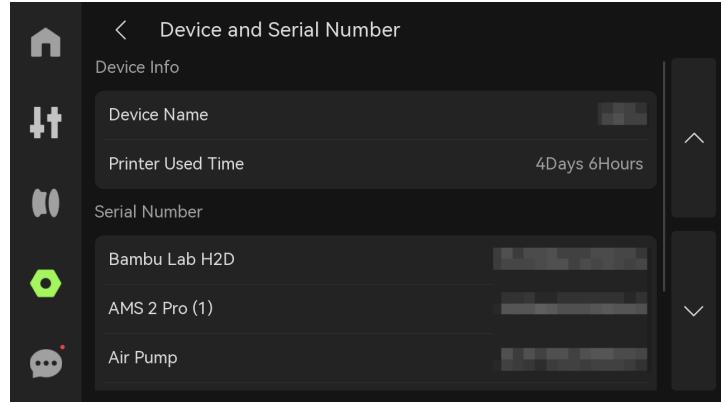


9. **LAN Only:** When turned on, the printer can only be connected and accessed within the local network and cannot be accessed or controlled remotely over the Internet. If multiple devices are connected via the same LAN, live view or data sharing is possible.

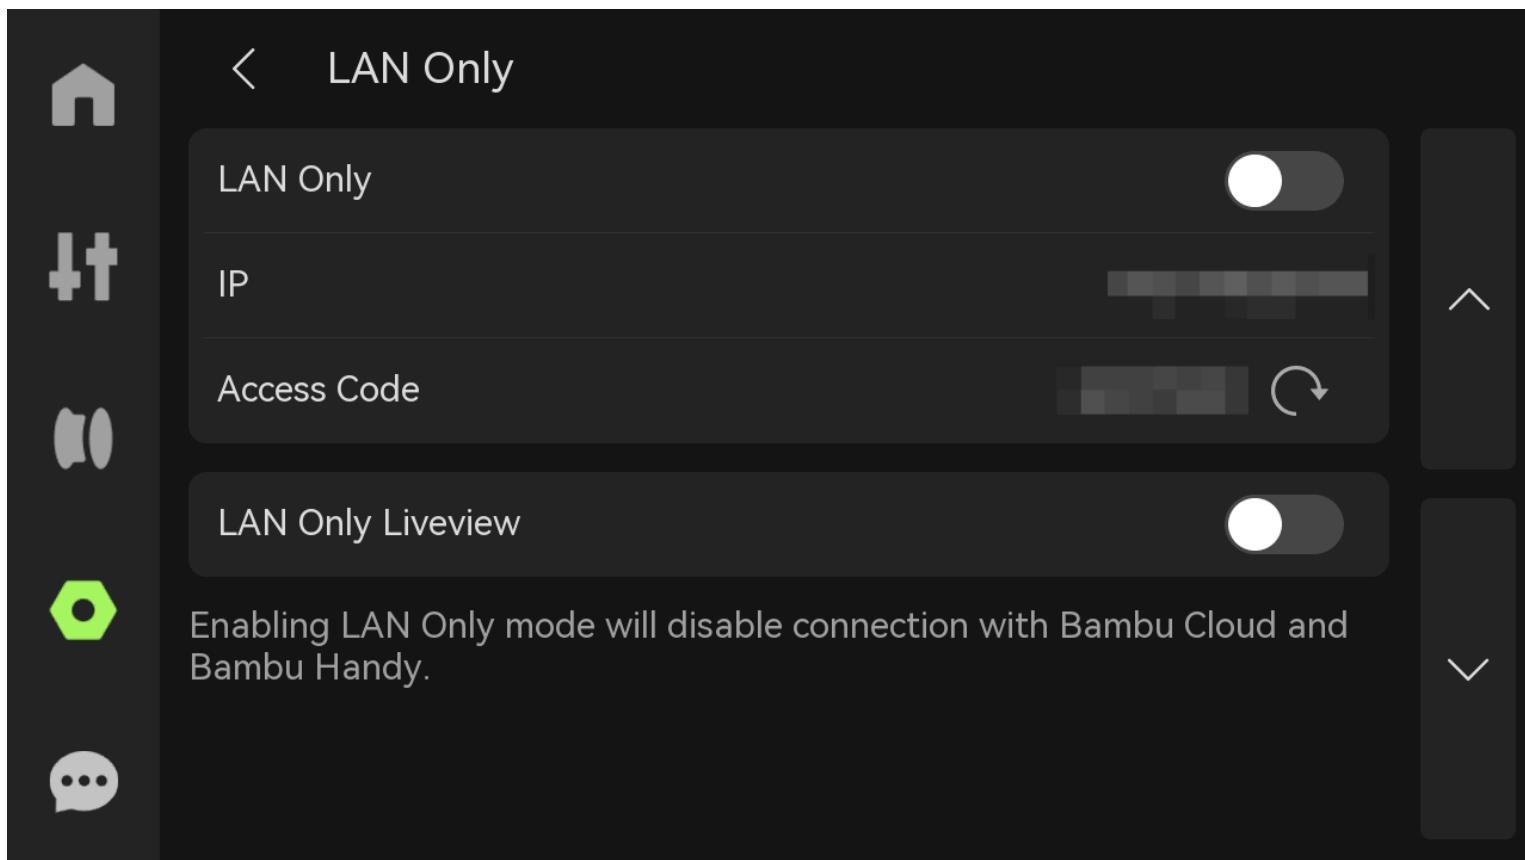

10. **Exportar registro a almacenamiento externo:** elija si desea exportar todos los registros, fotos clave (para determinar problemas de micro radar y espaguetis) y código G (para determinar problemas de calidad de impresión) según sus necesidades.

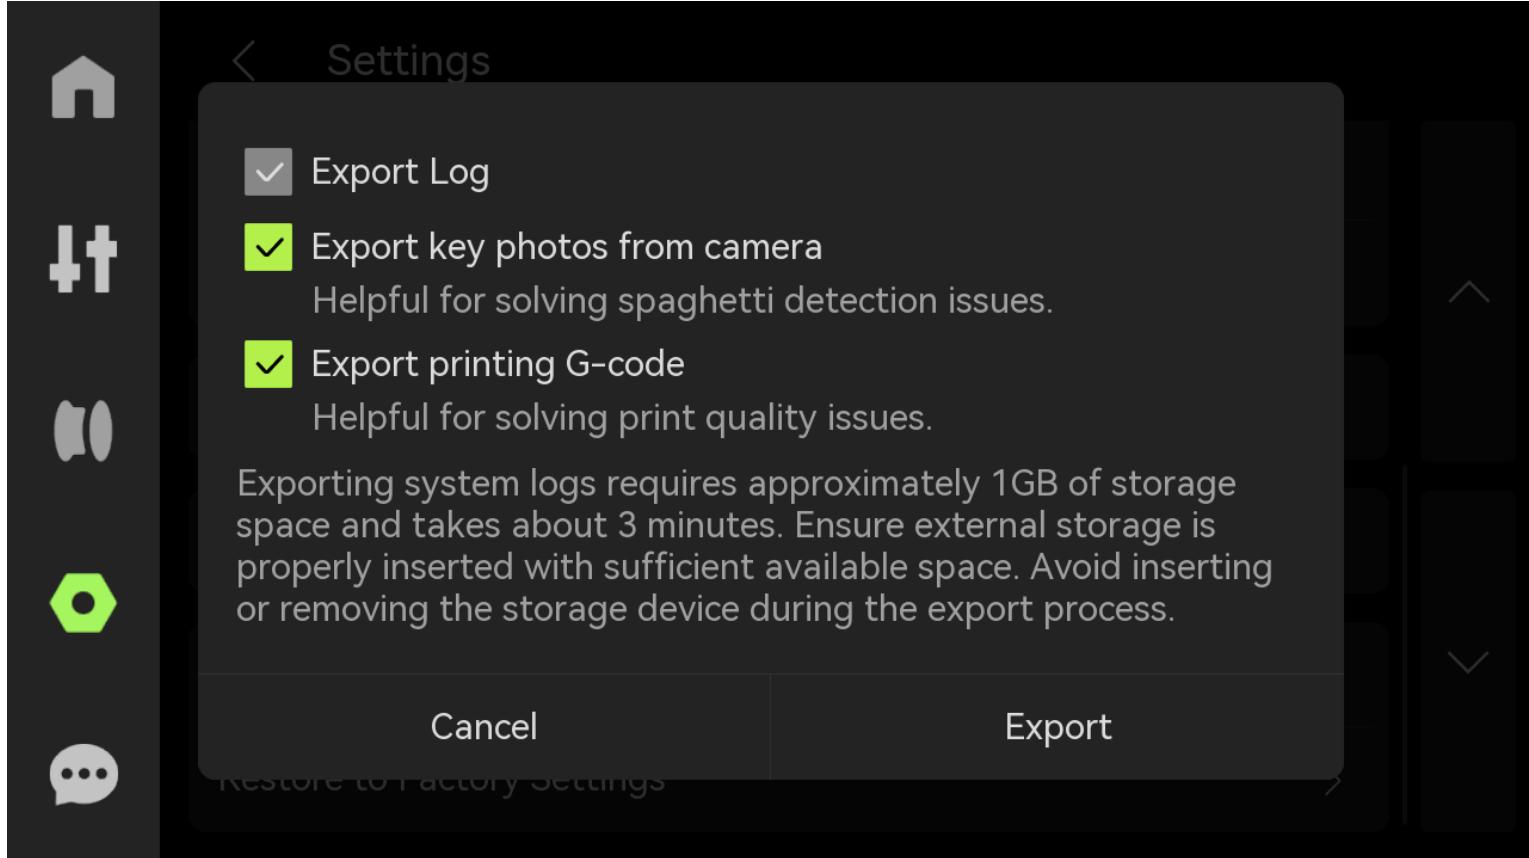

11. **Restaurar la configuración de fábrica:** Restablece la impresora a la configuración de fábrica. Una vez restablecida, no se puede restaurar la configuración.

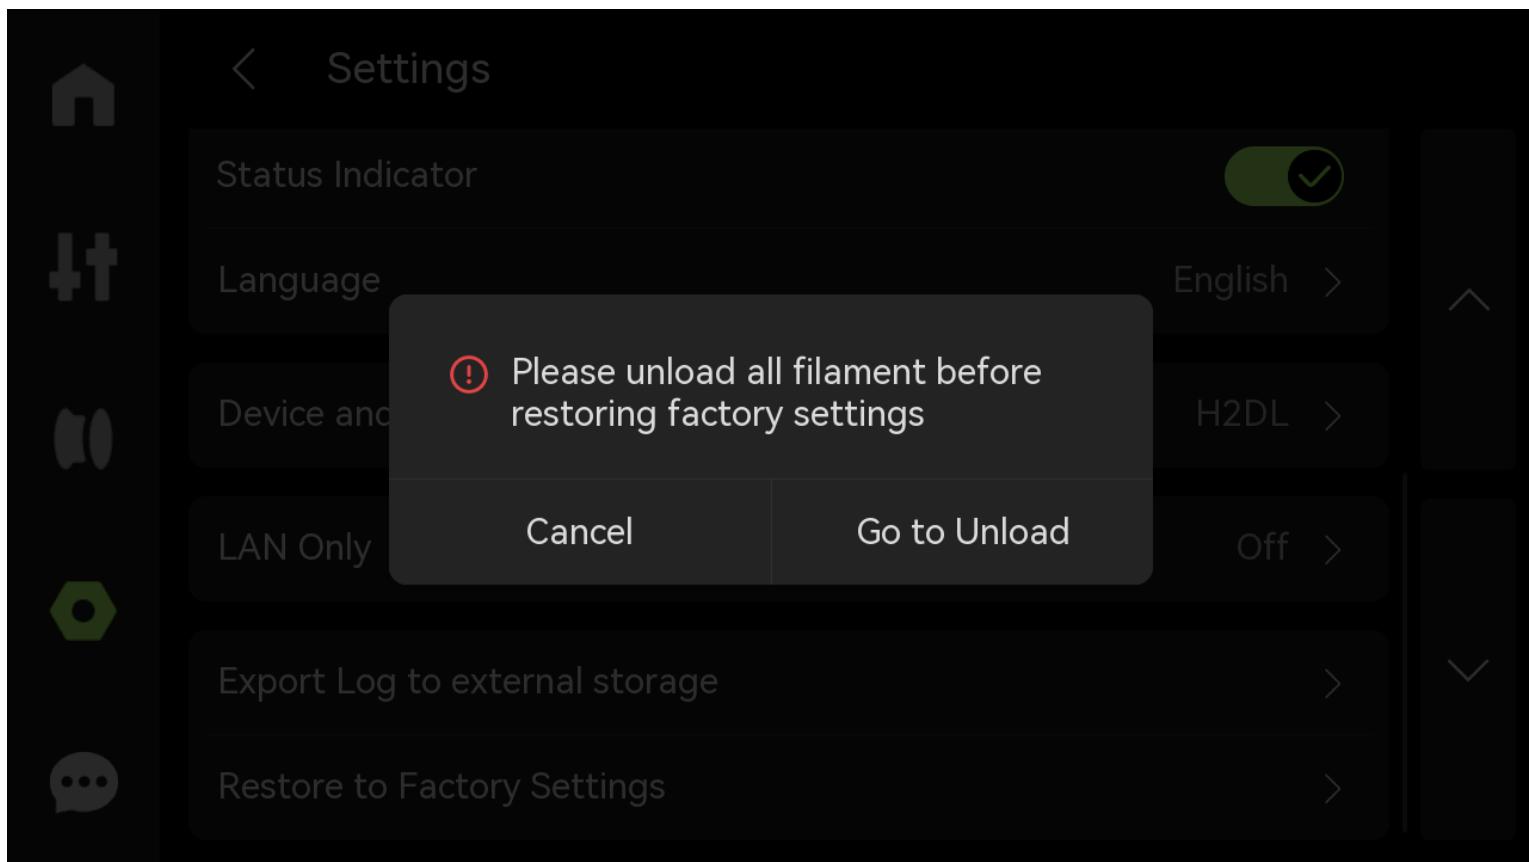

HMS

Si hay un problema con la impresora, se mostrará un mensaje de error aquí.



The Cutting Module needs calibration to get the tool position. Please perform the mounting calibration before use. (about 2-4 minutes)

[Go to Calibration](#)

The Cutting Module needs calibration to get the tool position. Please perform the mounting calibration...
[0500-0400-0002-0037 111717]

Notas finales

Esperamos que la guía detallada proporcionada haya sido útil e informativa.

Si esta guía no resuelve su problema, envíe un [ticket técnico](#). Responderemos a sus preguntas y le brindaremos asistencia.

Si tiene alguna sugerencia o comentario sobre esta wiki, deje un mensaje en la sección de comentarios. ¡Gracias por su apoyo y atención!